
NOVA LUCE

9236209

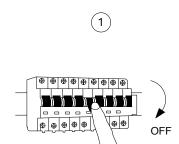


Turn off the general switch






Drill holes & apply plastic anchors With screws

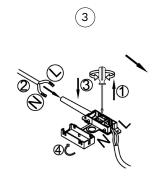


Connect the wires

(4)




Apply the side screws

(5)

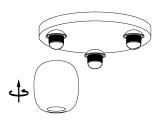

By rotating apply the glass

(6)



Turn on general switch

