



Assembly Instruction

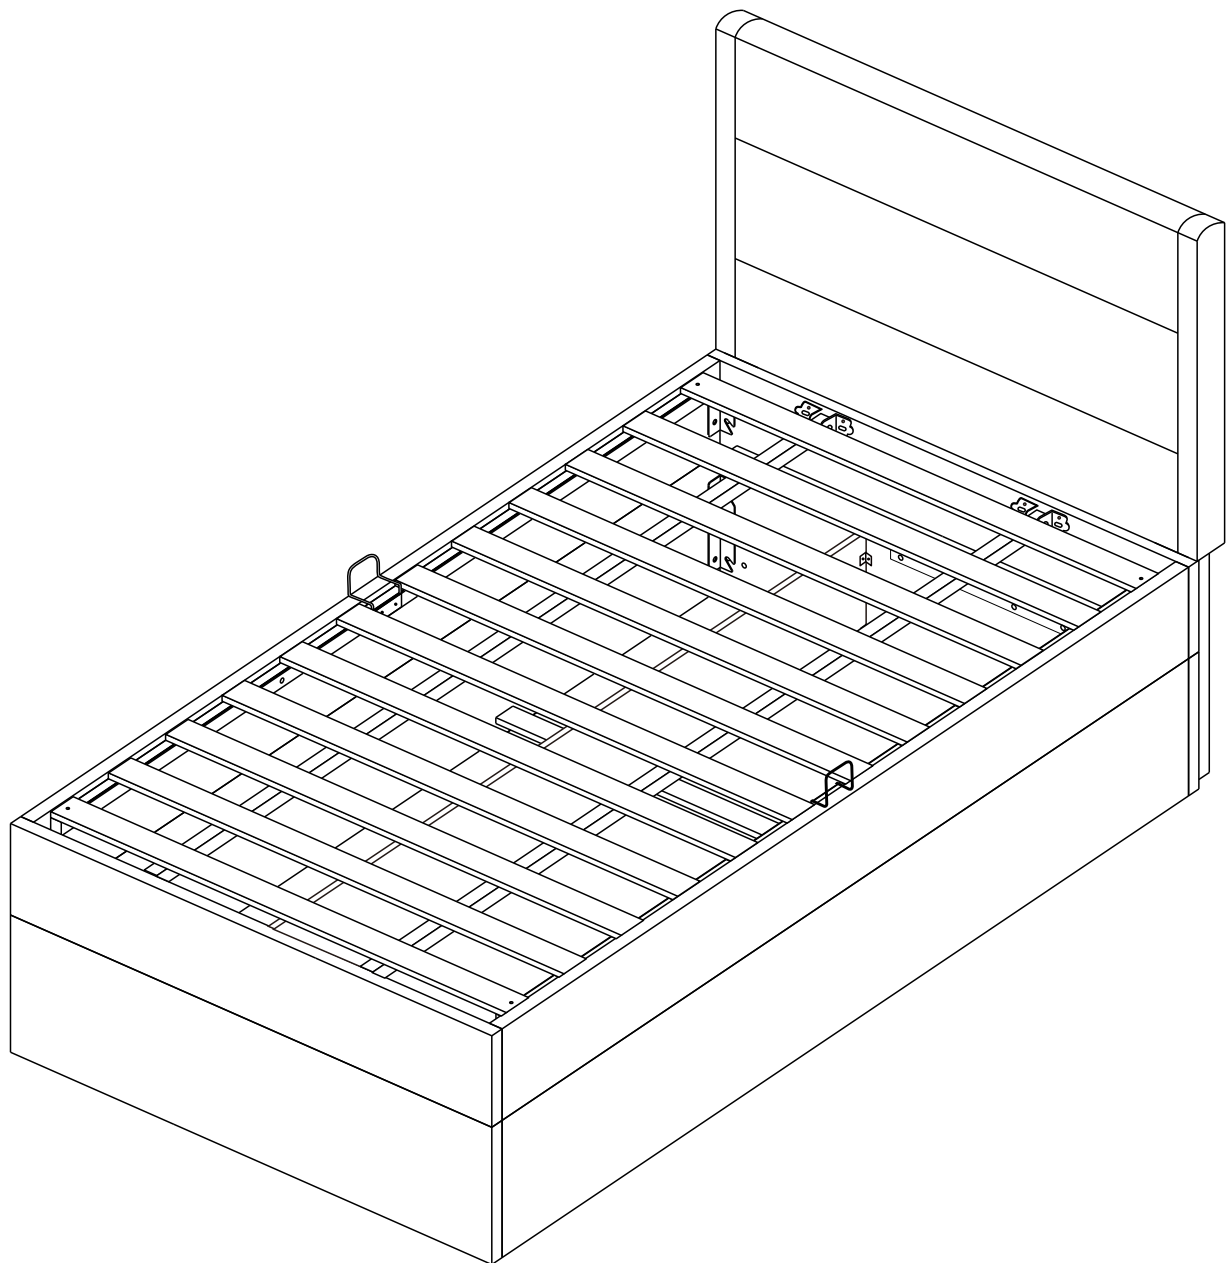






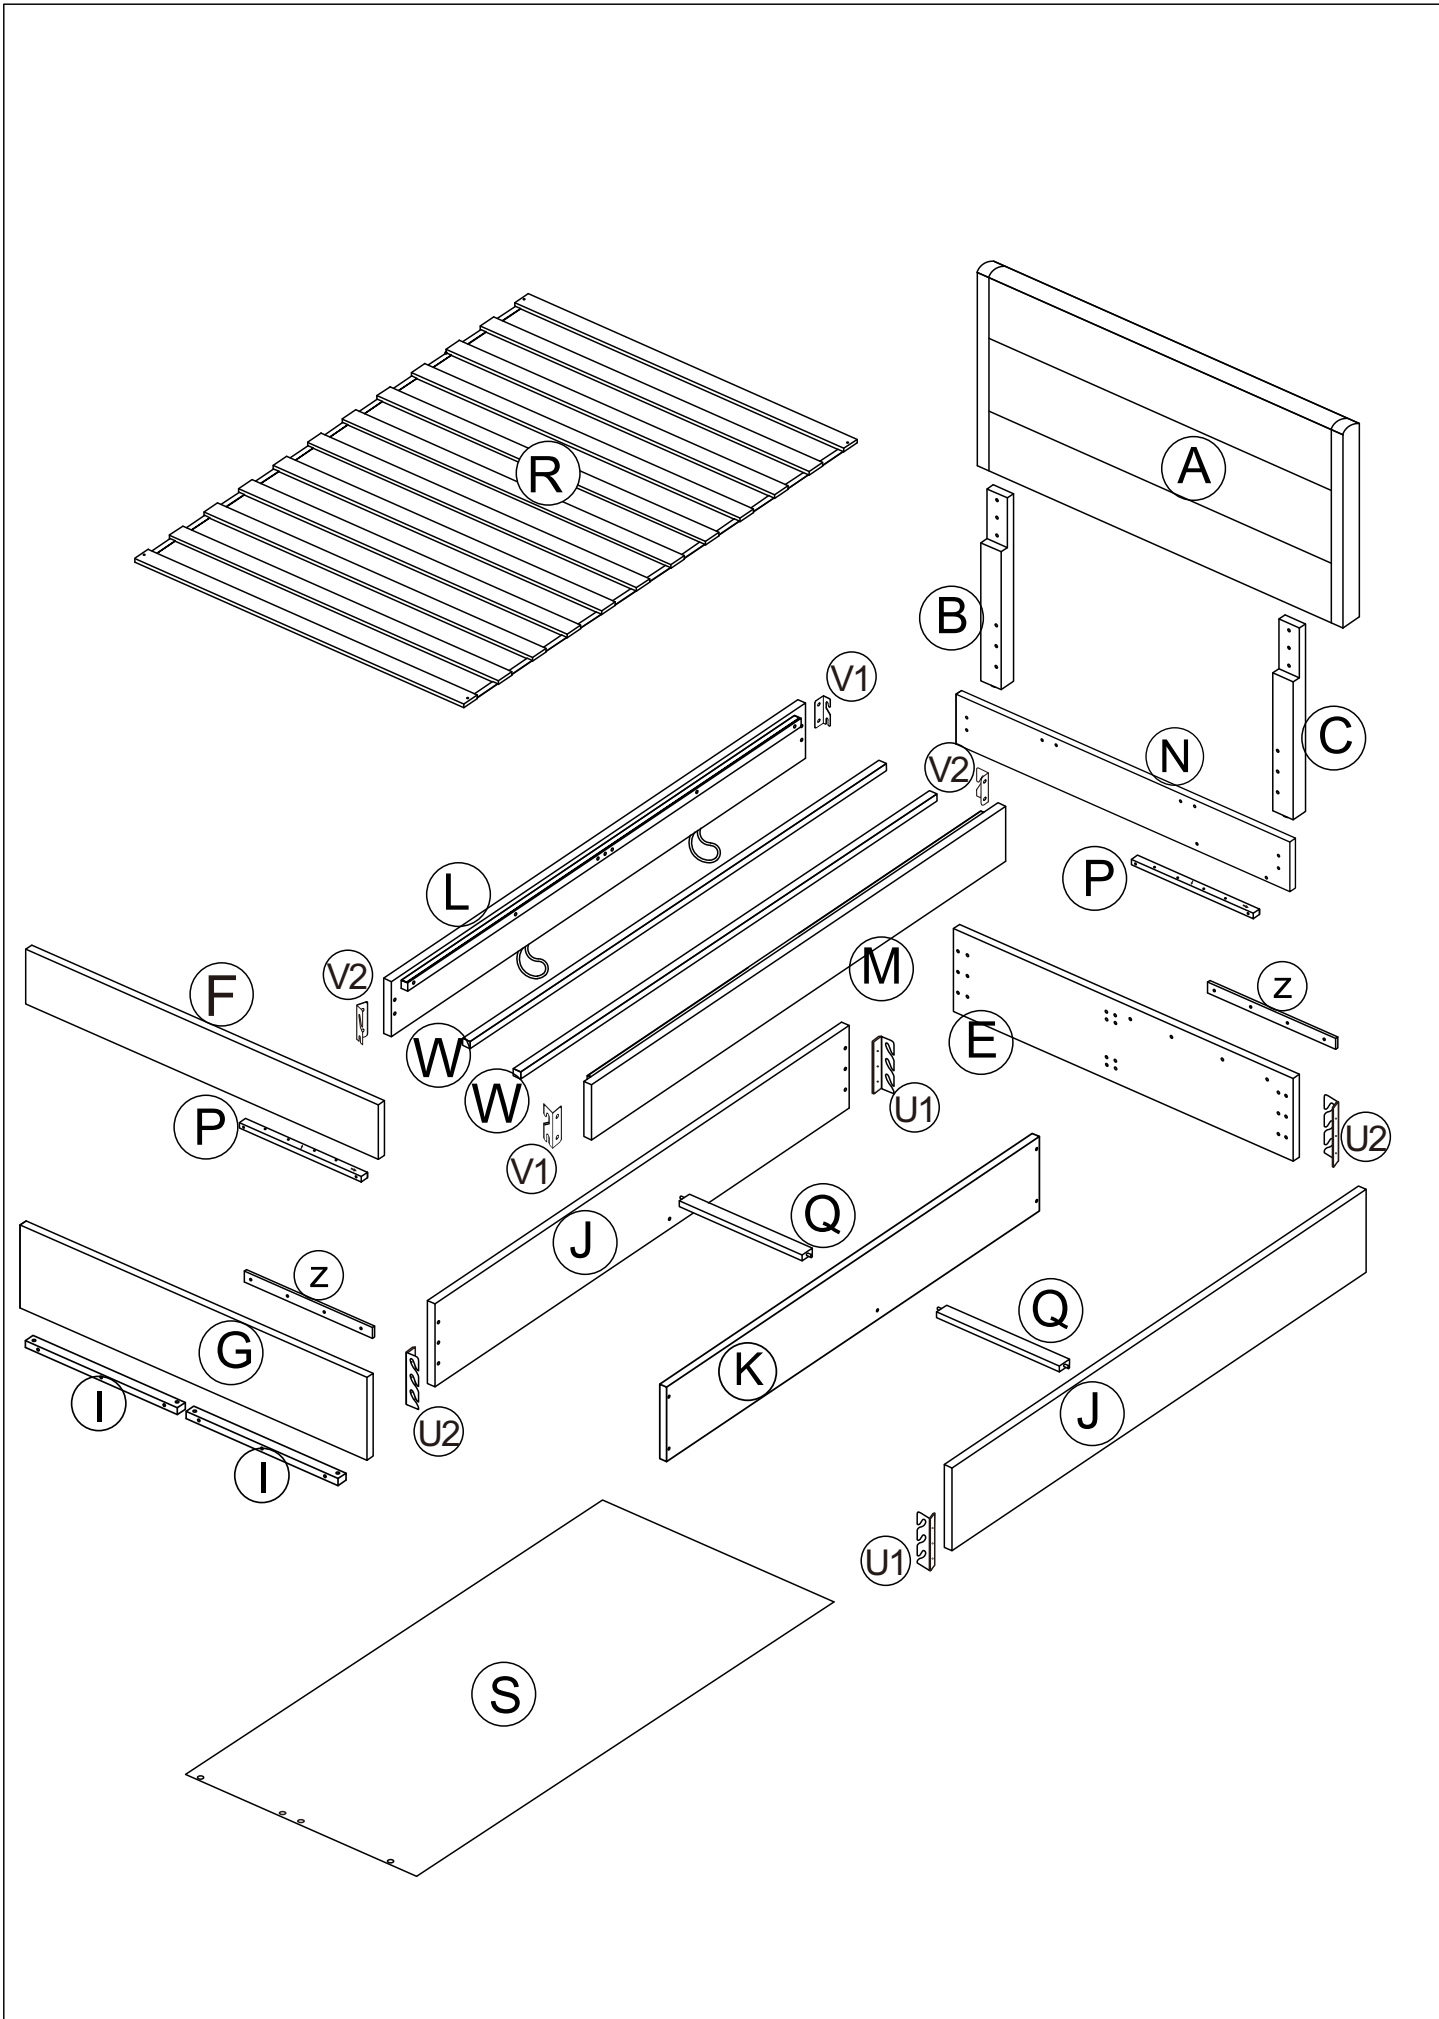





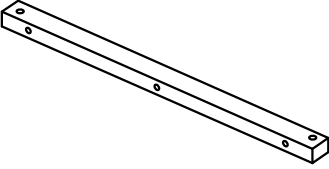

SKU: WF319428/WF319429/WF319430

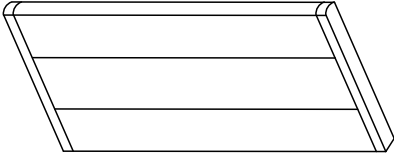




BED FRAME
(Double)

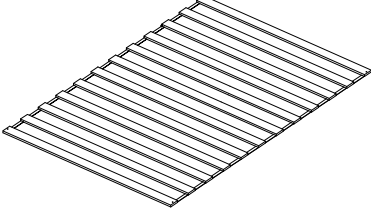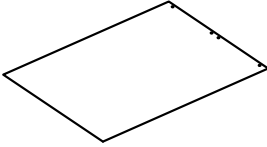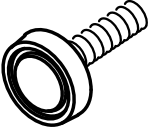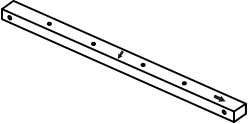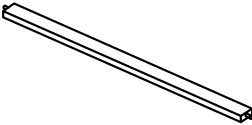







Parts List for WF319428

<p>A</p>  <p>1PC</p>	<p>B</p>  <p>1PC</p>
<p>C</p>  <p>1PC</p>	<p>R</p>  <p>1PC</p>
<p>S</p>  <p>1PC</p>	<p>T</p>  <p>6PCS</p>
<p>P</p>  <p>2PCS</p>	<p>Q</p>  <p>2PCS</p>
<p>Y</p>  <p>4PCS</p>	<p>U1</p>  <p>2PCS</p>
<p>U2</p>  <p>2PCS</p>	<p>V1</p>  <p>2PCS</p>
<p>V2</p>  <p>2PCS</p>	<p>I</p>  <p>2PCS</p>
<p>Z</p>  <p>2PCS</p>	







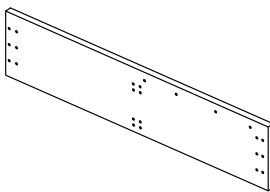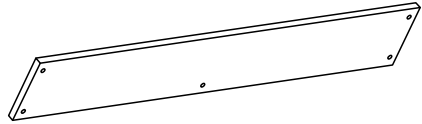



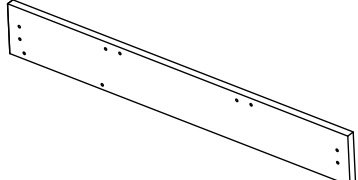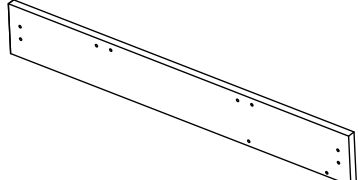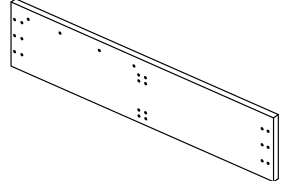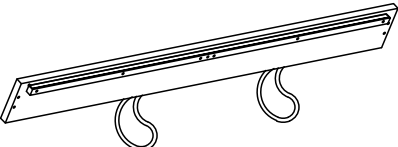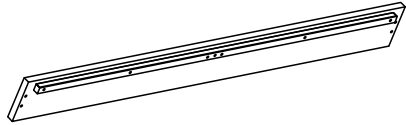
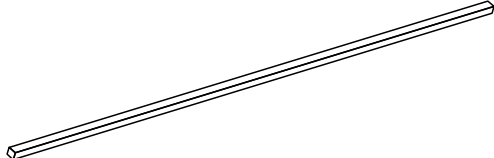




Parts List for WF319429

<p>E</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">1PC</div>	<p>J</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">2PCS</div>
<p>K</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">1PC</div>	

Parts List for Wf319430

<p>F</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">1PC</div>	<p>N</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">1PC</div>
<p>G</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">1PC</div>	<p>L</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">1PC</div>
<p>M</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">1PC</div>	<p>W</p>  <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content; margin-left: auto;">2PCS</div>

Hardware List for WF319428
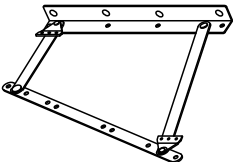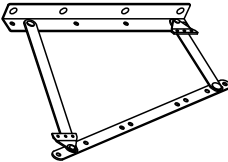
<p>①</p>  <p>M8*50mm</p> <p>12PCS</p>	<p>②</p>  <p>M8*20mm</p> <p>40PCS</p>
<p>③</p>  <p>M6*50mm</p> <p>10PCS</p>	<p>④</p>  <p>M6*25mm</p> <p>16PCS</p>
<p>⑤</p>  <p>M6*15mm</p> <p>24PCS</p>	<p>⑥</p>  <p>M4*25mm</p> <p>12PCS</p>
<p>⑦</p>  <p>M8</p> <p>52PCS</p>	<p>⑧</p>  <p>Ø19mm</p> <p>52PCS</p>
<p>⑨</p>  <p>M5</p> <p>1PC</p>	<p>⑩</p>  <p>M4</p> <p>1PC</p>
<p>⑪</p>  <p>M6*20mm</p> <p>4PCS</p>	<p>⑫</p>  <p>2PCS</p>
<p>⑬</p>  <p>4PCS</p>	<p>⑳</p>  <p>8PCS</p>
<p>X1</p>  <p>1PC</p>	<p>X2</p>  <p>1PC</p>


Installation Steps





Before your installation, please make sure that you have all the parts listed in the manual. If you find something missing please do not hesitate in contacting us.

1

TIP:

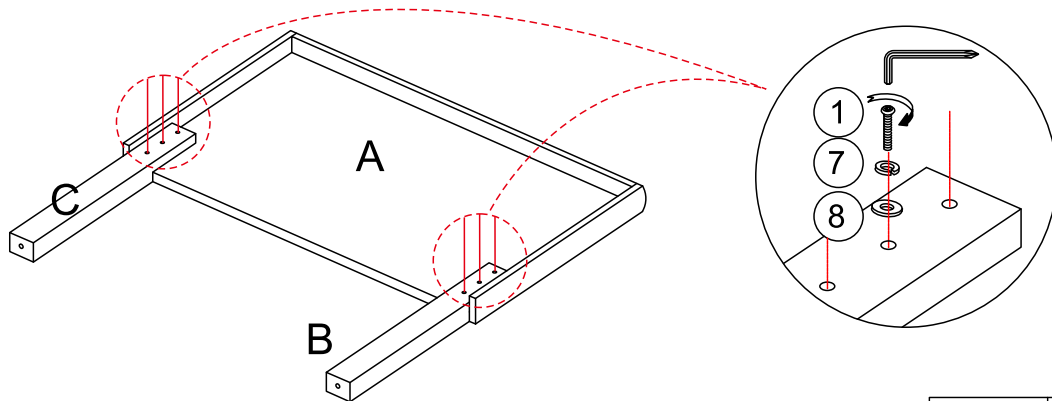please don't tighten the screws on step 1 until step 2 finished.








	① x 6PCS
	⑦ x 6PCS
	⑧ x 6PCS
	⑨ x 1PC

2


TIP:

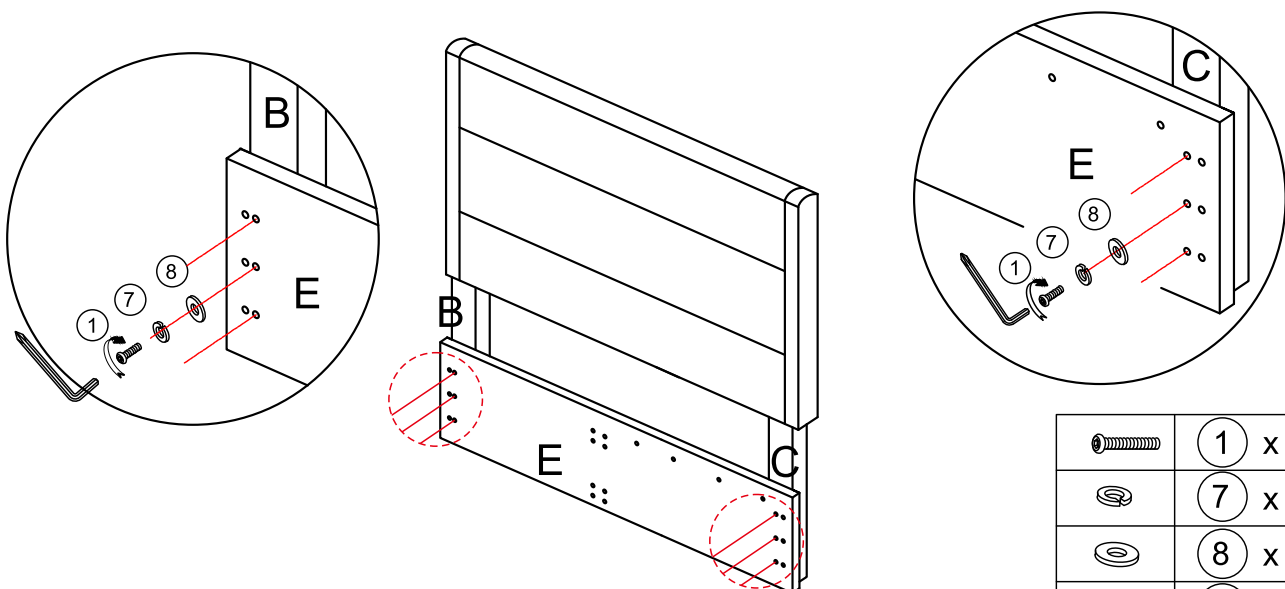

when you assemble part B please screw the 3 holes on the right side, when you assemble part C please screw the 3 holes on the left side.



	① x 6PCS
	⑦ x 6PCS
	⑧ x 6PCS
	⑨ x 1PC

3

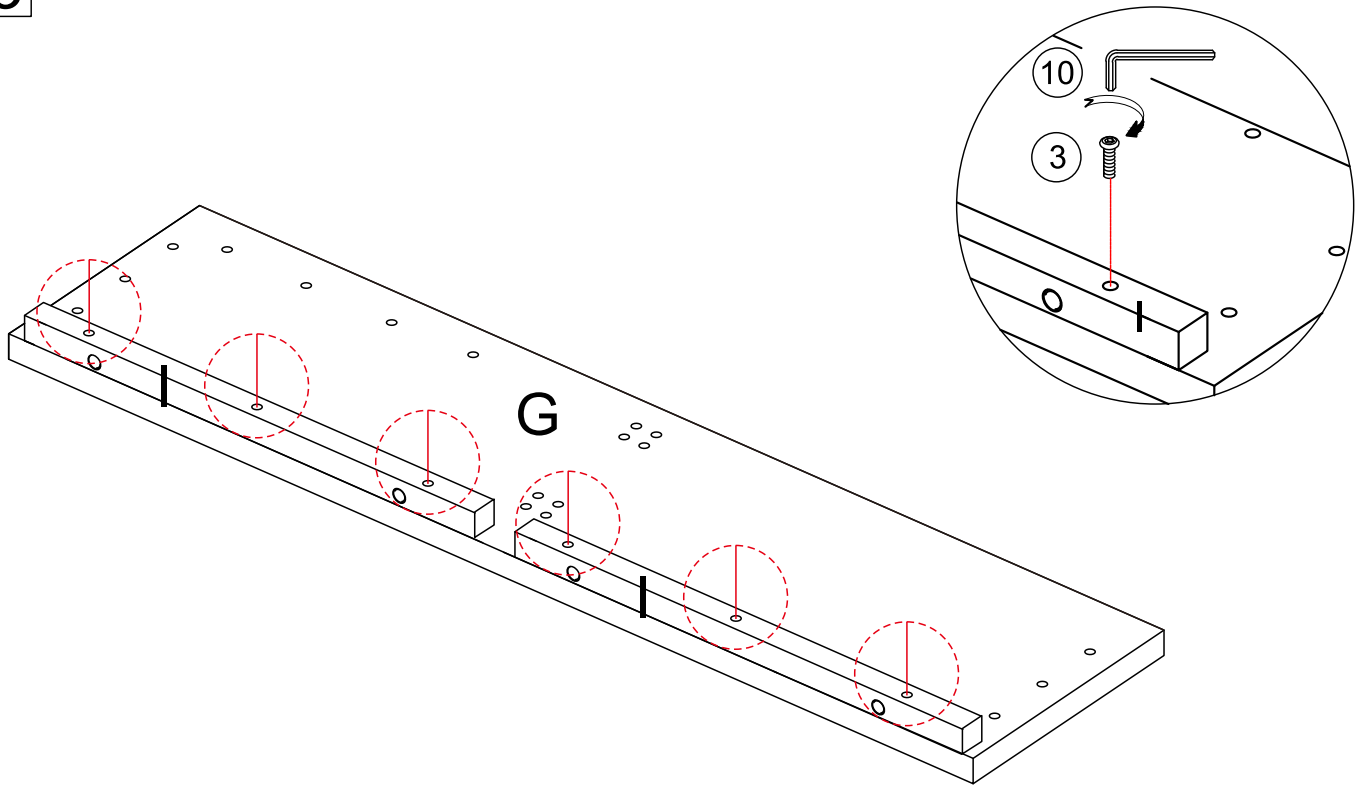








	3 x 6PCS
	10 x 1PC

4

TIP:

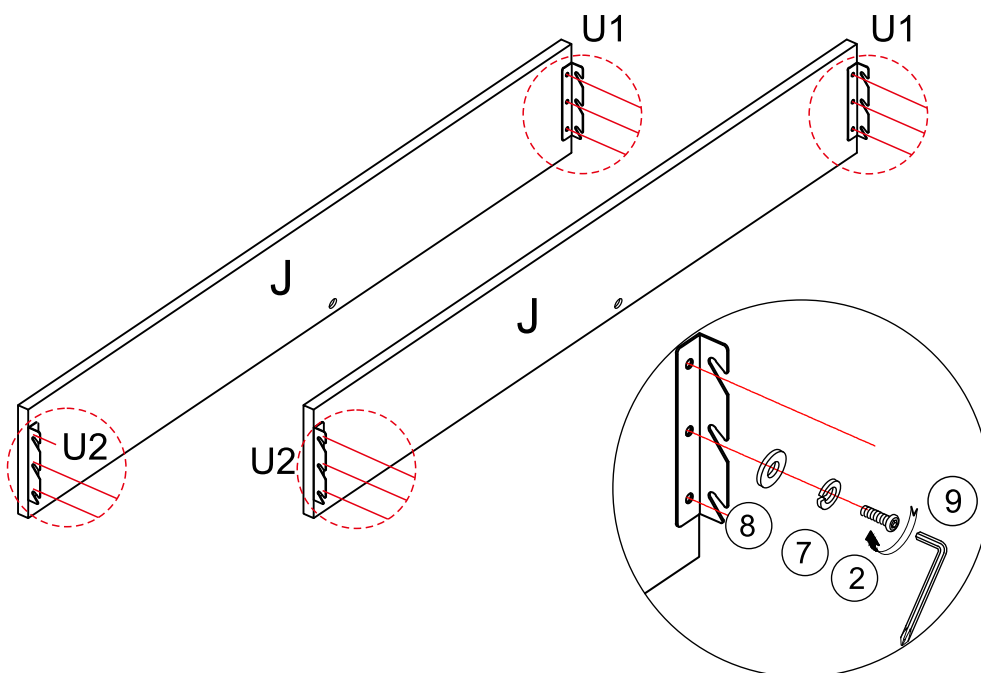
please make sure the edge of part U1 and U2 was vertically with the edge of part J, as the picture shown.






	2 x 12PCS
	7 x 12PCS
	8 x 12PCS
	9 x 1PC
	U1 x 2PCS
	U2 x 2PCS


5 TIP:

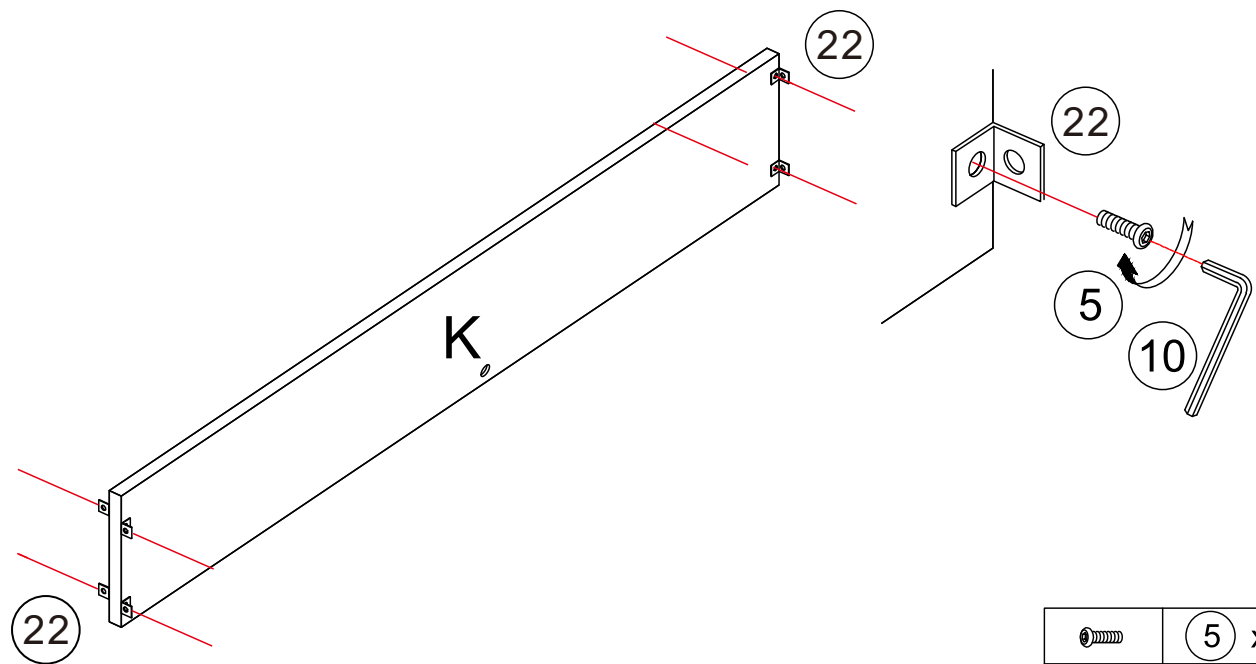



please make sure the edge of part 22 was vertically with the edge of part K, as the picture shown.




	(5) x 8PCS
	(22) x 8PCS
	(10) x 1PC

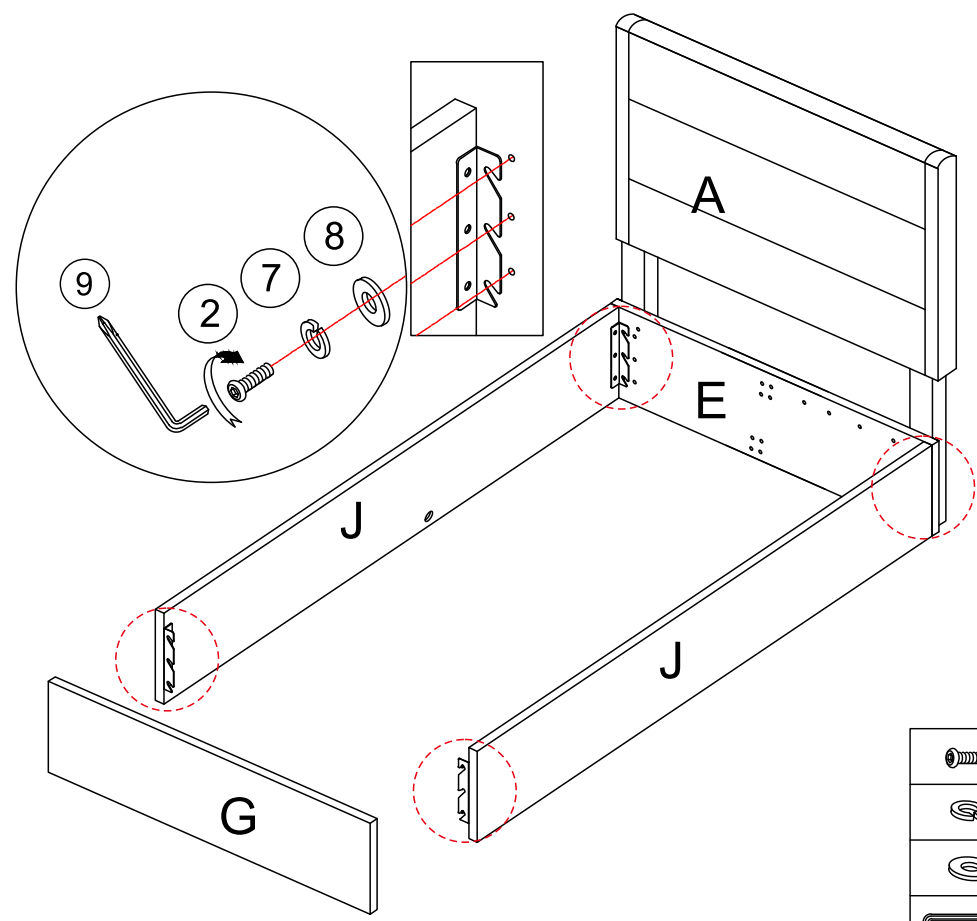

6



	(2) x 12PCS
	(7) x 12PCS
	(8) x 12PCS
	(9) x 1PC

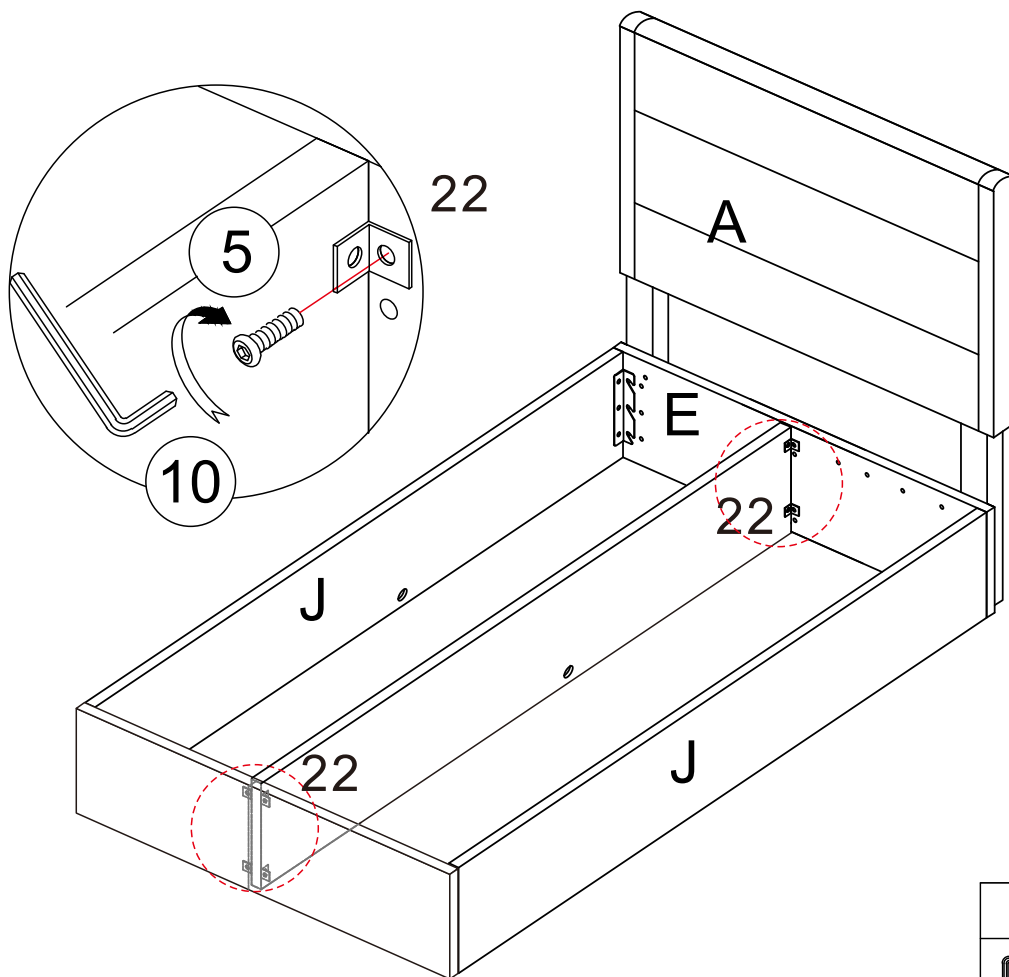7








	(5) x 8PCS
	(10) x 1PC

8




TIP:

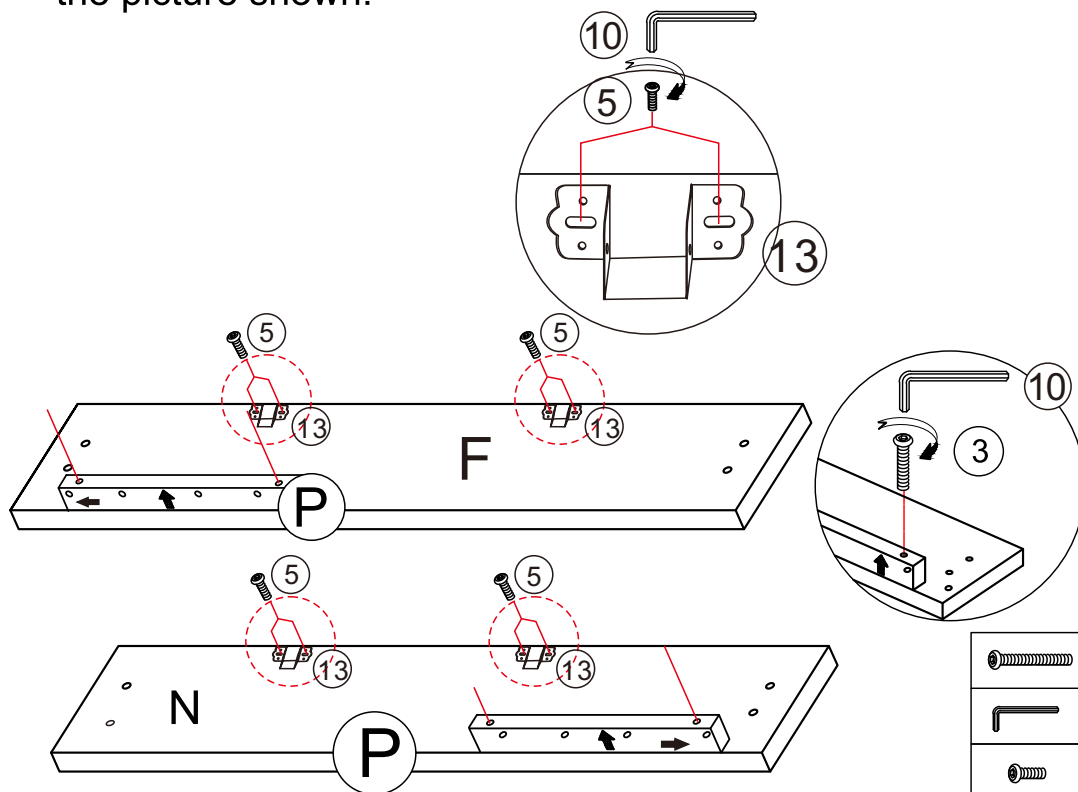



please note the direction indicated by the arrow label as the picture shown.





	(3) x 4PCS
	(10) x 1PC
	(5) x 8PCS
	(13) x 4PCS

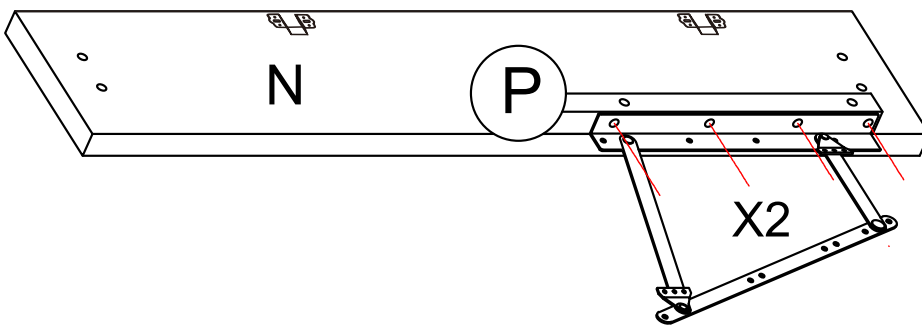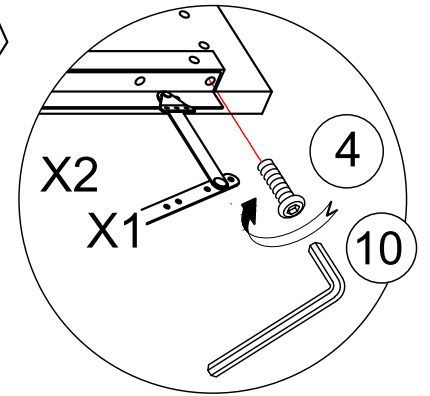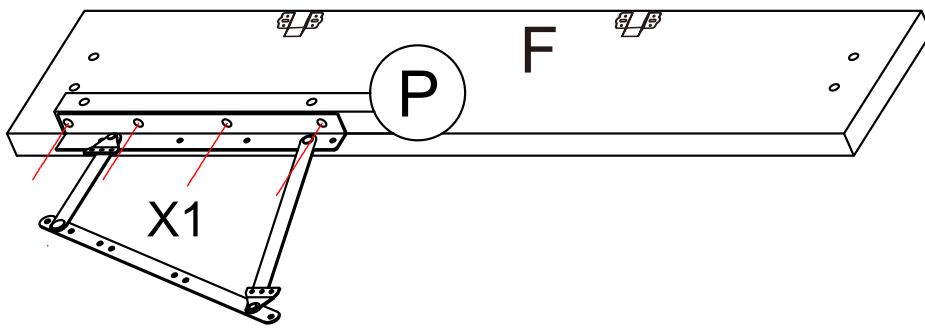
9




	4 x 8PCS
	10 x 1PC
	X1 x 1PC
	X2 x 1PC

10

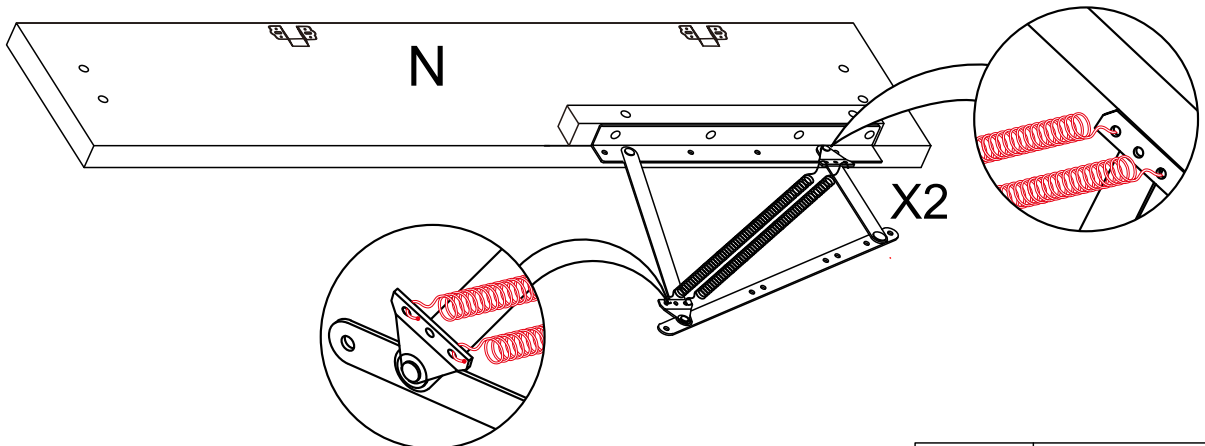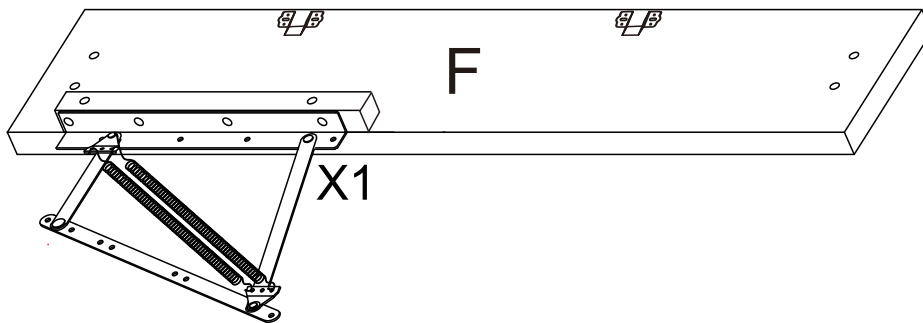


	Y x 4PCS
---	----------

11

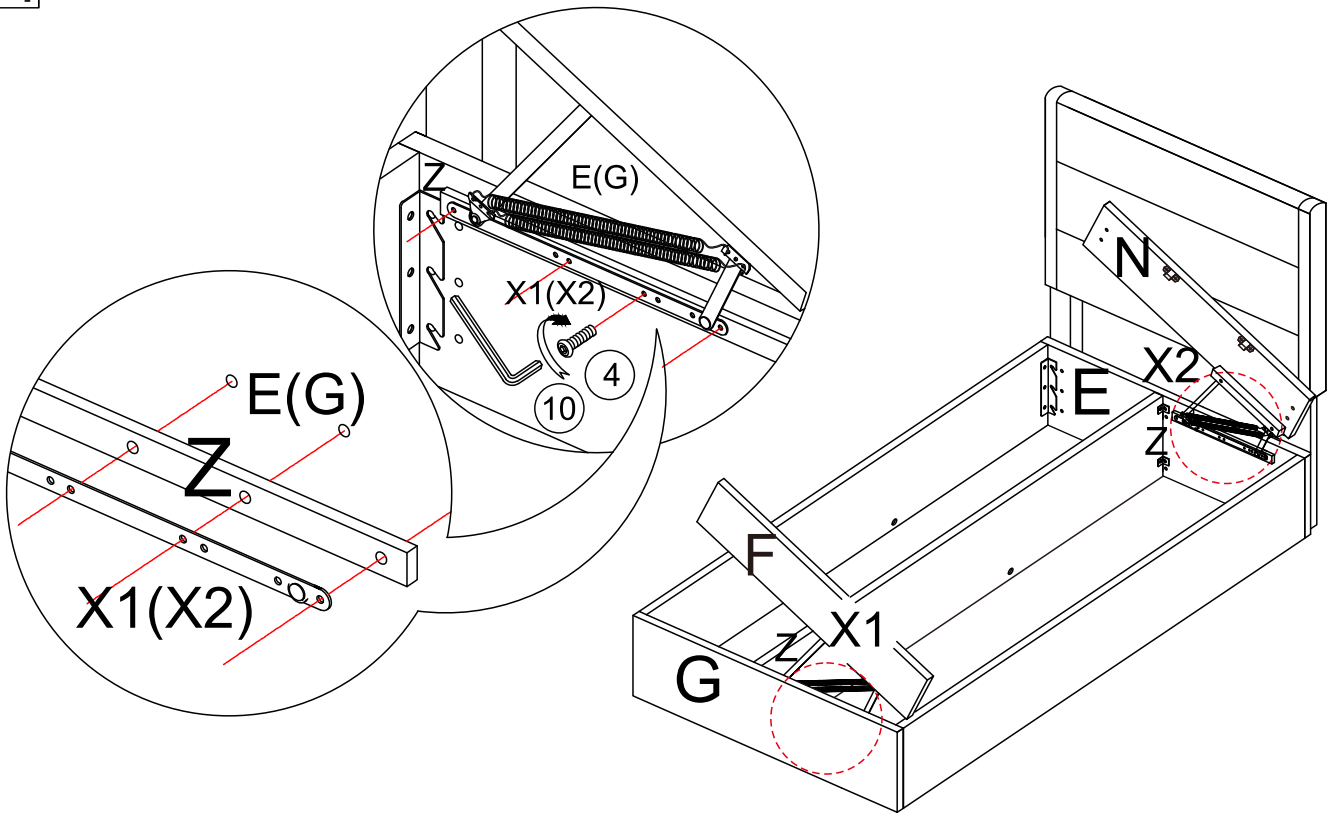


	4 x 8PCS
	10 x 1PC



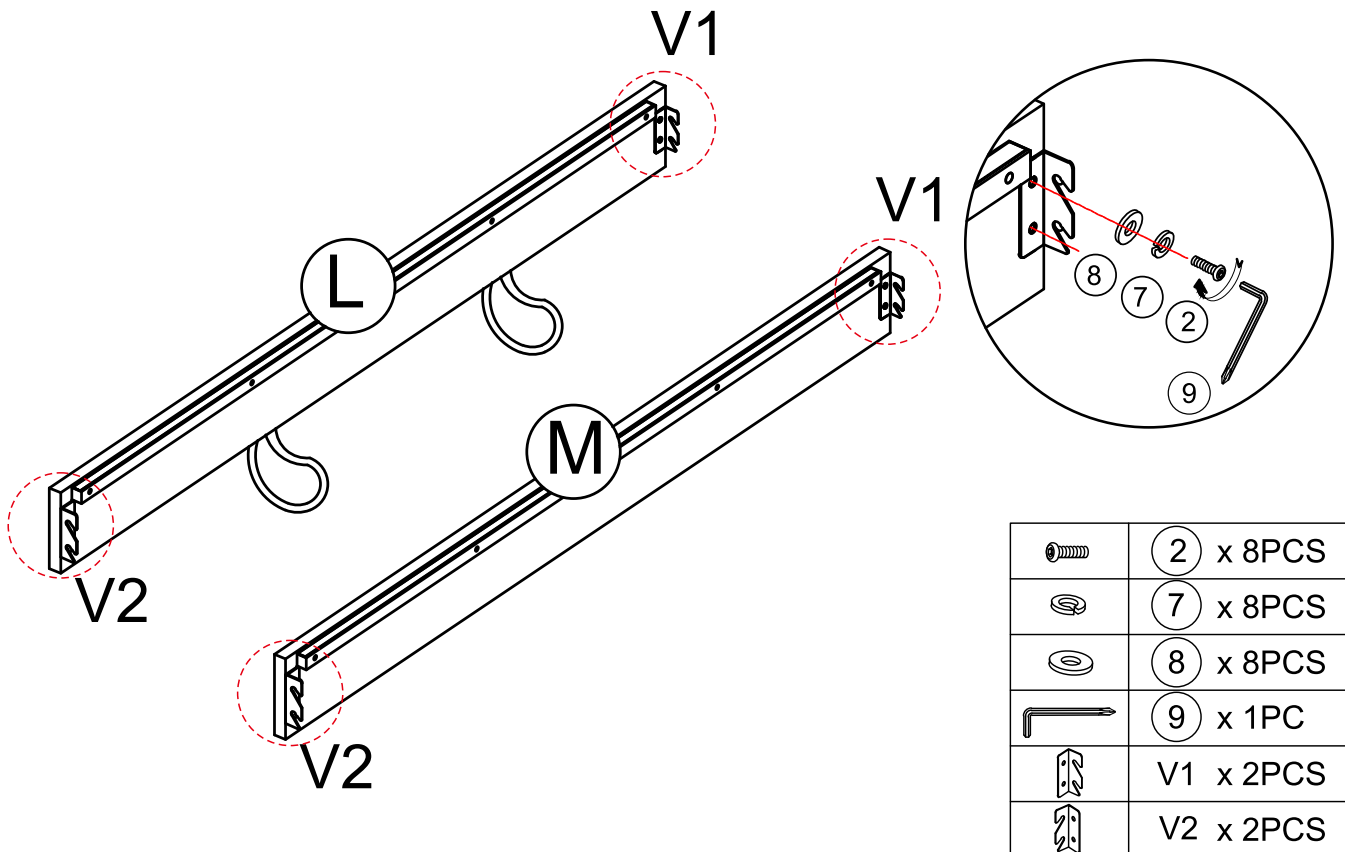

12

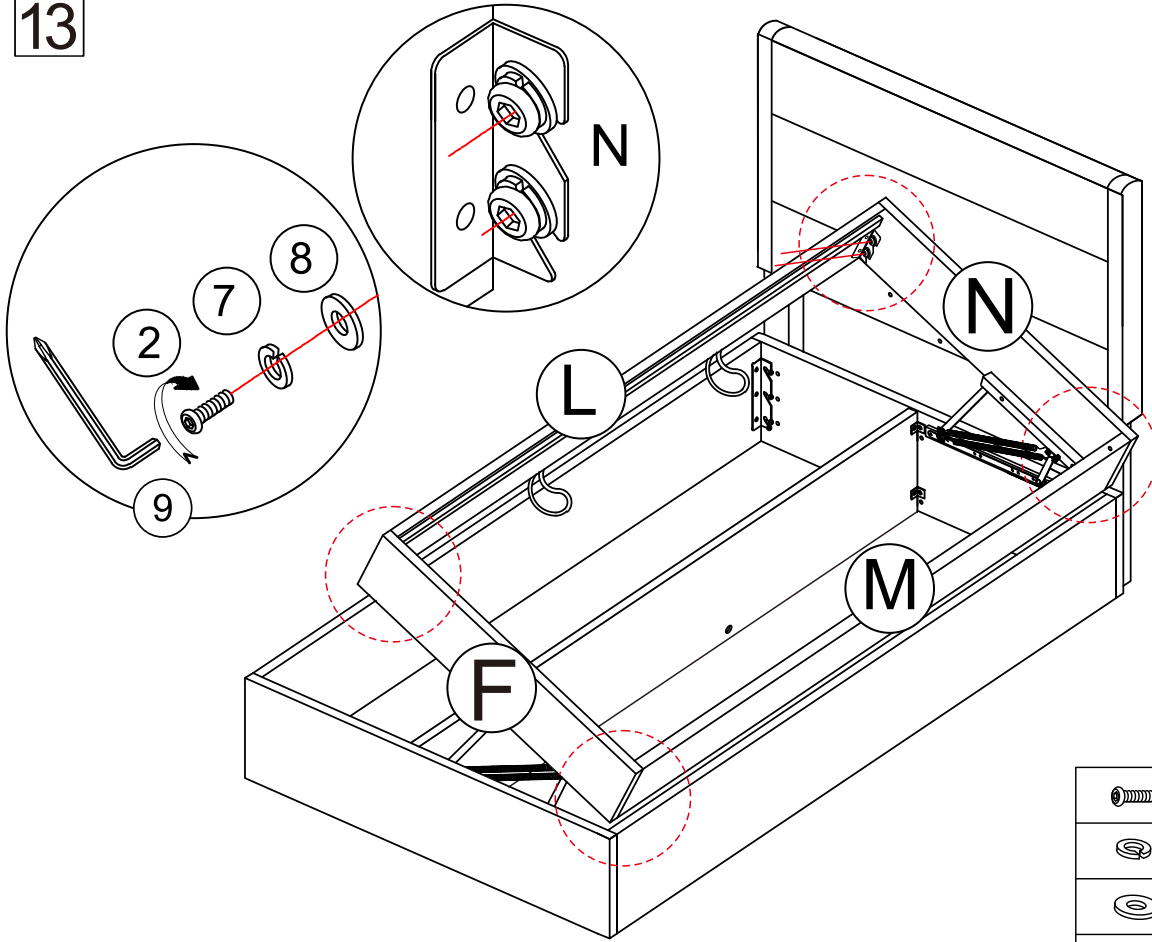


	2 x 8PCS
	7 x 8PCS
	8 x 8PCS
	9 x 1PC
	V1 x 2PCS
	V2 x 2PCS

13




	2 x 8PCS
	7 x 8PCS
	8 x 8PCS
	9 x 1PC

14

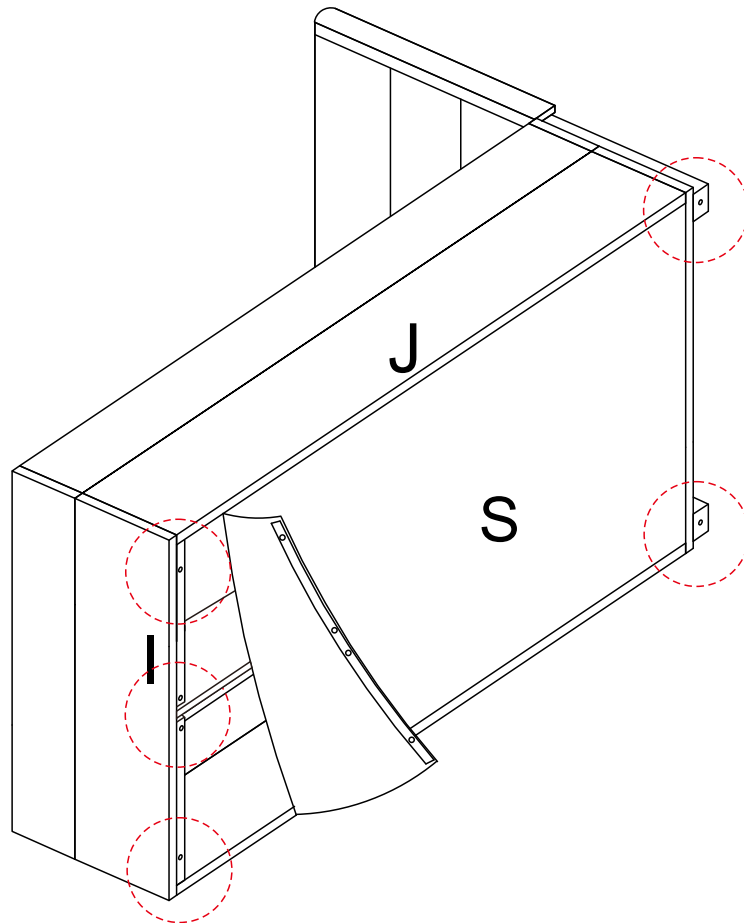


15


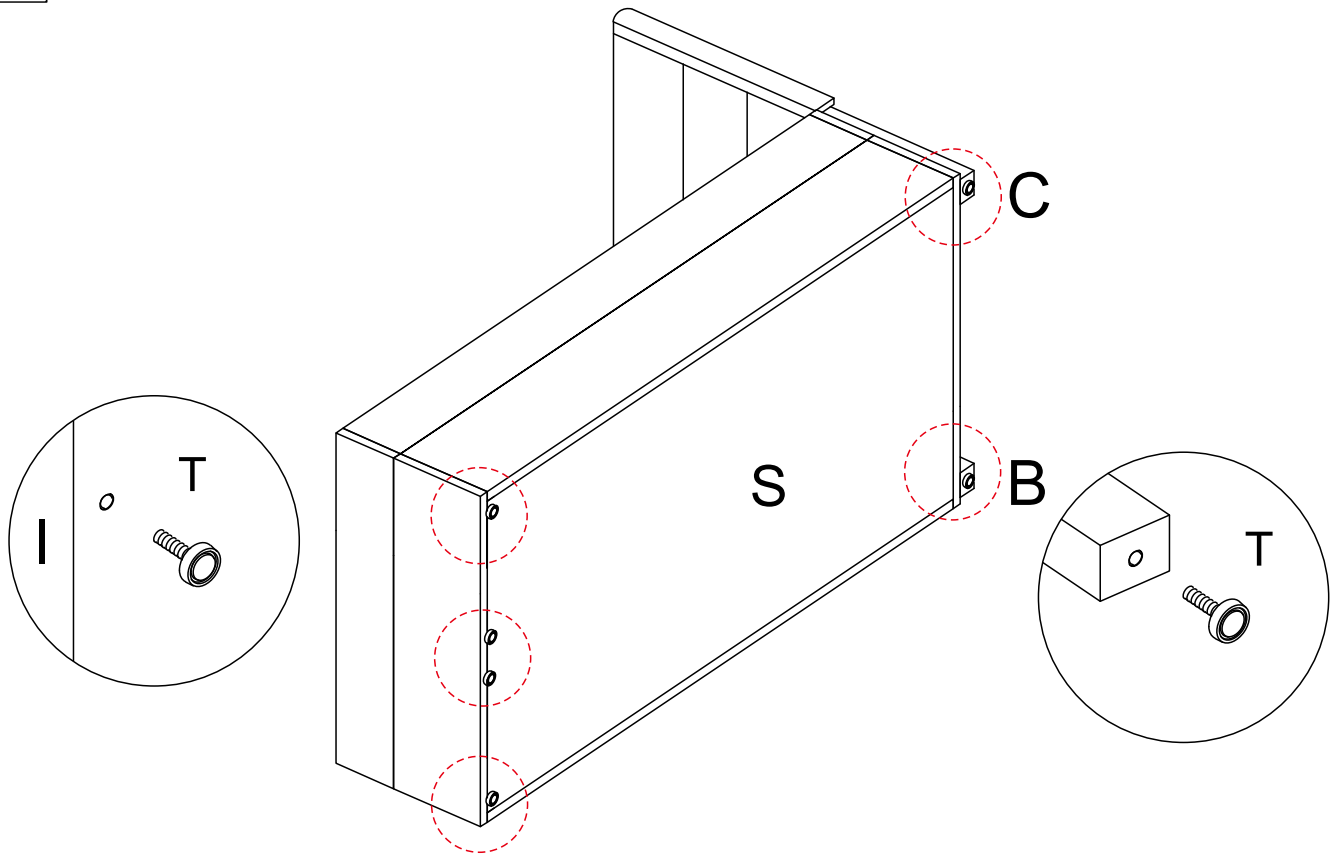




 T x 6PCS

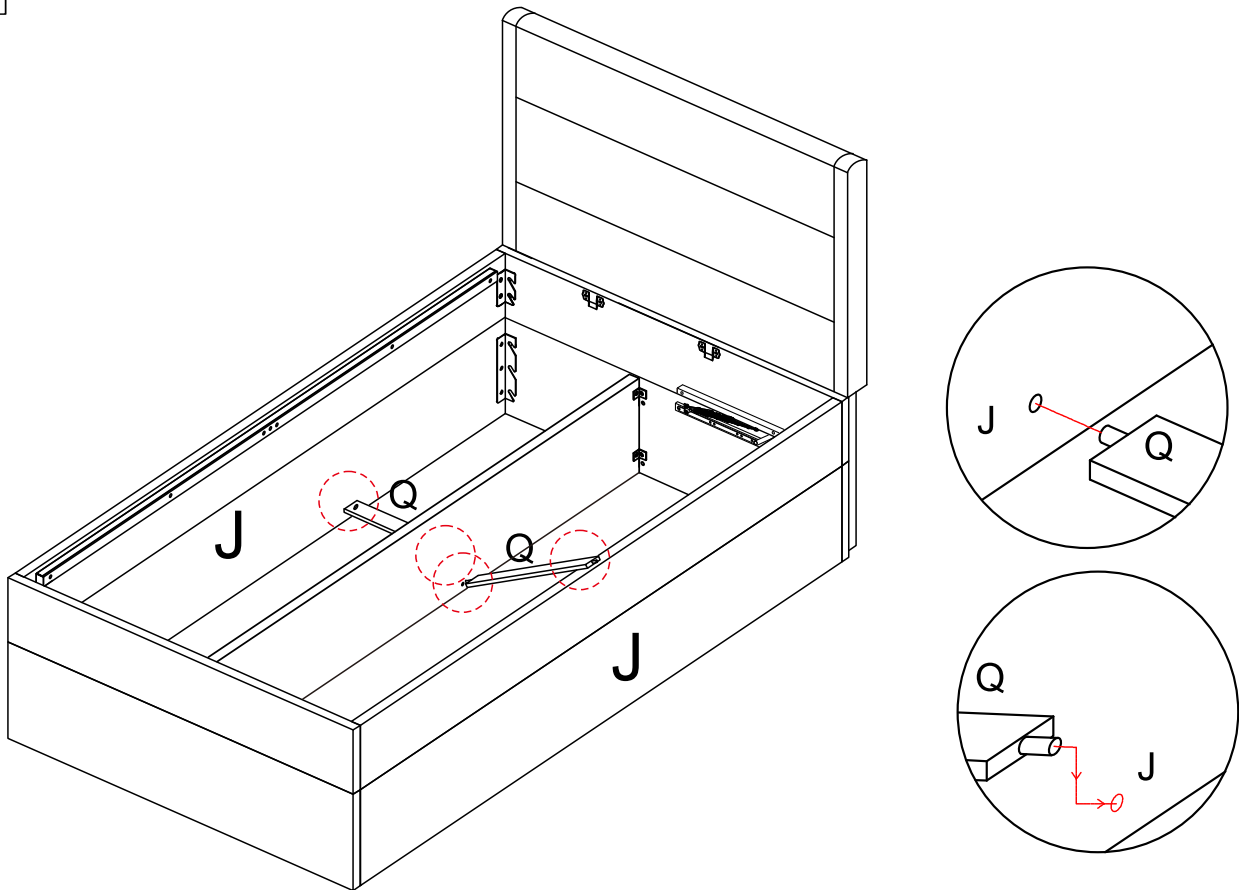16





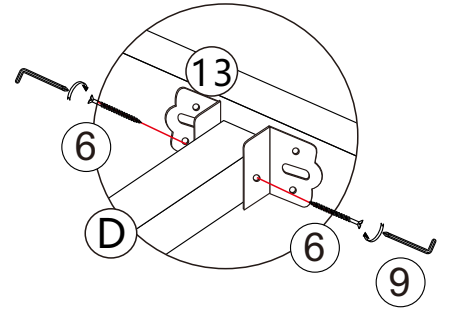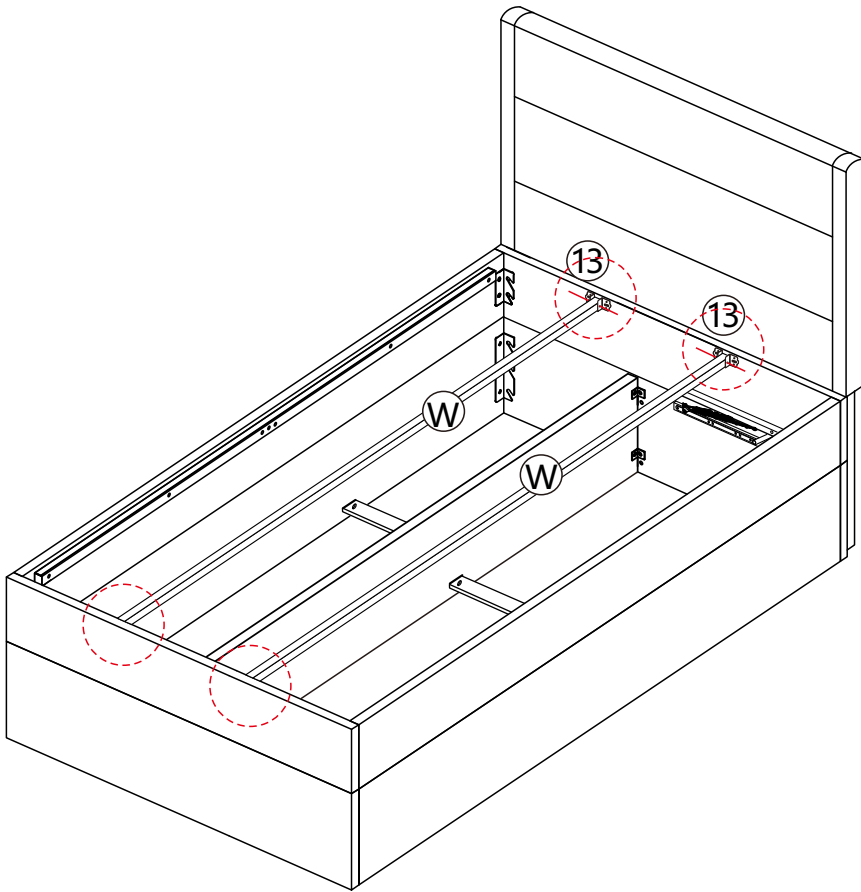

17





	6 X 8PCS
	9 X 1PC

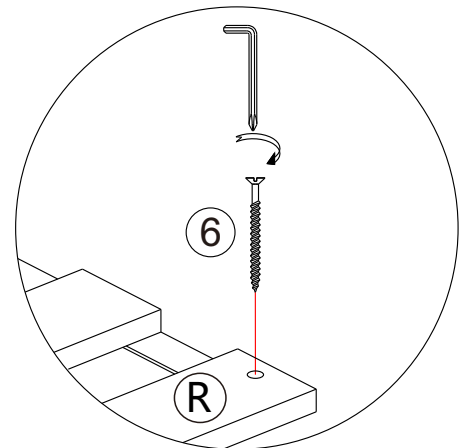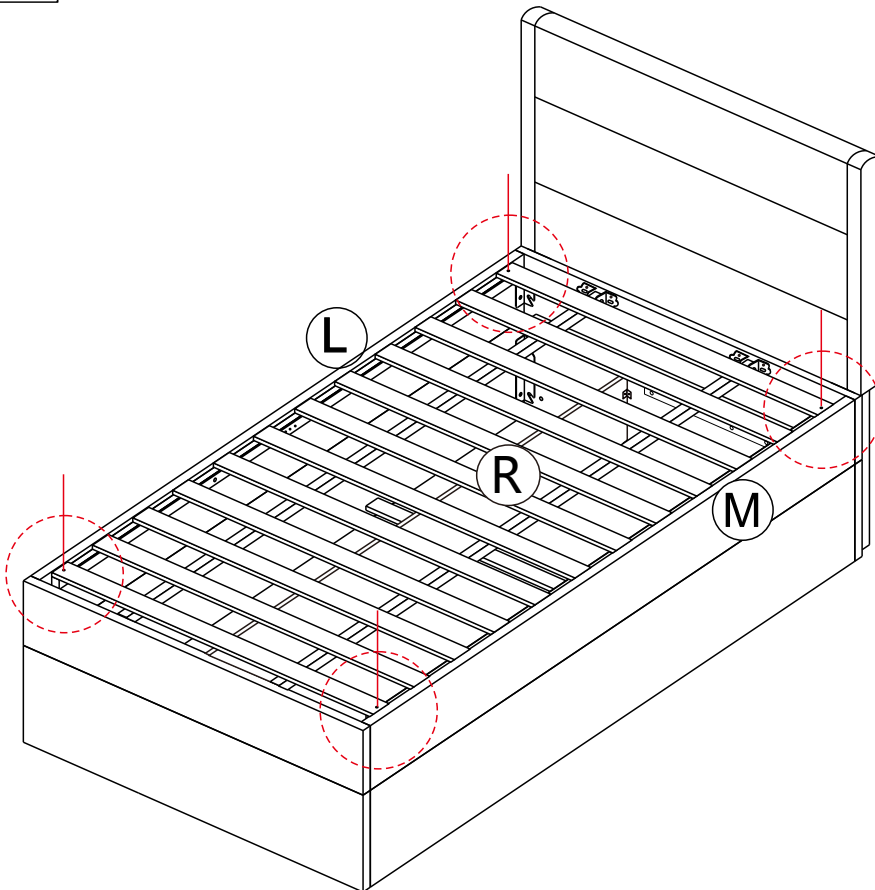


18



	6 X 4PCS
	9 X 1PC

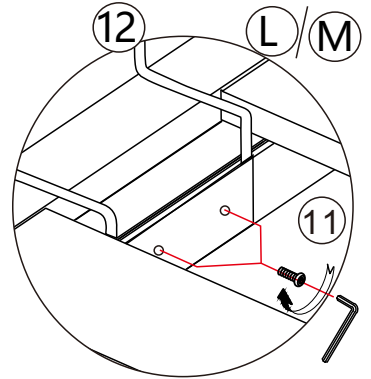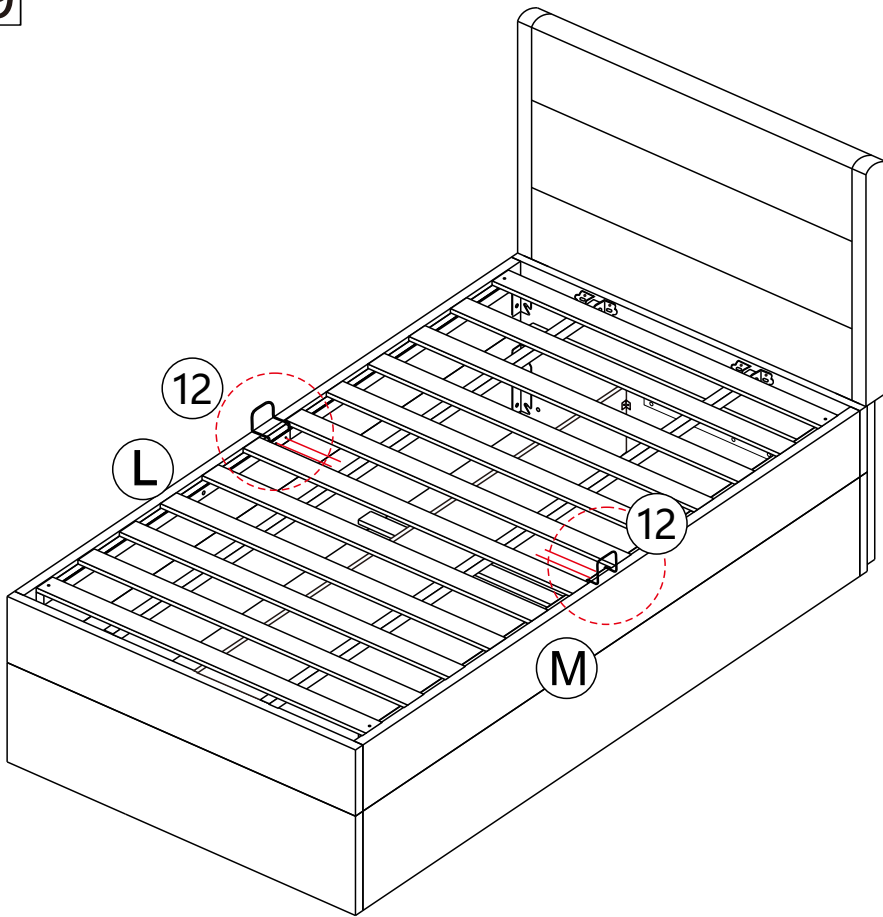19



	10 x 1PC
	11 x 4PCS
	12 x 2PCS

20

