



BADMÖBELSET „BERN“

Artikel-Nr.: 4024, 4109, 40071, 40072, 40073

- MONTAGE-ANLEITUNG -



Installationsvideos und Aufbauanleitungen
zu unseren Produkten finden Sie unter

<https://badmoebelkauf.de>







Nutzername: jet-line • Passwort: user2011

Weitere Produkte für Ihr Bad
finden Sie unter

<https://badmoebelkauf.de>


Produkt-Code:	4024 (schwarz), 4109 (holz hell), 40071 (holz dunkel), 40072 (weiß), 40073 (rot)
Maße Unterschrank:	Breite: ca. 119 cm, Tiefe: ca. 47 cm, Höhe: ca. 30/37 cm (ohne/mit Waschbecken)
Maße Spiegel:	Breite: ca. 120 cm, Höhe ca. 40 cm

Teile-Liste:


Nr.	Bez.	Abb.	Stz.
A	Schraub-Dübel		35x
B	Exzenter-Schraube		35x
C	Holzdübel		12x
D	Schubladen-Schiene		1x
E	Nagel		10x
F	Wandhalter		2x




SCHRITT 1

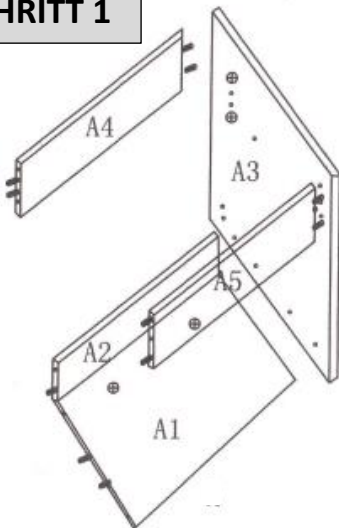


SCHRITT 2

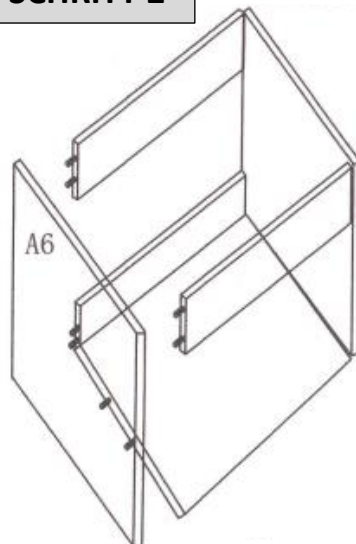


SCHRITT 3

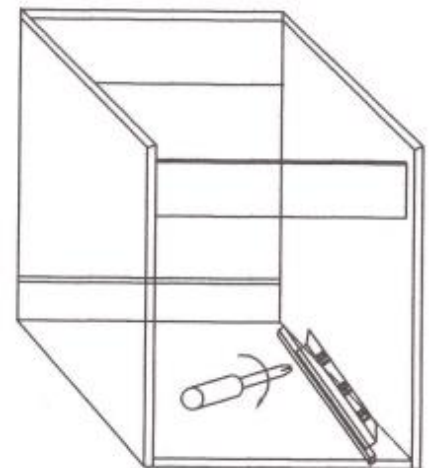


SCHRITT 4

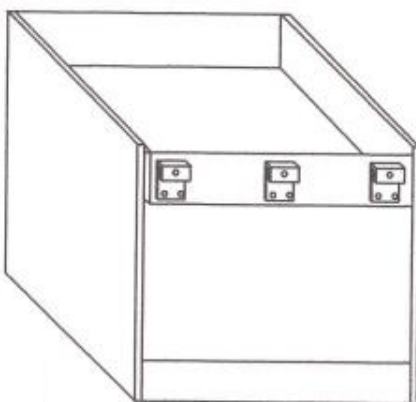


SCHRITT 5

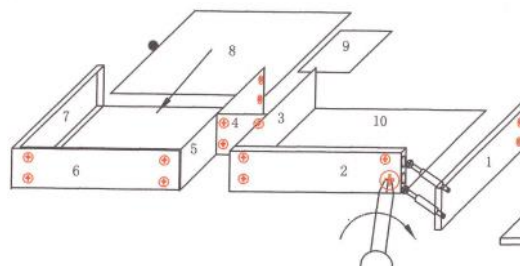

SCHRITT 6


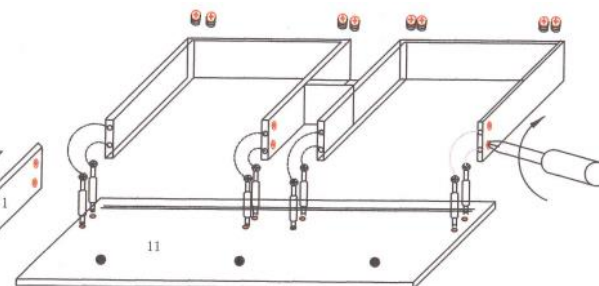


SCHRITT 7

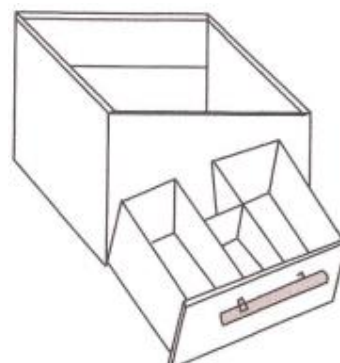


Wandmontage Waschtisch


1. Legen Sie zunächst die Position (Höhe und Distanz) der Bohrlöcher für den Waschtisch fest und zeichnen dann eine exakte Linie an die Wand
2. Montieren Sie die Wandhalter genau auf der Linie
3. Sollte die Position leicht (um maximal 8 mm) abweichen, gleichen Sie die Diskrepanz dadurch aus, dass sie einen festen Gegenstand in die Öffnung des Wandhalters einbringen (gem. Abb. rechts)
4. Montieren Sie das zweite Halter-Paar (gem. Abb. unten) an der Schrank-Rückseite

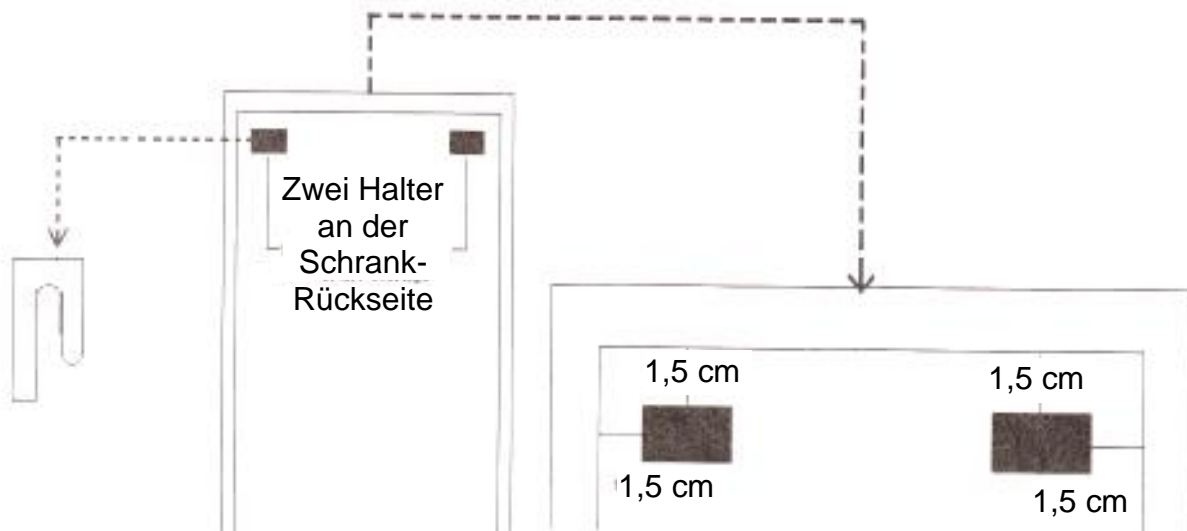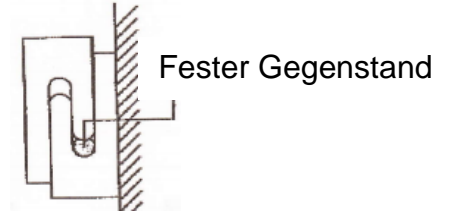

Wandmontage Spiegel

1. Verwenden Sie das mitgelieferte Montagematerial zur Anbringung des Spiegels an der von Ihnen gewünschten Position
2. Stellen Sie sicher, dass die beiden Nägel sicher in der Wand sitzen und hängen Sie dann den Spiegel ein:

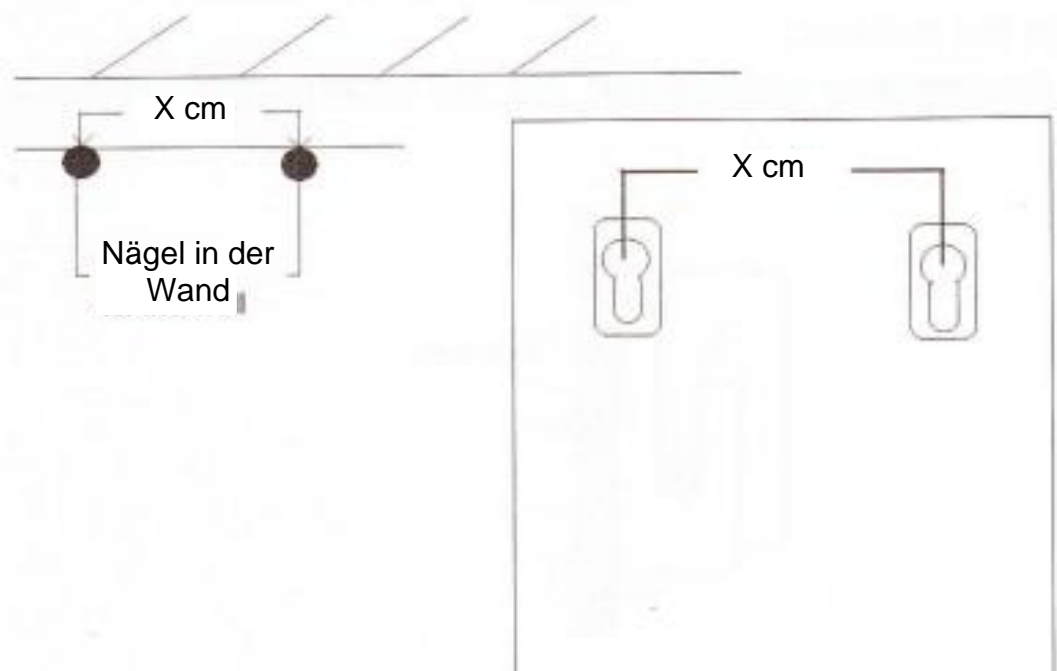

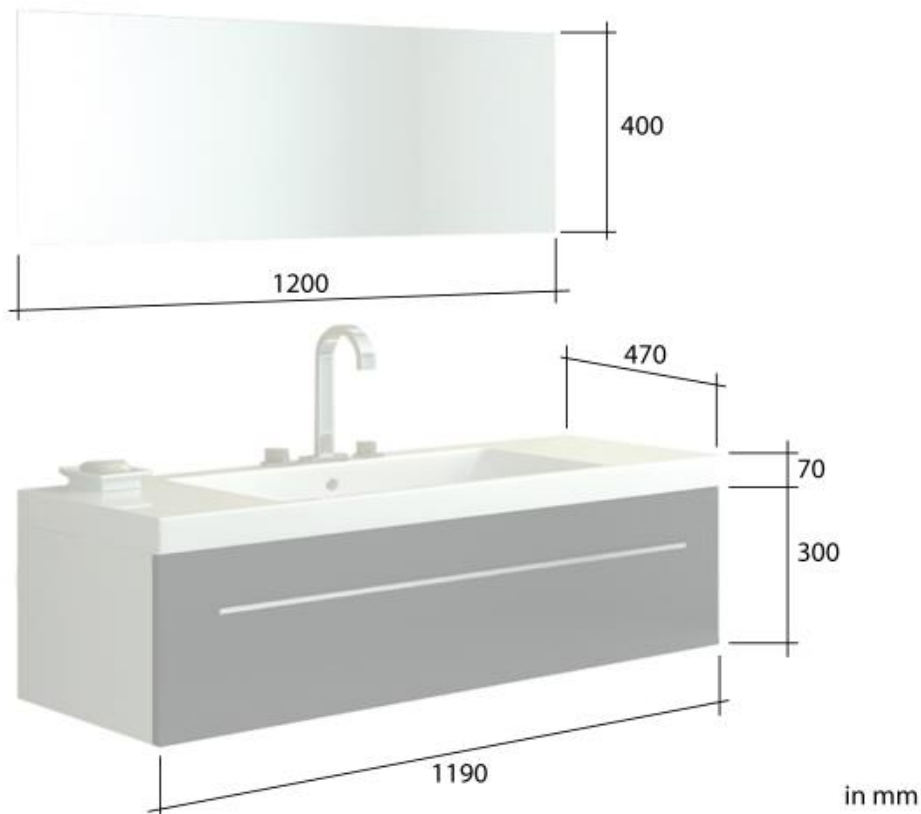

Installationsvideos und Aufbauanleitungen

zu unseren Produkten finden Sie unter

<https://badmoebelkauf.de>

Nutzername: jet-line • Passwort: user2011

Weitere Produkte für Ihr Bad

finden Sie unter

<https://badmoebelkauf.de>



KBW Trading GmbH
Gewerbering 2
88518 Herbertingen
Deutschland
Tel: 07586-921160
Fax: 07586-9211616
E-Mail: info@jet-line.de
<https://badmoebelkauf.de>



LAVATORY SET „BERN“

Article-No.: 4024, 4109, 40071, 40072, 40073

- INSTALLATION-MANUAL -









Installation-videos and further instructions
for our products can be found on
<https://badmoebelkauf.de>

Username: jet-line • Password: user2011

Further products for your bathroom
can be found on
<https://badmoebelkauf.de>


Product-Code: 4024 (black), 4109 (light wood), 40071 (dark wood), 40072 (white), 40073 (red)
Dimension Cabinet: Width: approx. 119 cm, Depth: approx. 47 cm, Height: approx. 30/37 cm (without/with basin)
Dimension Mirror: Width: approx. 120 cm, Height: approx. 40 cm

Teile-Liste:


Nr.	Bez.	Abb.	Stz.
A	Screw-Plug		35x
B	Eccentric Screw		35x
C	Wooden Plug		12x
D	Drawer Rail		1x
E	Nail		10x
F	Wall Bracket		2x




STEP 1

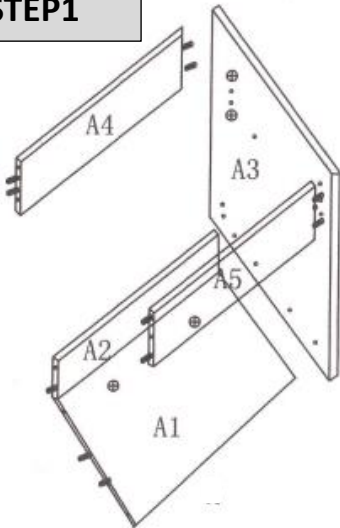


STEP 2

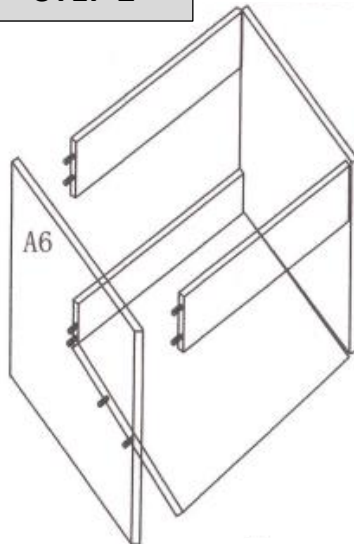


STEP 3

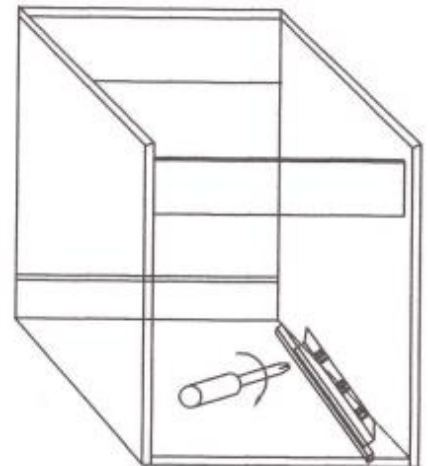


STEP 4

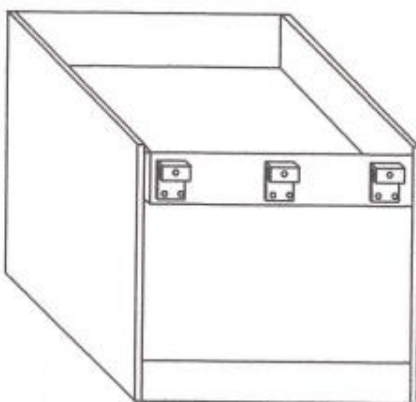


STEP 5

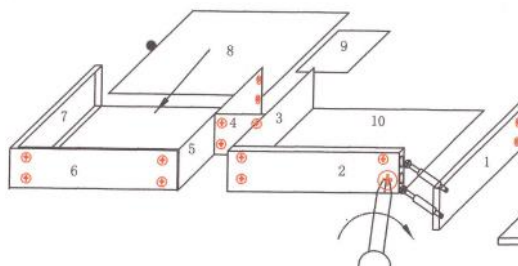

STEP 6


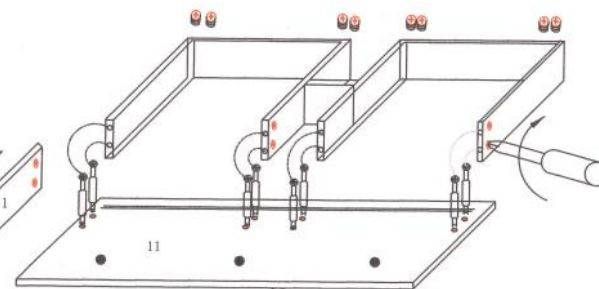


STEP 7

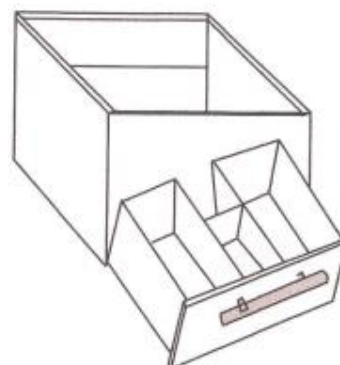


Wall-Installation Cabinet


1. First determine the position (height and distance) for the drill-holes to mount the cabinet. Then draw an exact line onto your wall
2. Install the wall brackets onto the line
3. Should the position be slightly (8 mm max.) uneven, you can level out the discrepancy by filling the opening of the wall bracket with a solid object (acc. image, right)
4. Install the second pair of holders to the backside of your cabinet (acc. image, below)

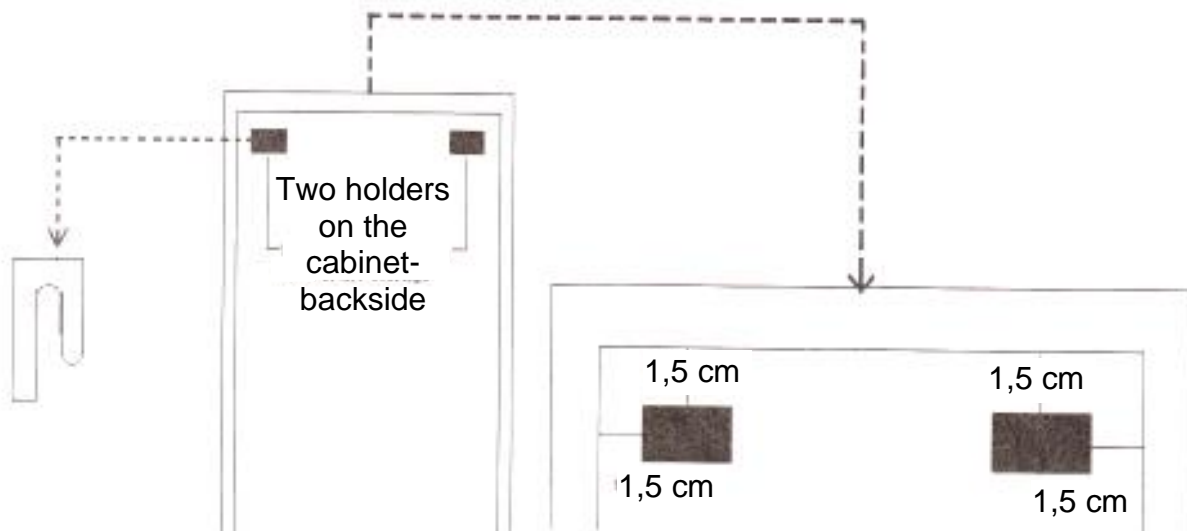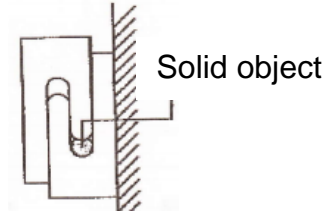

Wall Installation Mirror

1. Use the nails delivered along with your article to install the mirror onto the required position of your wall
2. Make sure the nails sit firmly, before you put up the mirror

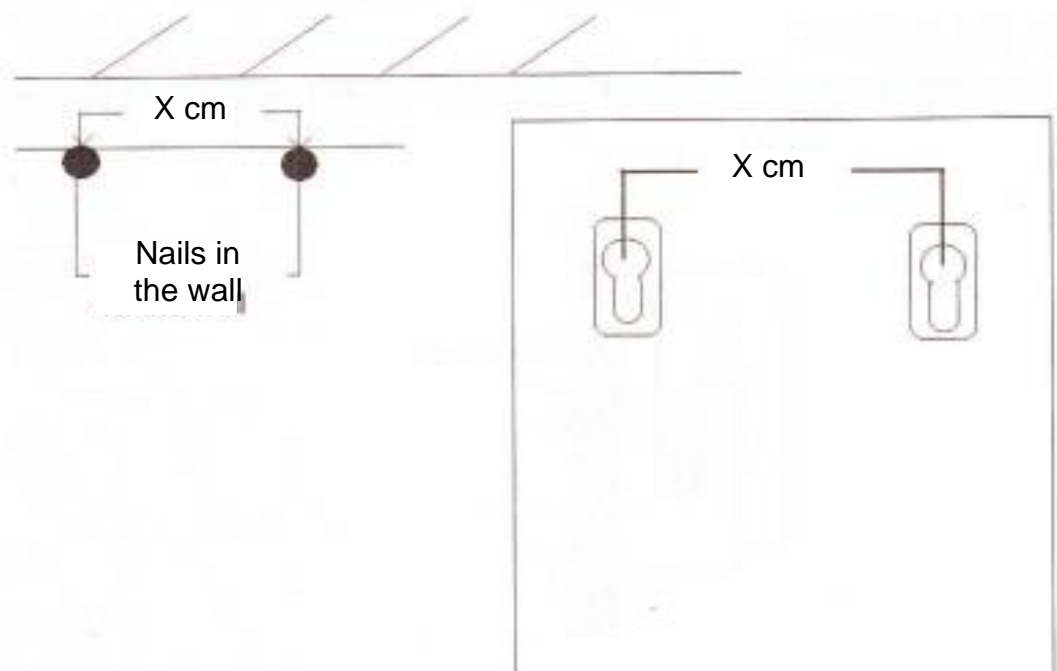

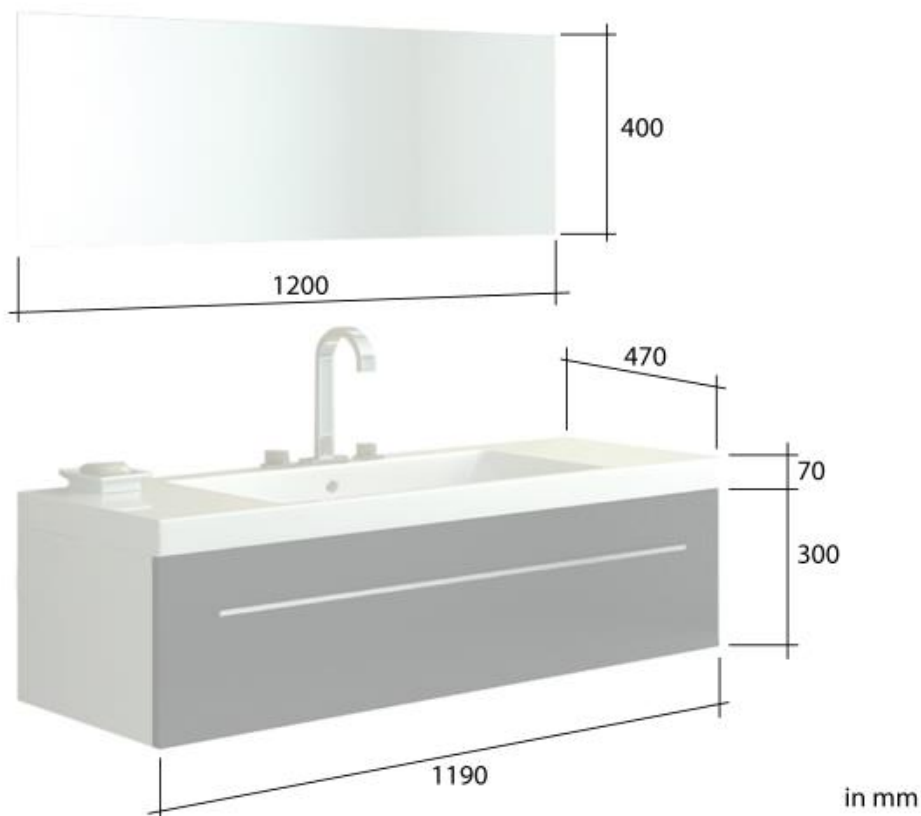

Installation-videos and further instructions

for our products can be found on

<https://badmoebelkauf.de>

Username: jet-line • Password: user2011

Further products for your bathroom

can be found on

<https://badmoebelkauf.de>



KBW Trading GmbH
 Gewerbering 2
 88518 Herbertingen
 Germany
 Phone: 07586-921160
 Fax: 07586-9211616
 E-Mail: info@jet-line.de
<https://badmoebelkauf.de>