
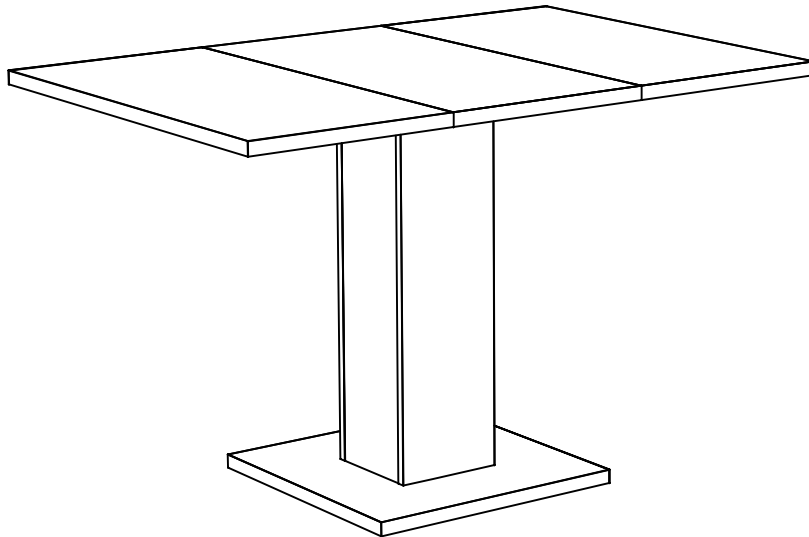


REPC-Nr.:

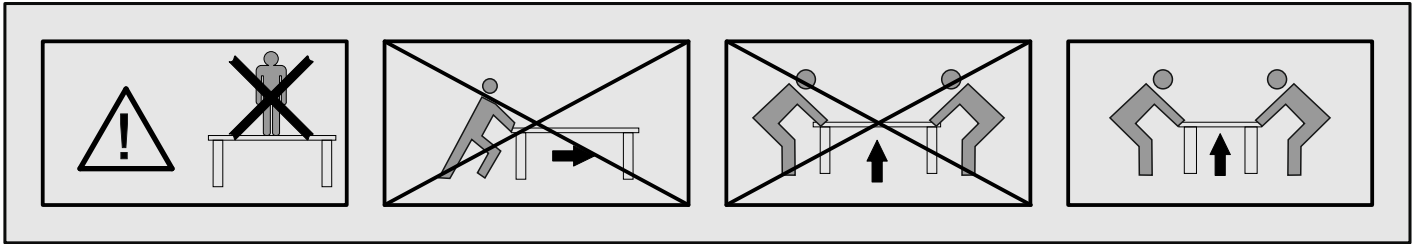


Artikel.-Nr.:

**0562\_80x80**

Montageanleitung.-Nr.:

**MA1-00492**

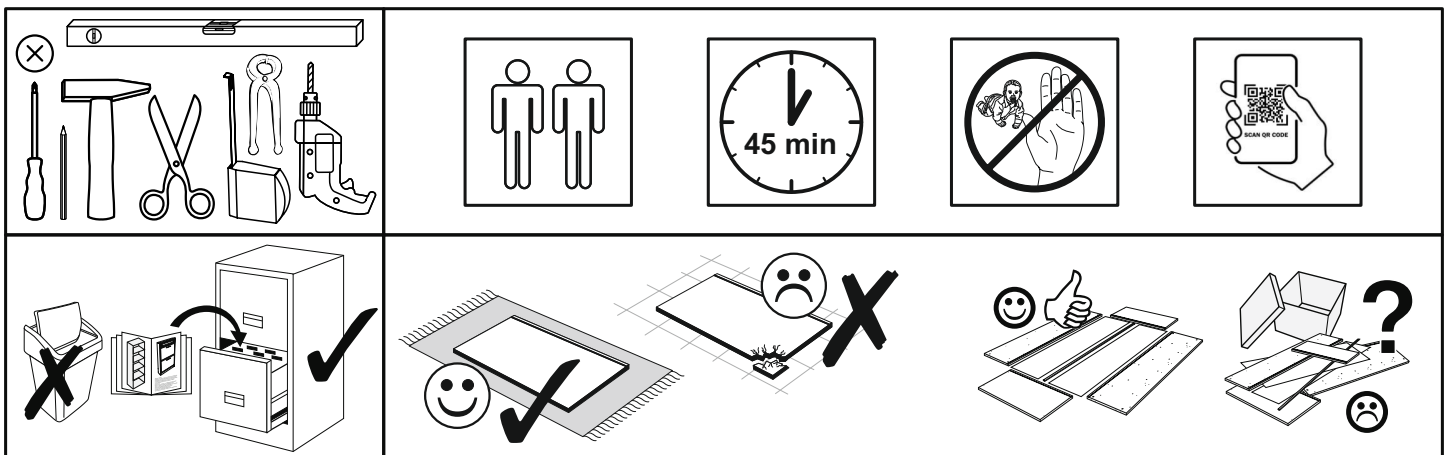

SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf  
The replacement parts requisition form you find on  
<https://www.maeusbacher.de/ersatzteile/>

## BT1-00582 Colli 1/1


B01-20		B02-10		B02-20		B01-30		B01-39-20	
6x	7,0x70	18x	ø15x12mm	18x		2x	3x16	12x	5x20
B02-103		B05-130		B01-242		B01-360		B02-183	
20x	8x30	6x	Leim	1x	SW 6	4x	M6	4x	M6x20
B01-90		B02-211		B02-212					
12x	3,5x20	6x		6x					




▶ SCAN ME

## BT1-00583 Colli 1/1


B02-177		B05-20	
2x		6x	




## Colli 1/1

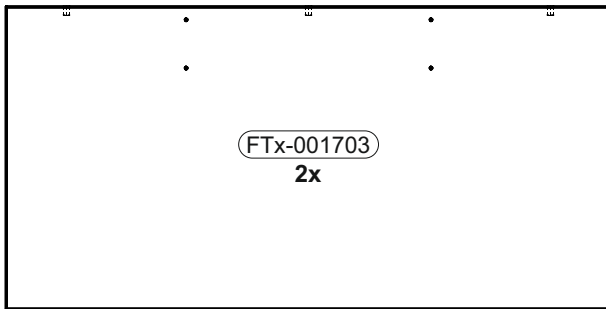


800 x 400

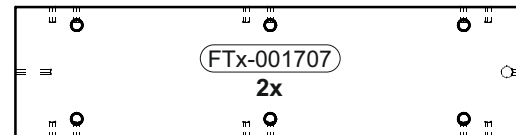


674 x 172

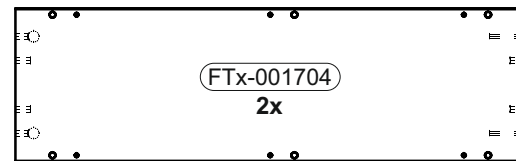


674 x 202

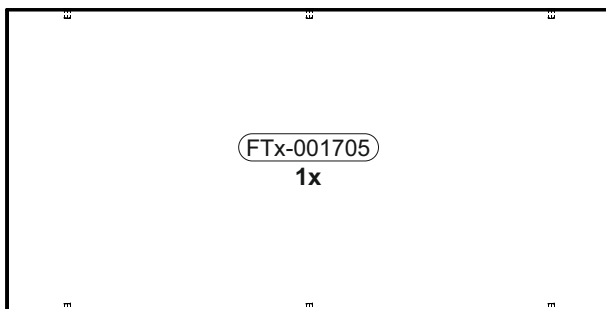


800 x 400



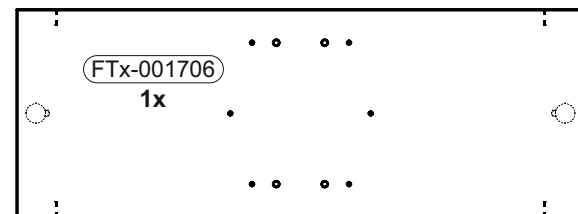





750 x 274




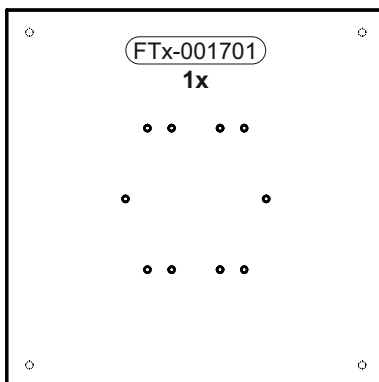






500 x 500

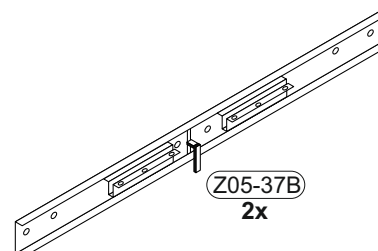

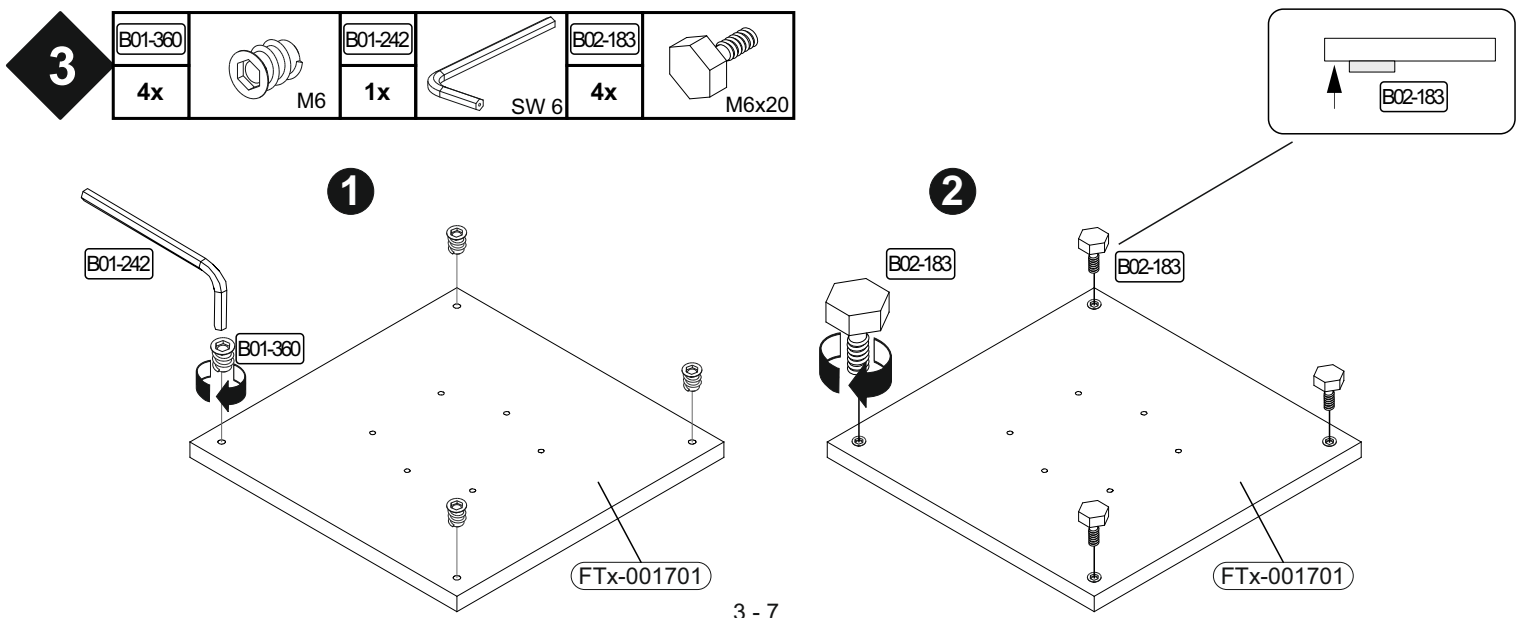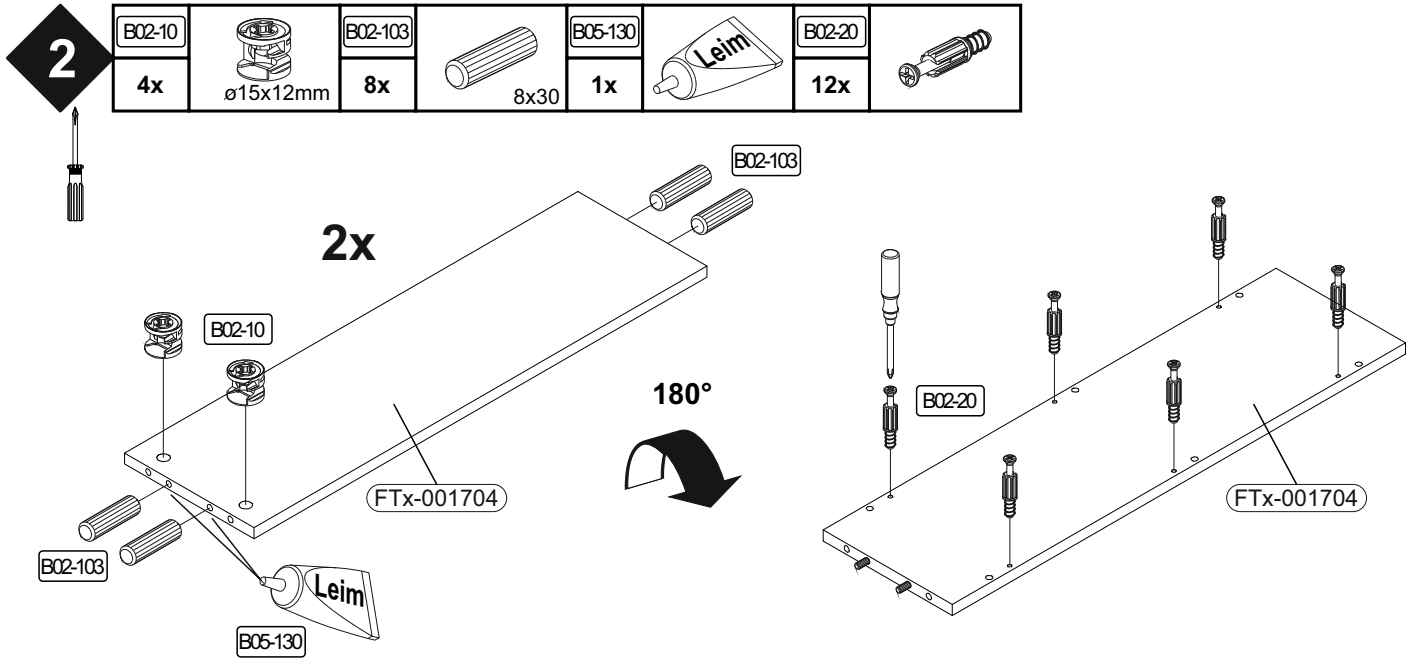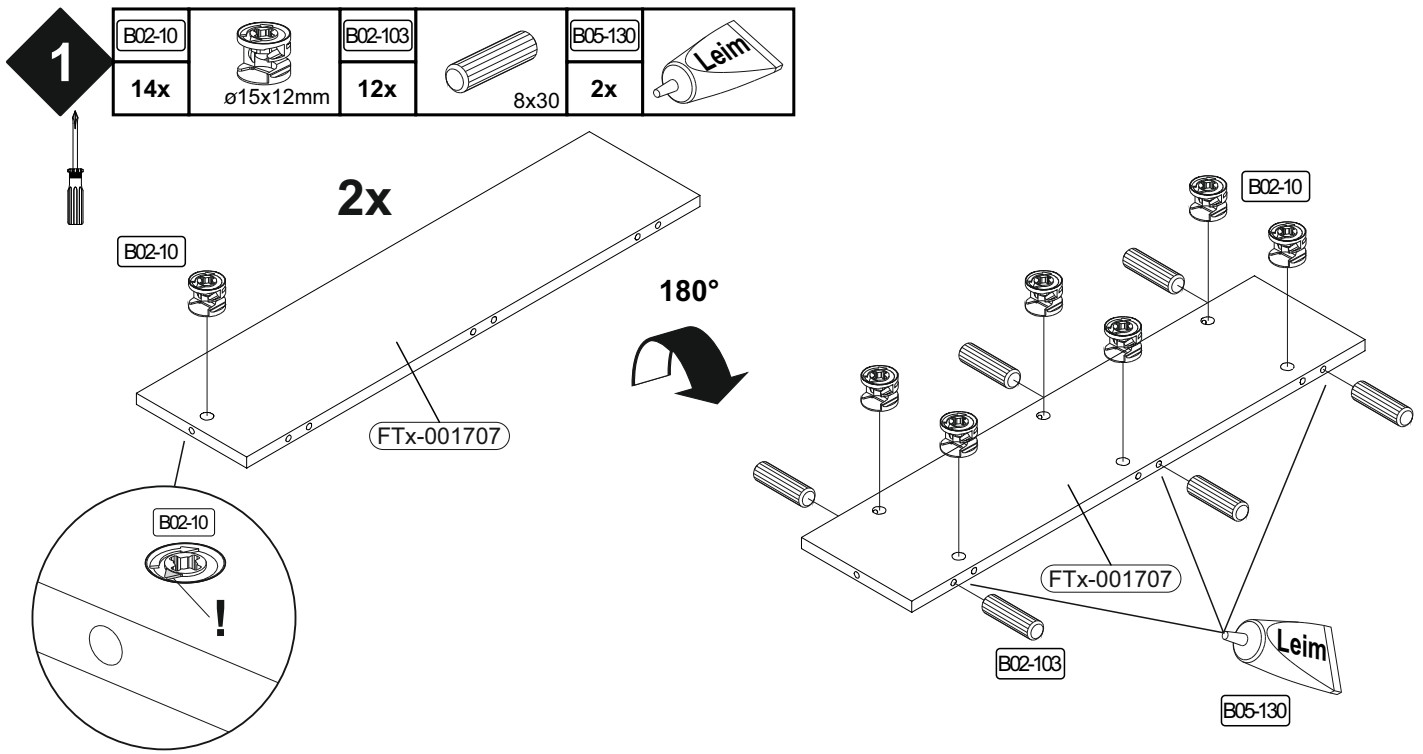

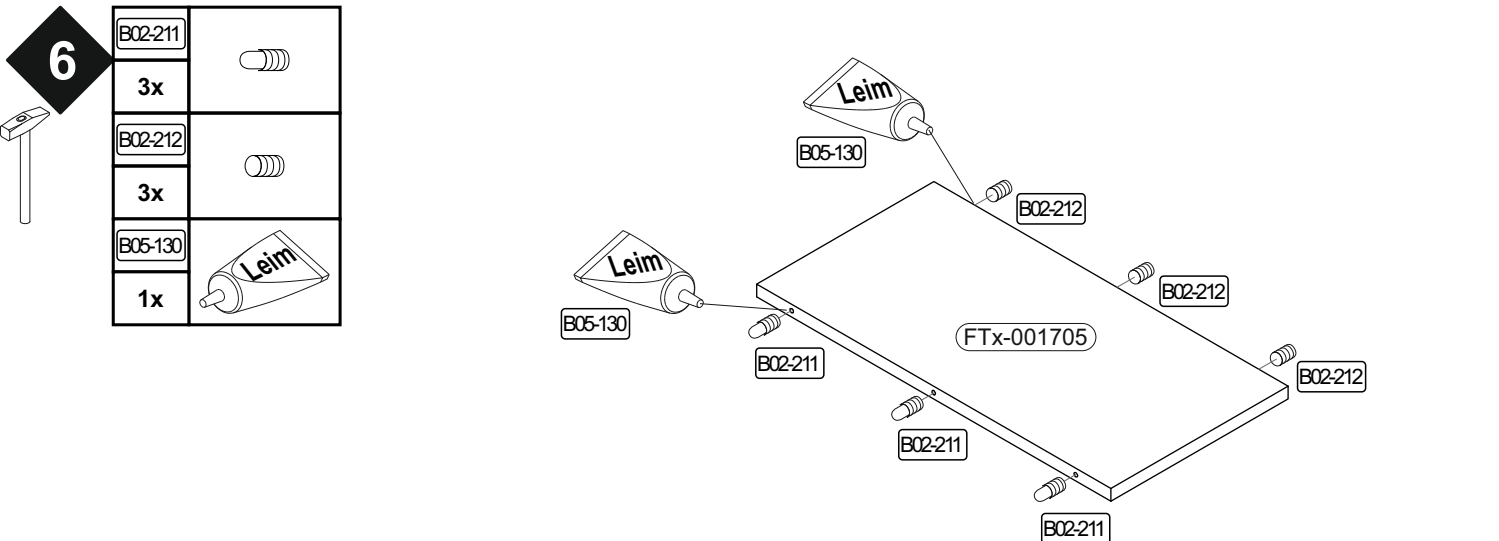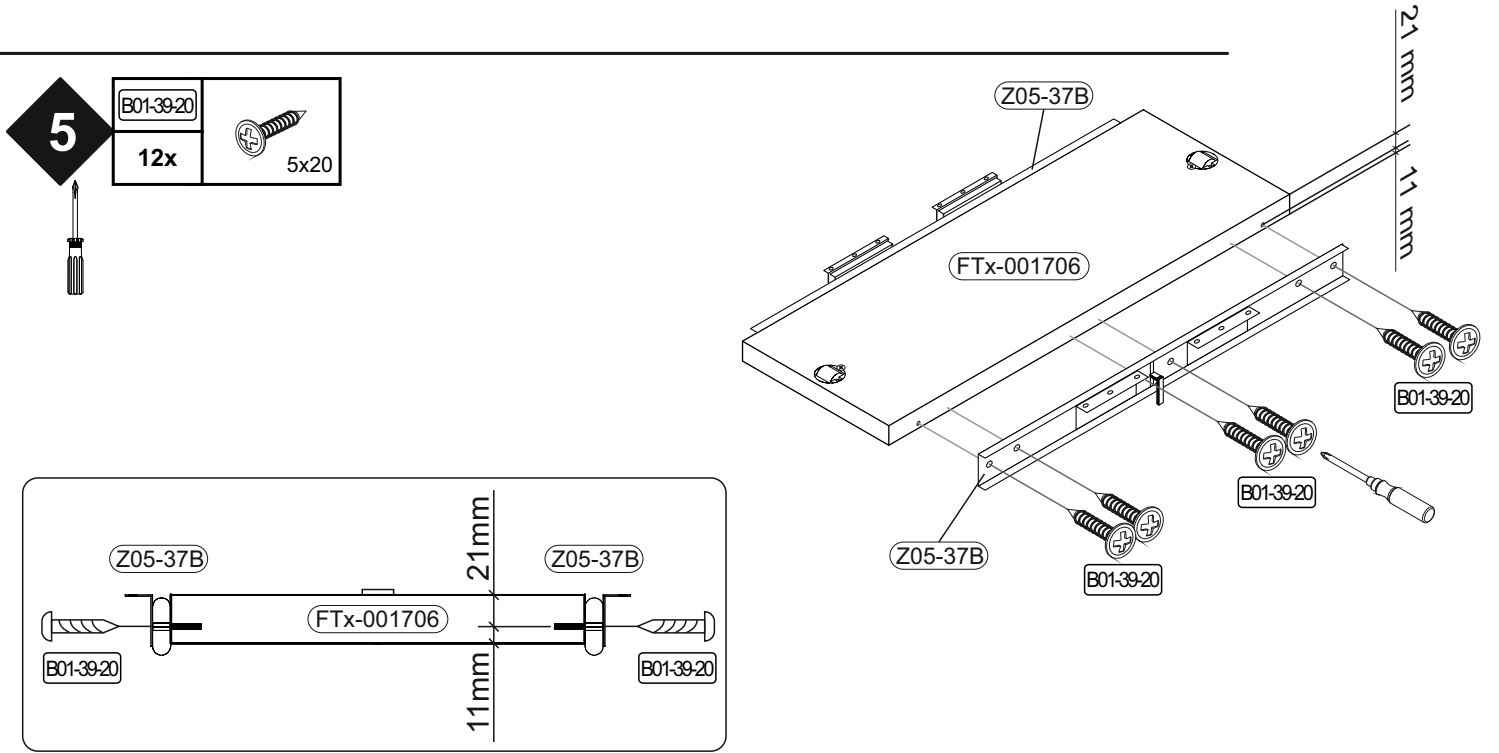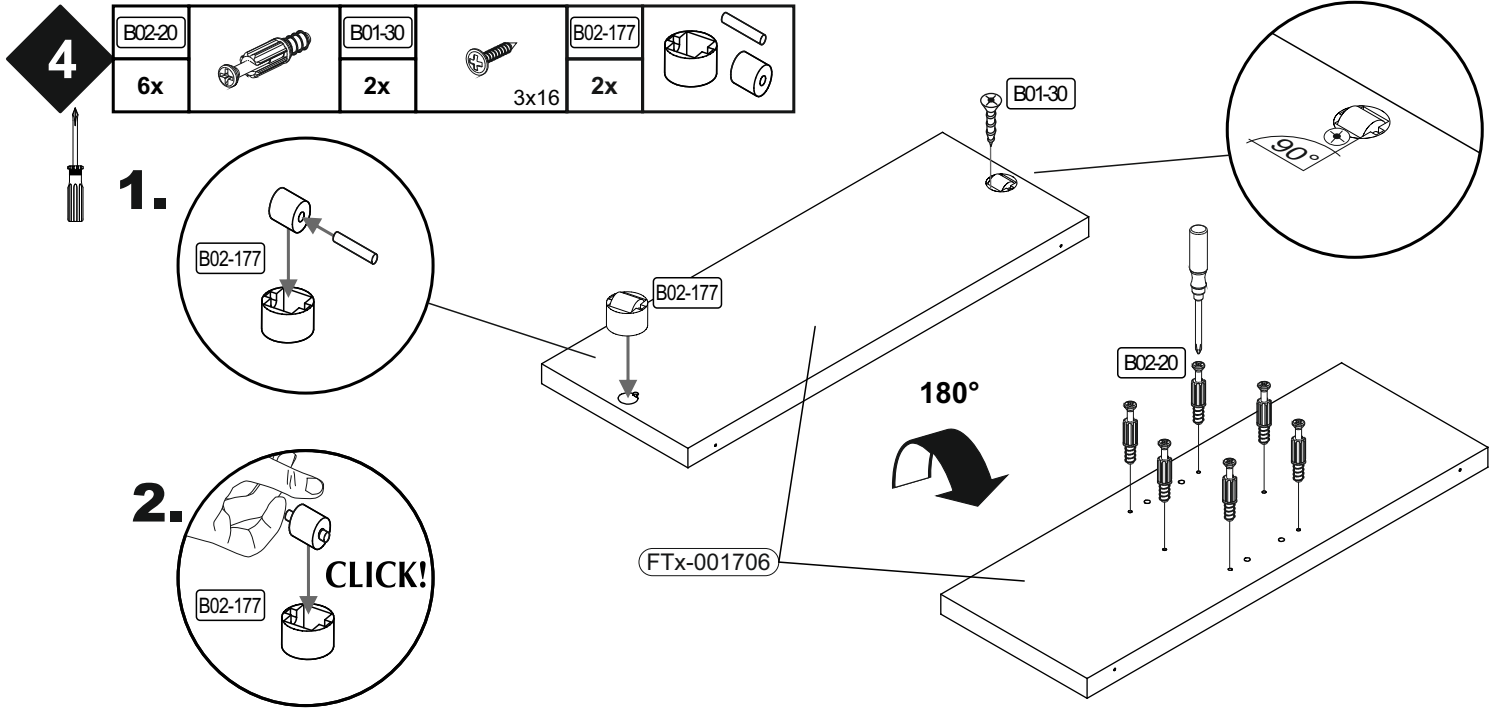

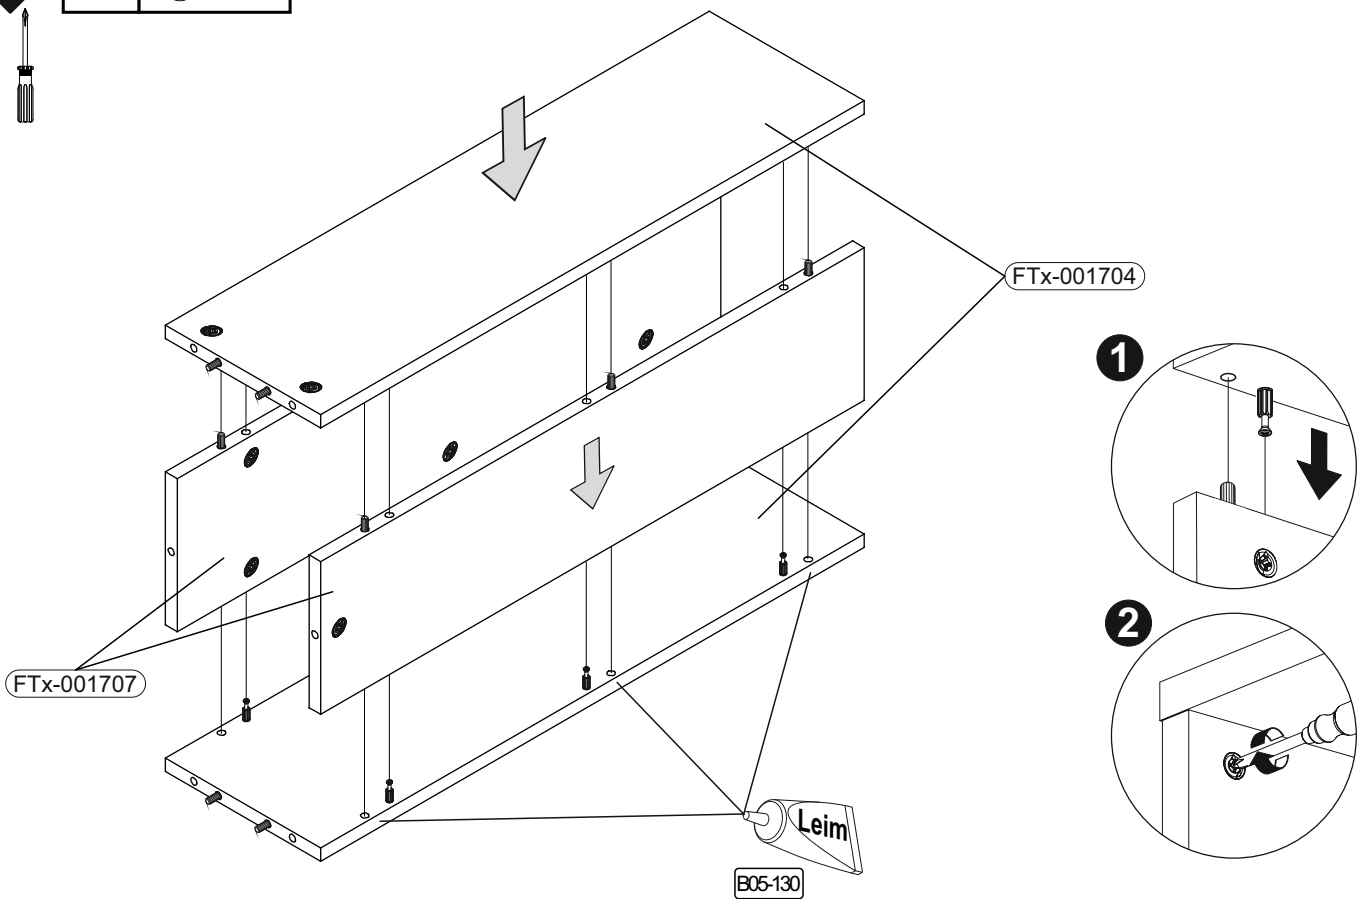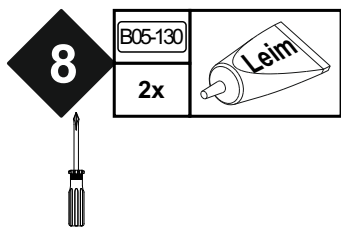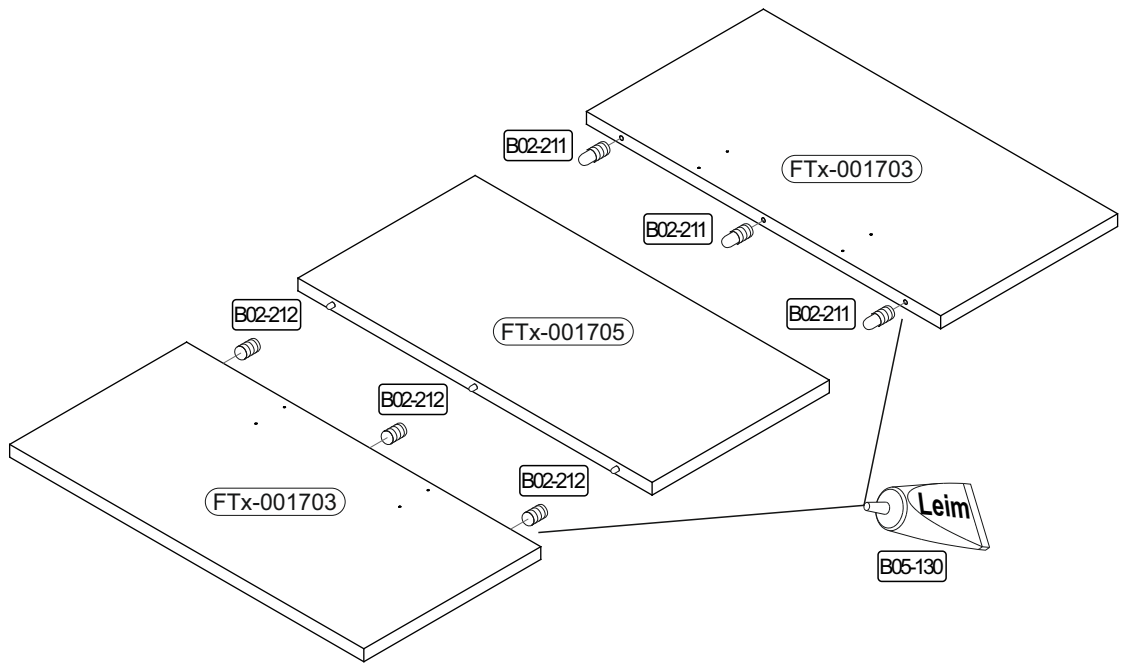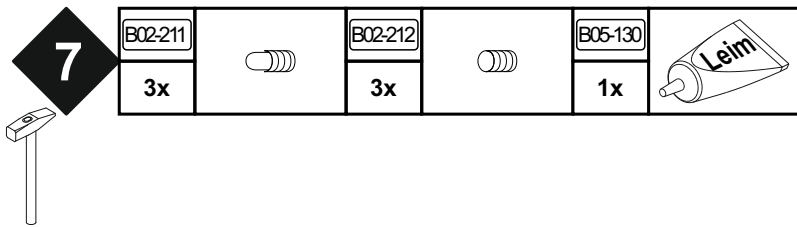

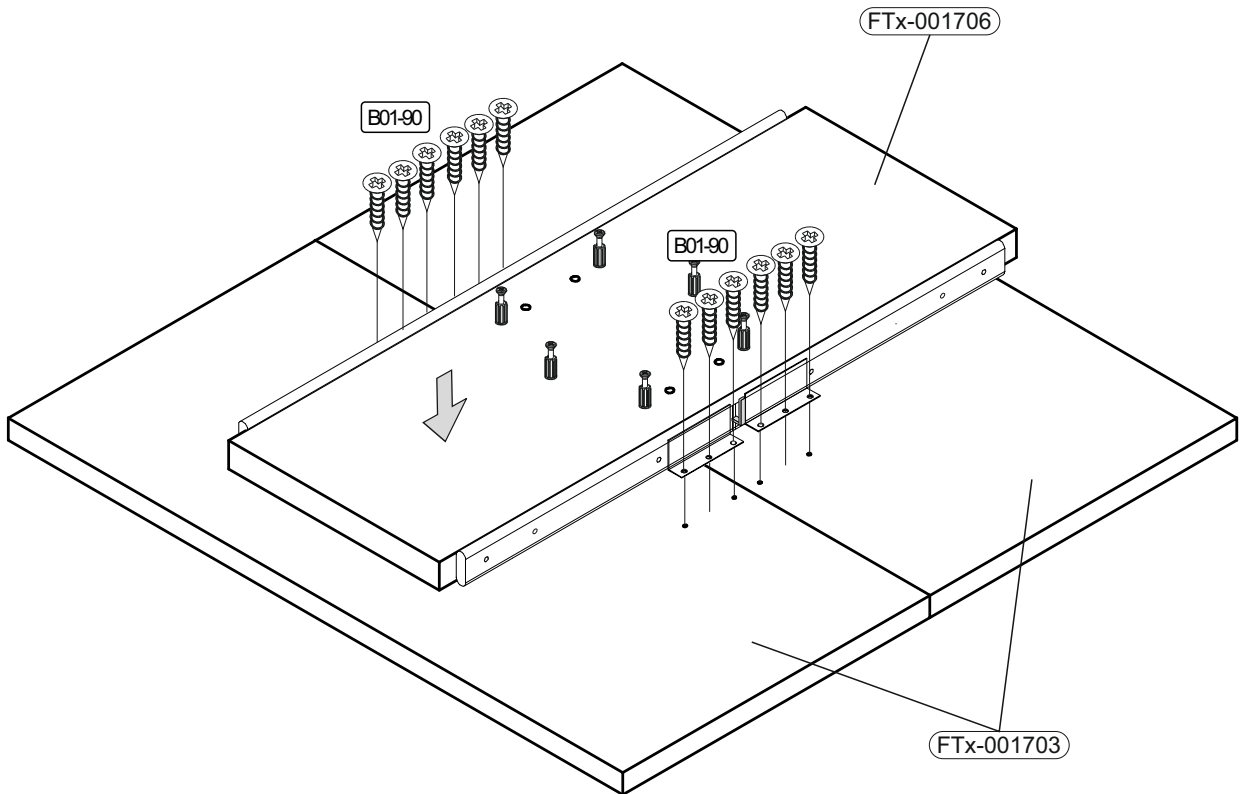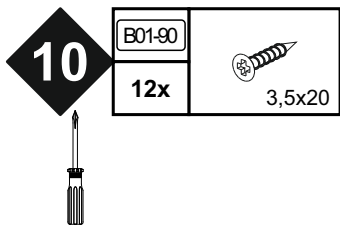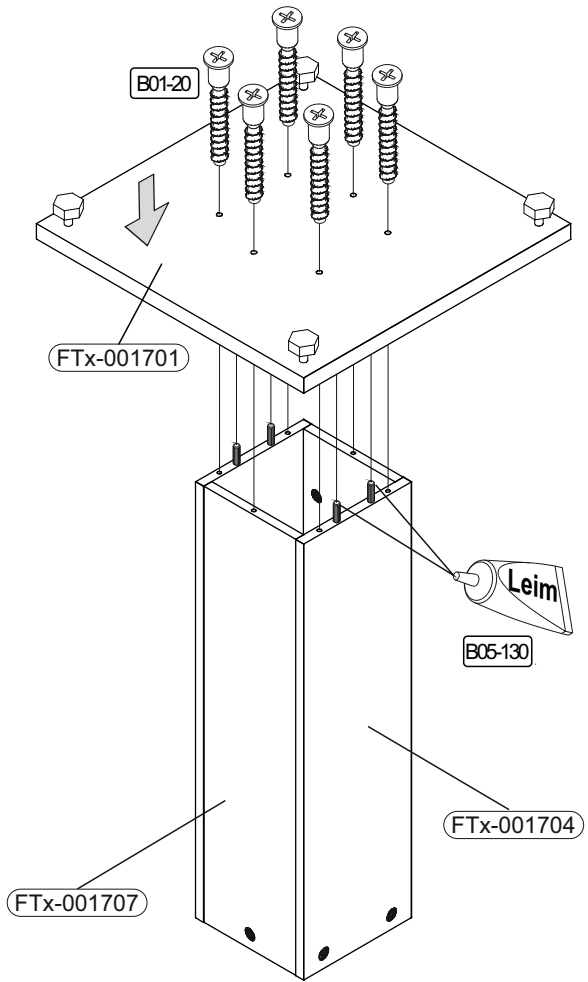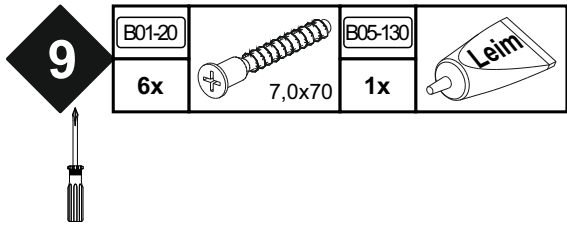

11

B05-130		B05-20	
1x		6x	

