

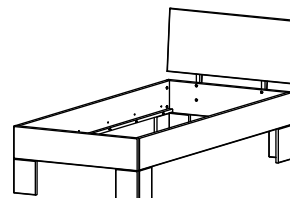
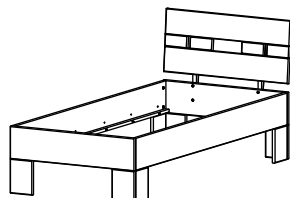
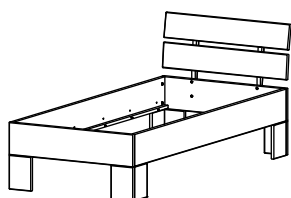


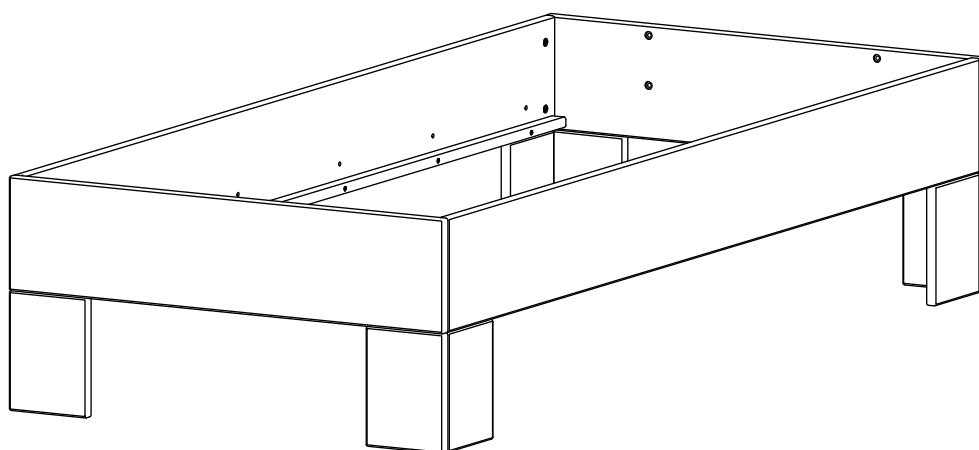





Progress / Zenna / NXT

90 x 200

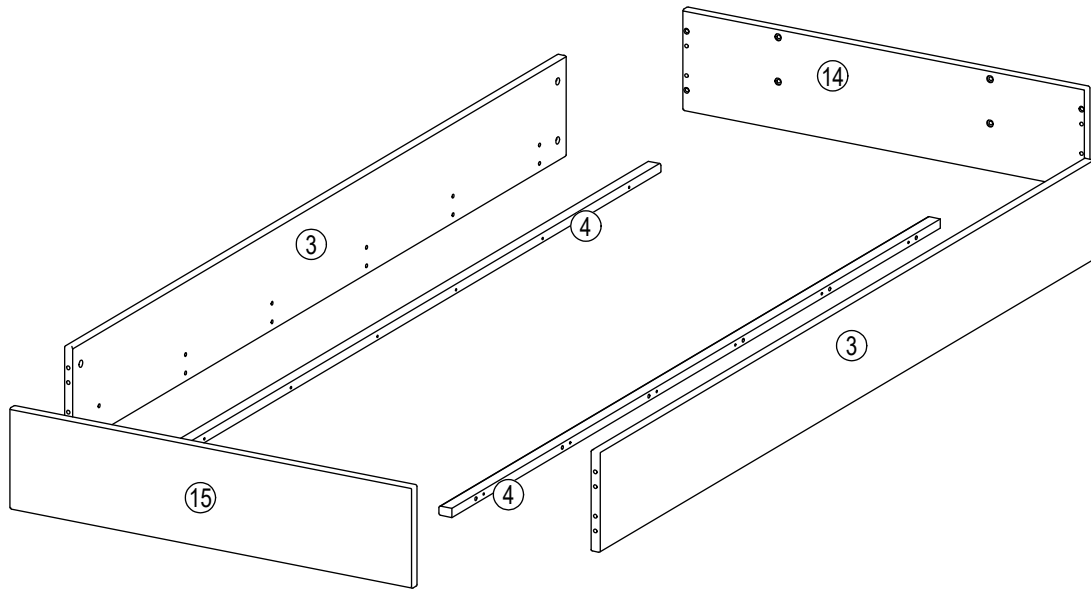


90 x 200 cm: 901 109 + 901 217





A24  12 x ø8 x 30mm	A28  8 x ø8 x 50mm	B01  8 x ø15 x 12,5mm	B14  8 x cc34, M6 x 7,8mm
D37  12 x ø4 x 45mm	Z04  1 x 4mm		

901 121


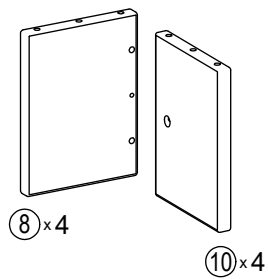


A28  32 x ø8 x 50mm	B01  4 x ø15 x 12,5mm	B10  4 x cc34, ø5 x 11mm
---	--	---



1

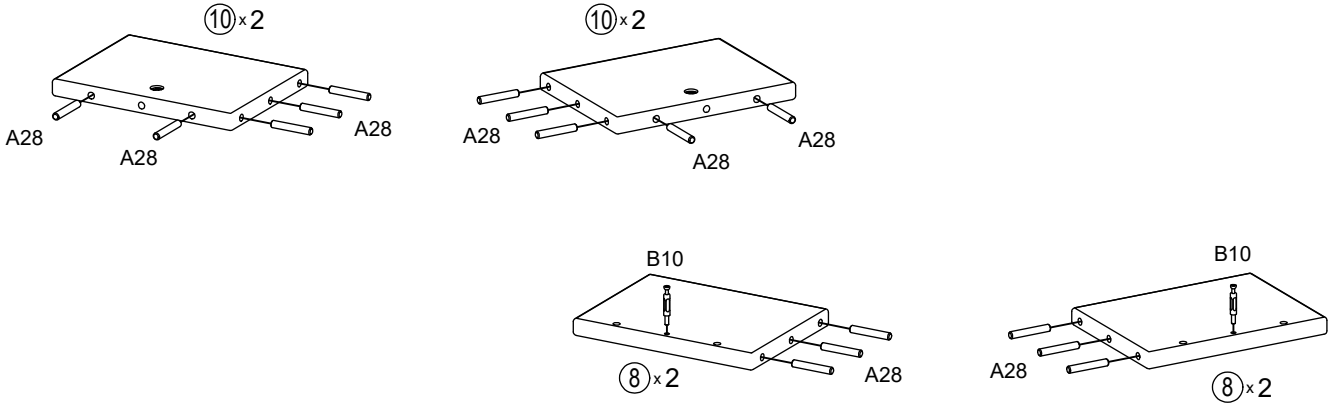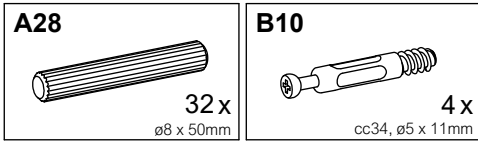



2

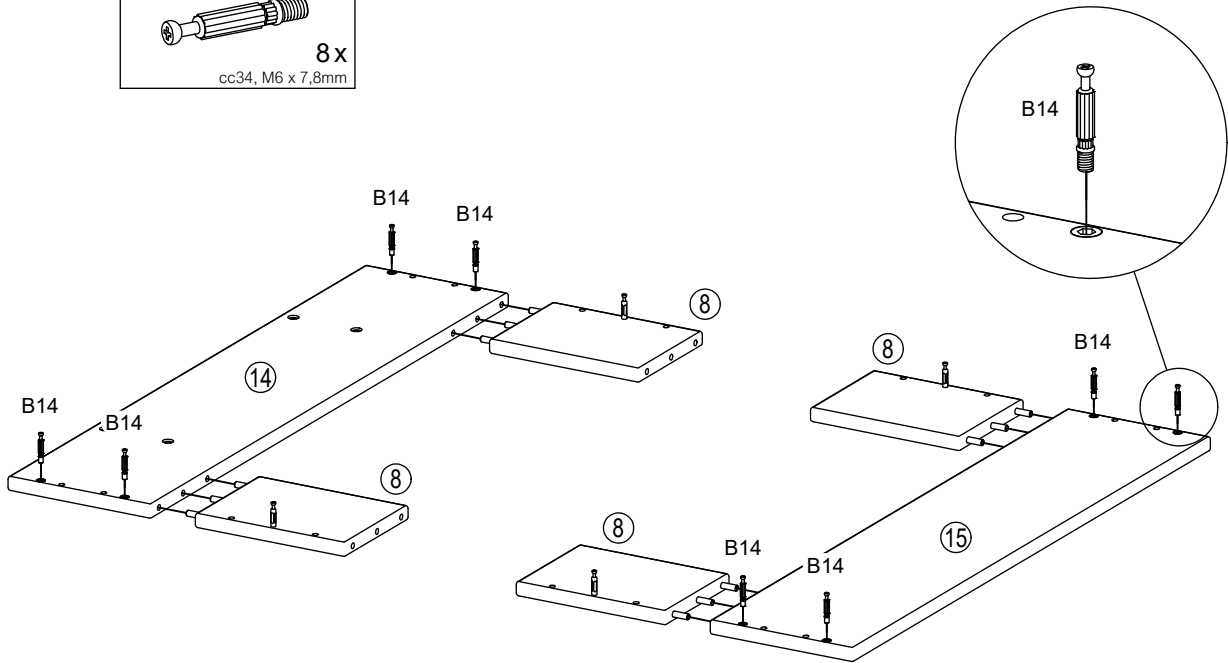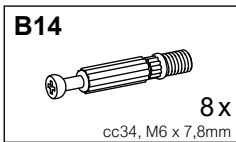



3

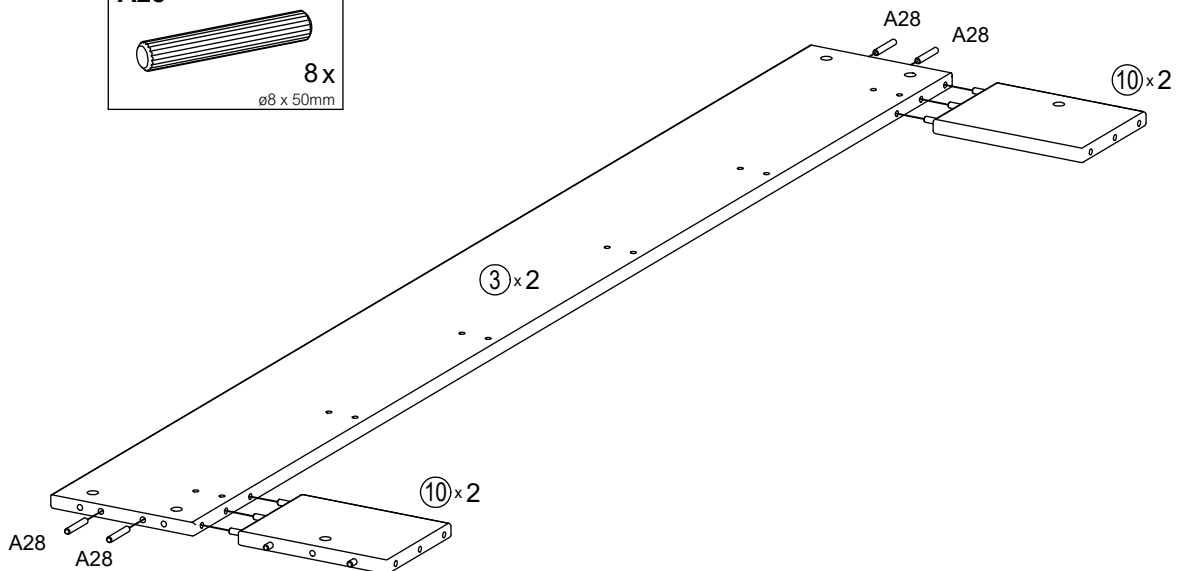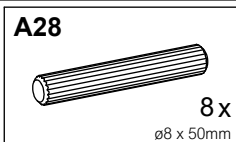



4

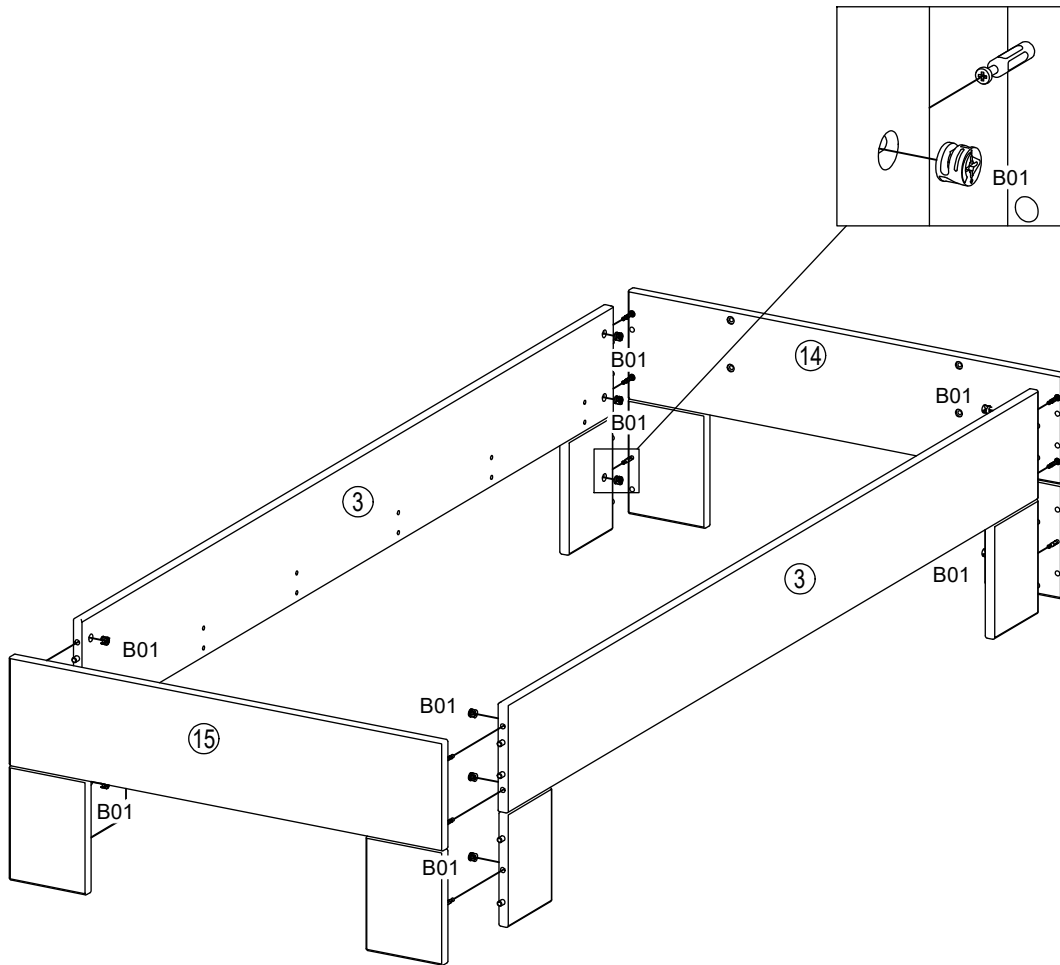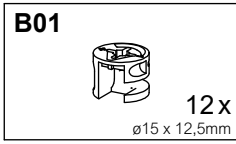


5

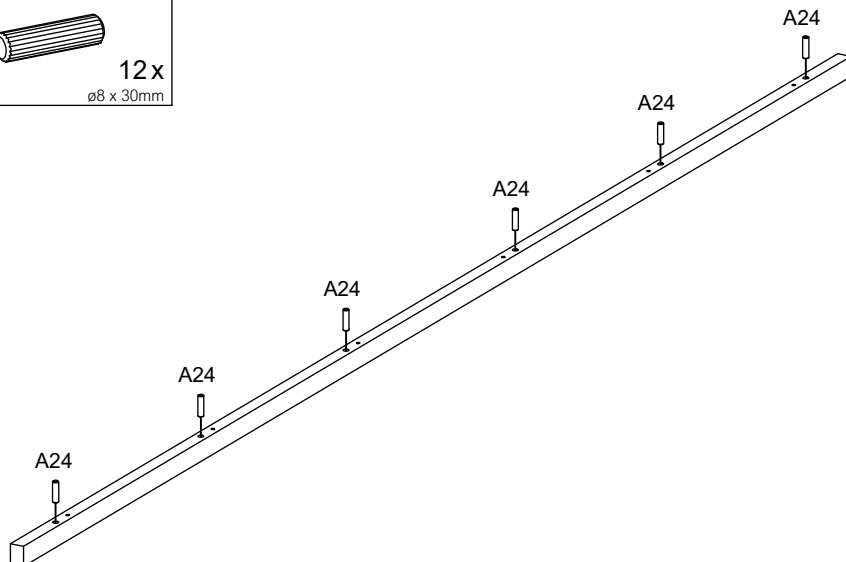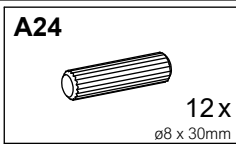


6

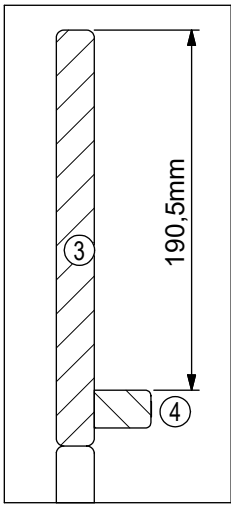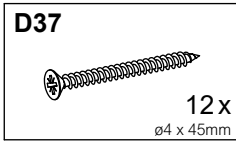


6A

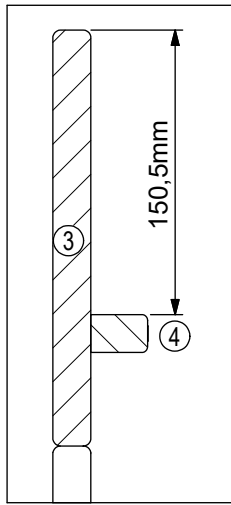


6B

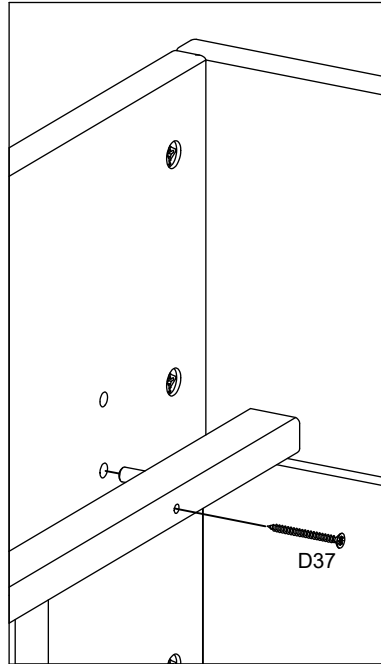

6A

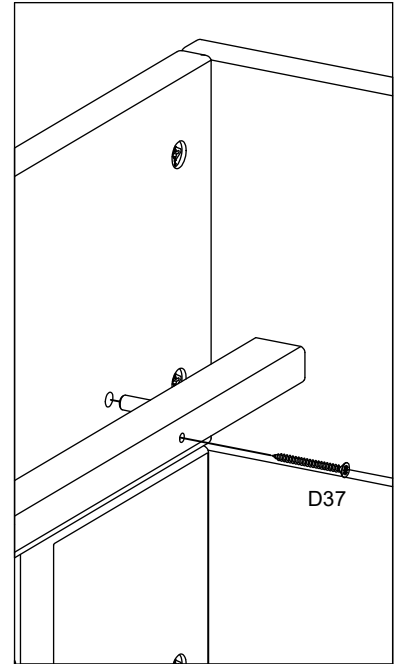

6B

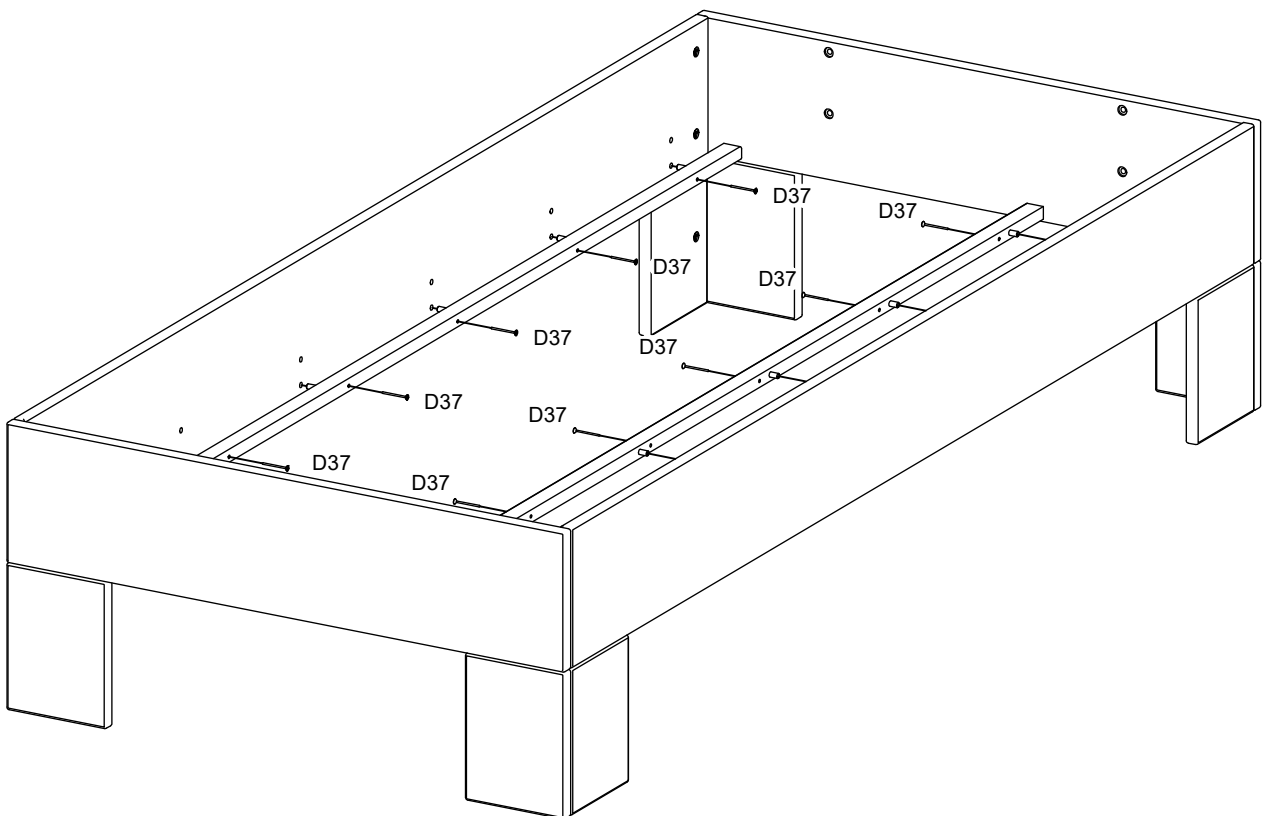

Progress / Zenna / NXT


901 309



901 314

901 316




901 318

901 320


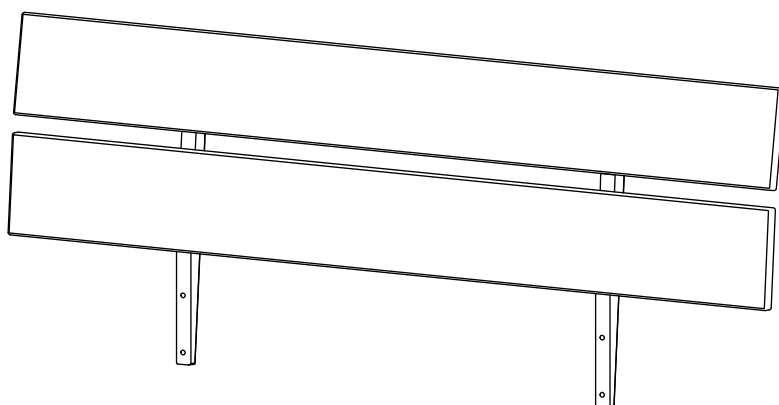


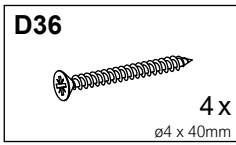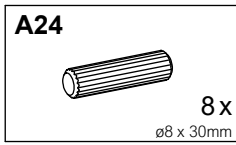



90cm: 901 309
140cm: 901 314
160cm: 901 316
180cm: 901 318
200cm: 901 320

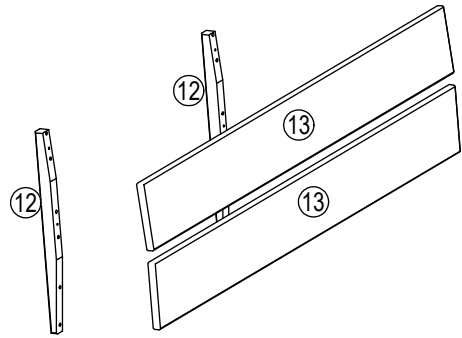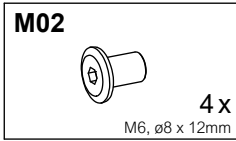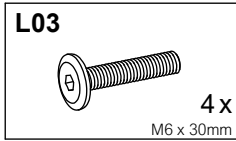

1

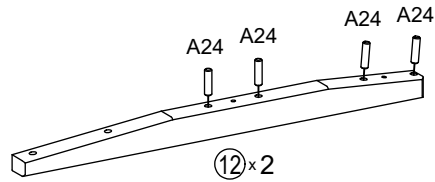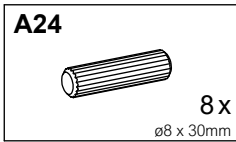

2

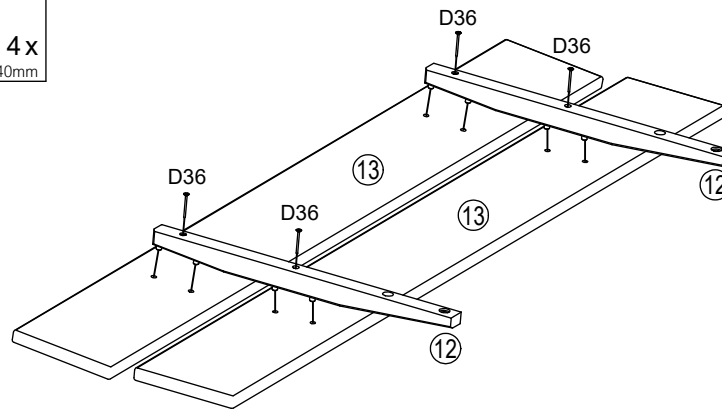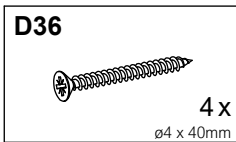

3

