
OVA LUCE

1 2 OFF


ON

Unplug it from power

Turn off the Switch

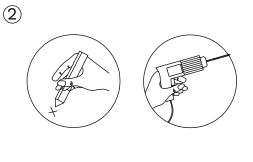


Mark & drill holes

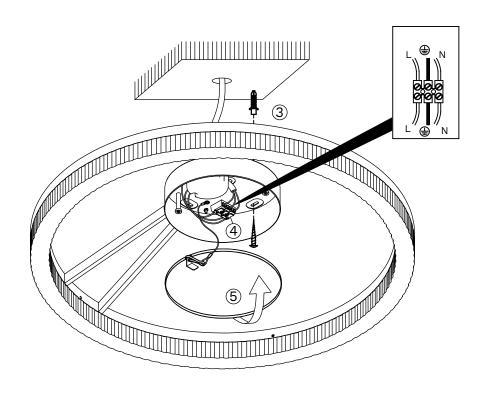

- (3) Apply screws
- **4** Connect wires
- **(5)** Apply the cap



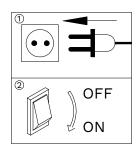

Plug it in power

Turn on the Switch