



Buffet Cabinet Sideboard

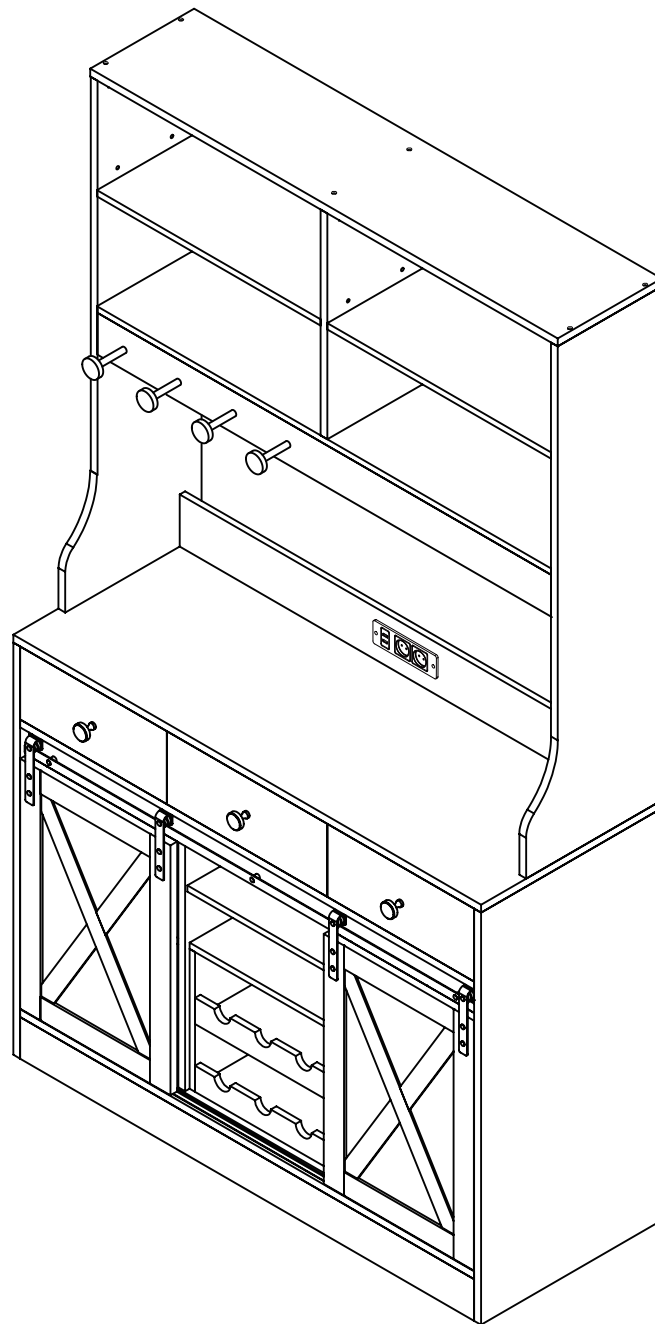

V2.0

DJ503260




















PRODUCT ASSEMBLY

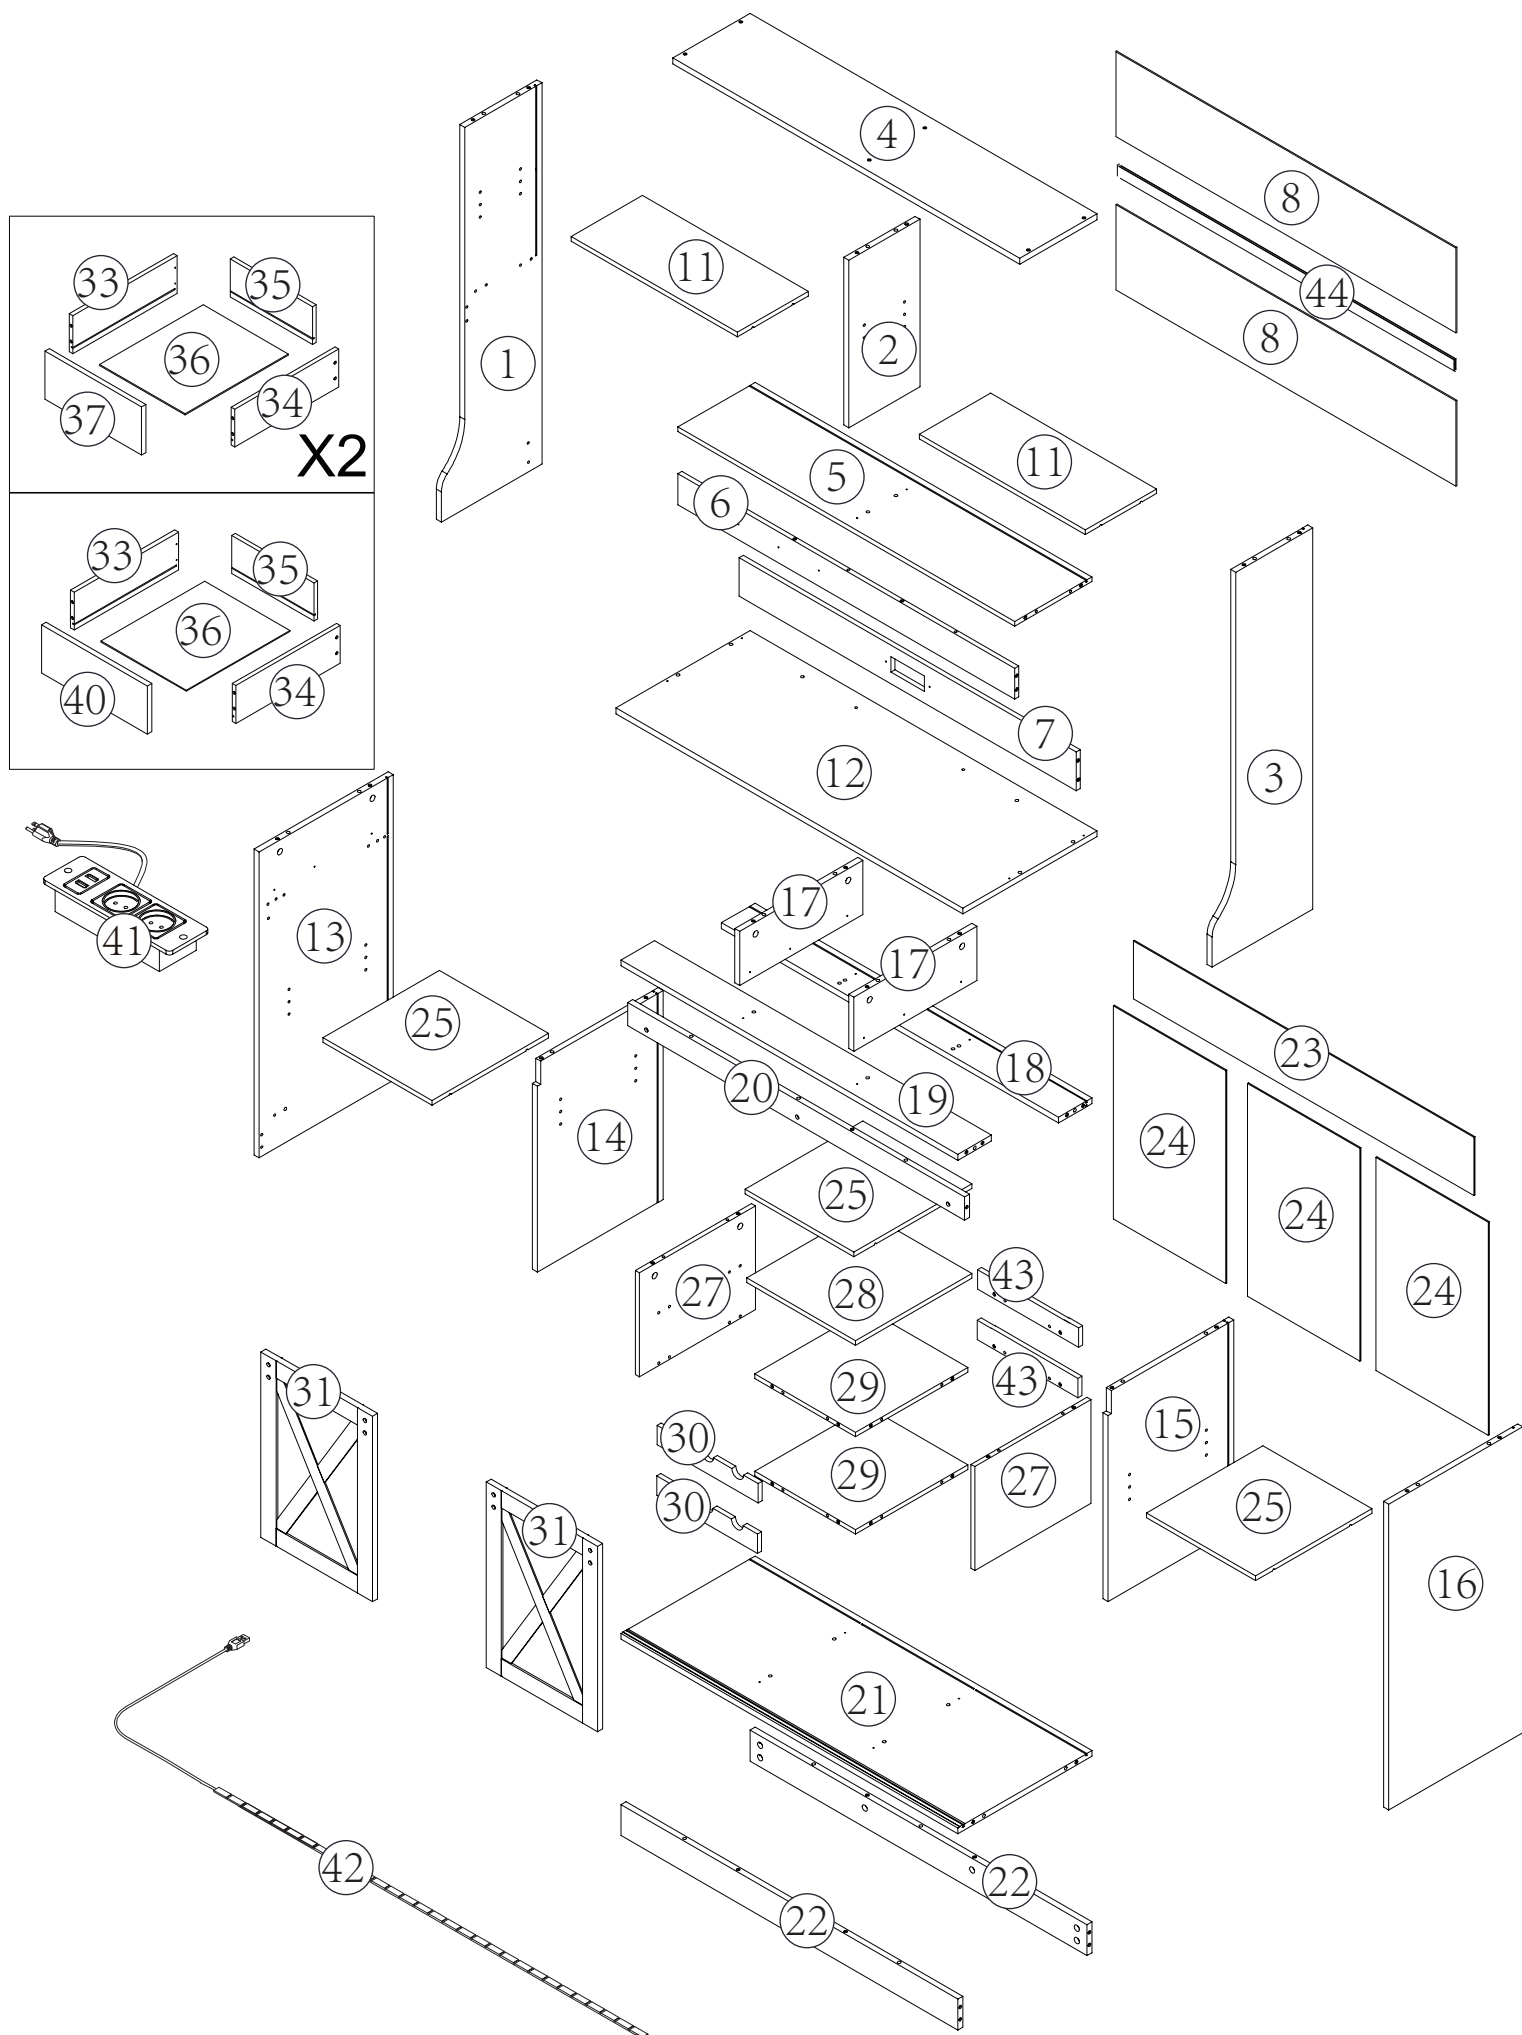

Components - Fittings


Please check you have all the panels listed below

Note: The quantitie below are the correceet amount to complete the assembly. In some cases more fittings may be supplied than are required.


A		85 pcs +5 pcs	B		85 pcs +5 pcs
C		81 pcs +5 pcs	D		20 pcs +2 pc
E		37 pcs +3 pcs	F		20 sets +2 sets
G		3 sets	H		8 pcs
I		4 pcs	J		2 sets
K		1 pc	L		4 pcs
M		4 pcs	N		3 pcs
O		8 pcs	P		2 pcs
Q		20 pcs	R		1 pc
S		4 sets	T		12 pcs
CL		3 pcs	DL		3 pcs
CR		3 pcs	DR		3 pcs
		1 pc			

PRODUCT ASSEMBLY


Step 1

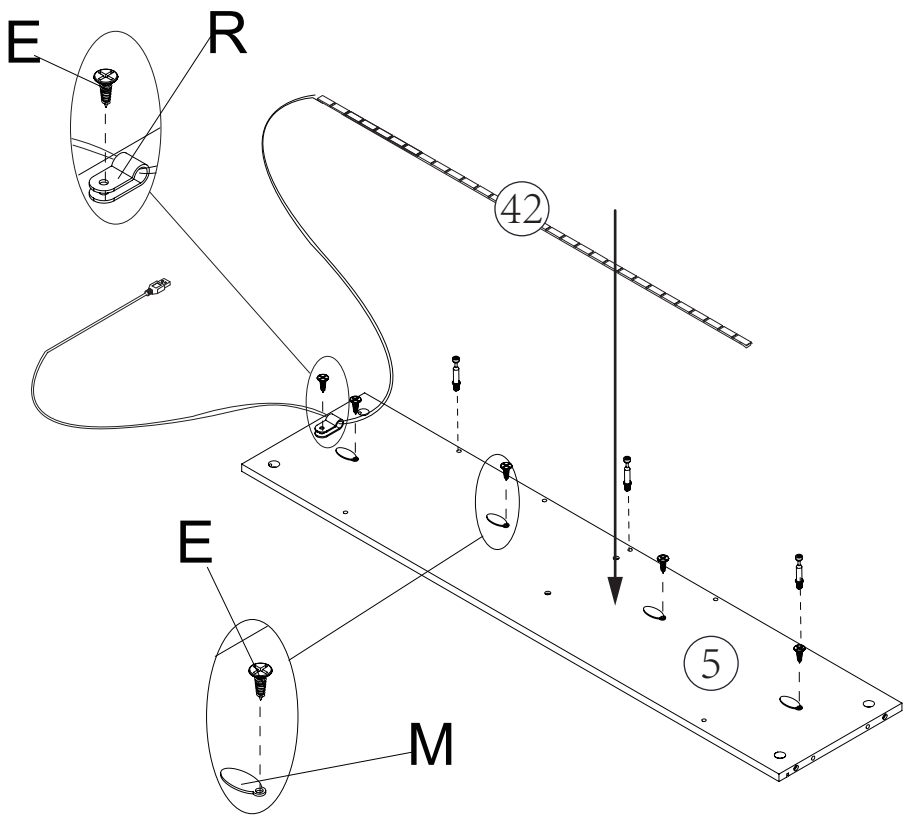

A		3 pcs
E		5 pcs
M		4 pcs
R		1 pc

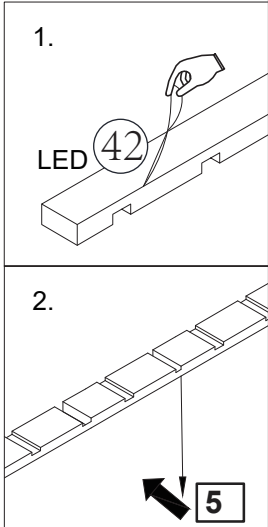

Step 2

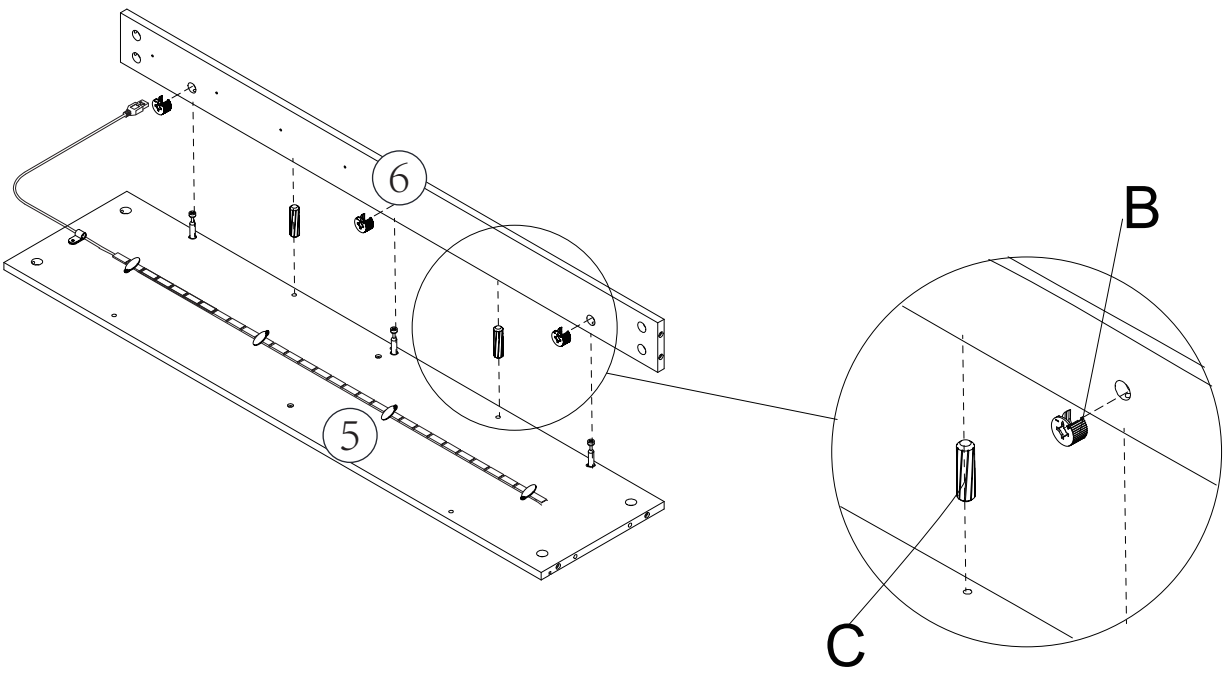


B		3 pcs
C		2 pcs

PRODUCT ASSEMBLY


J  2 sets

Step 3

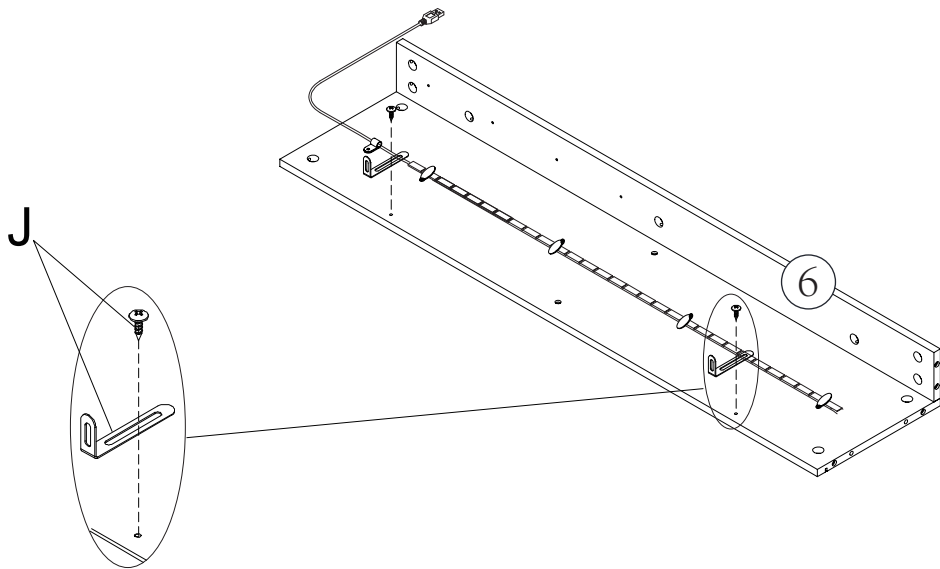

S  4 sets


Step 4

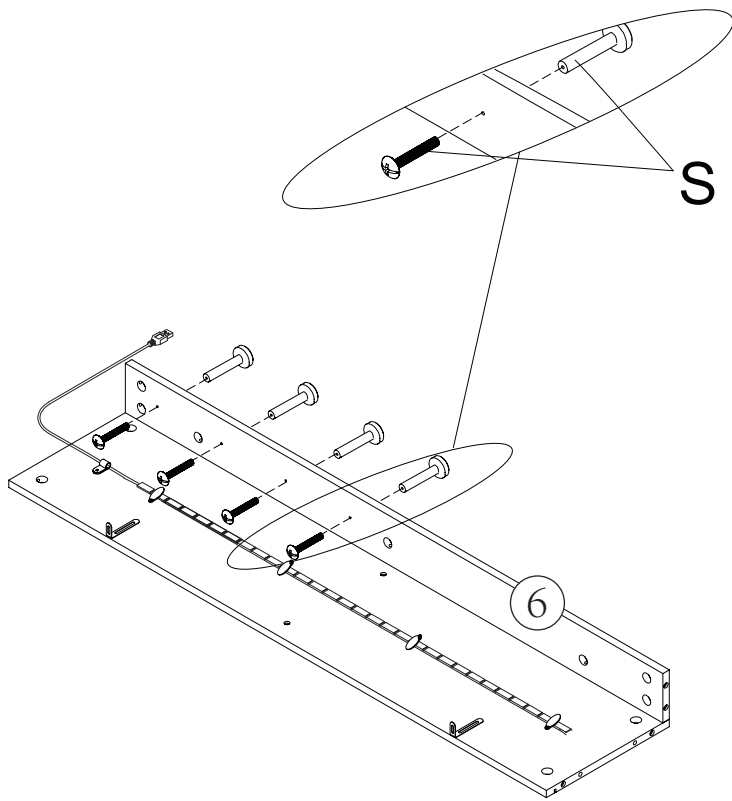

PRODUCT ASSEMBLY


Step 5

C		2 pcs
T		2 pcs
		1 pc

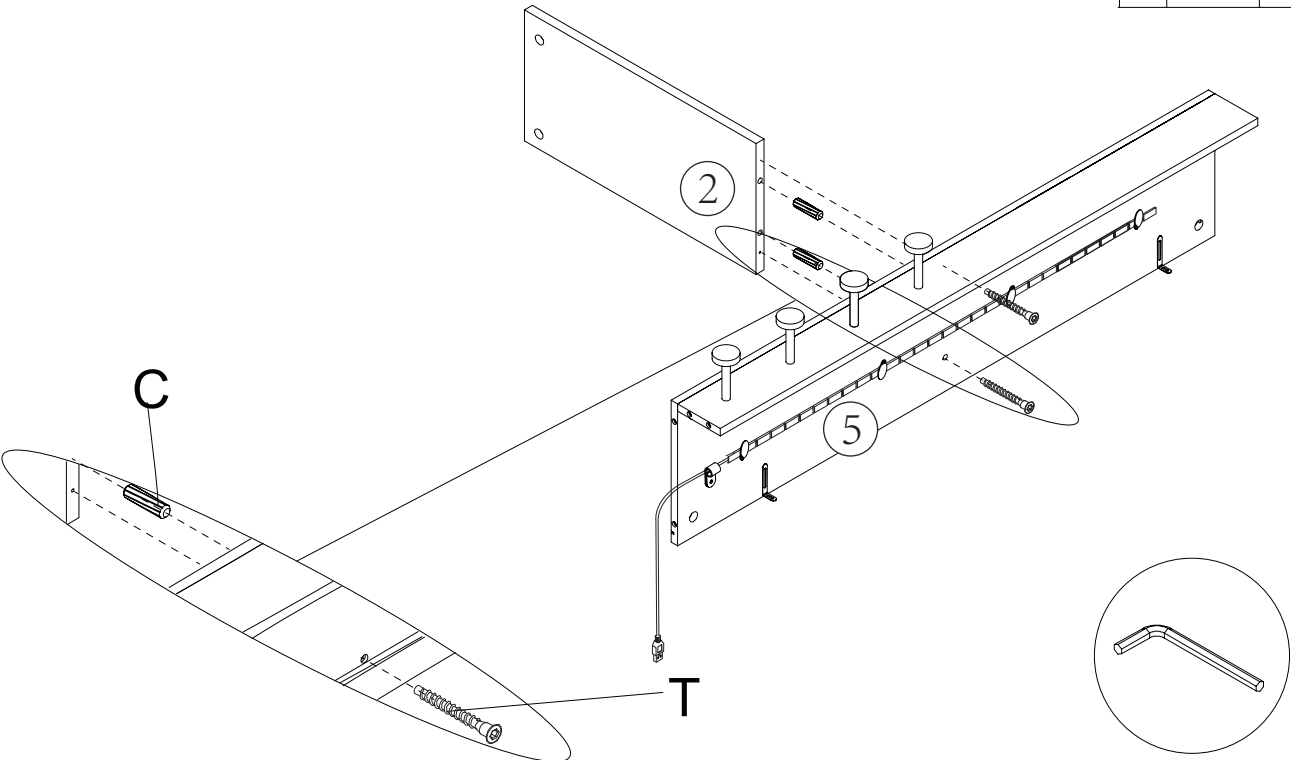


Step 6

A		12 pcs
---	---	--------

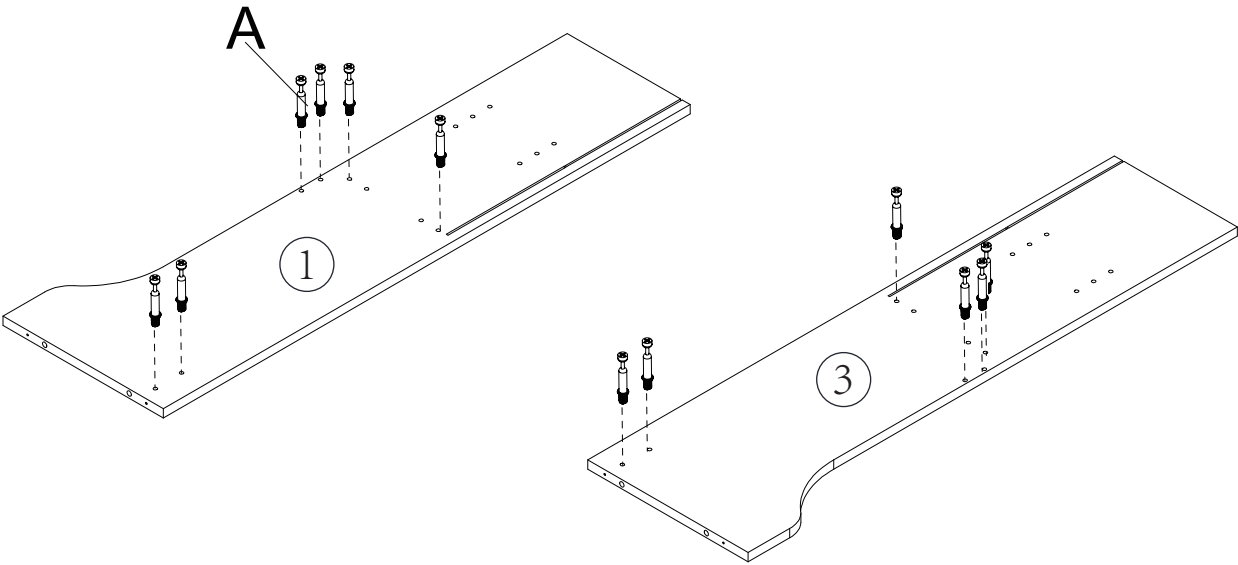


PRODUCT ASSEMBLY

Step 7

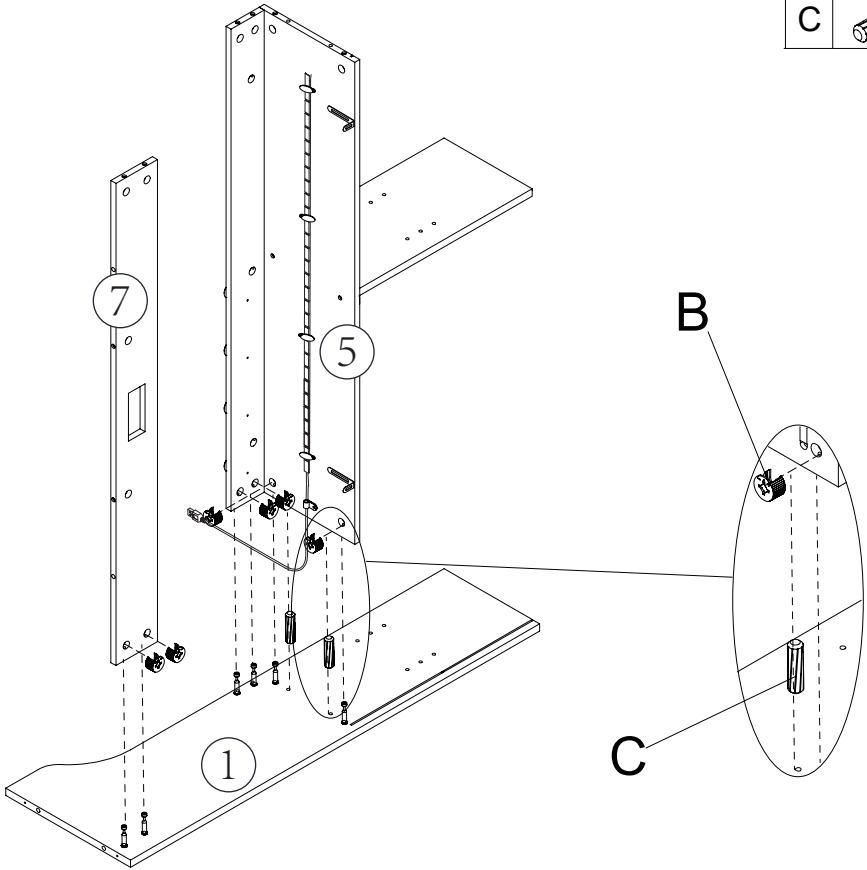

B		6 pcs
C		2 pcs


Step 8

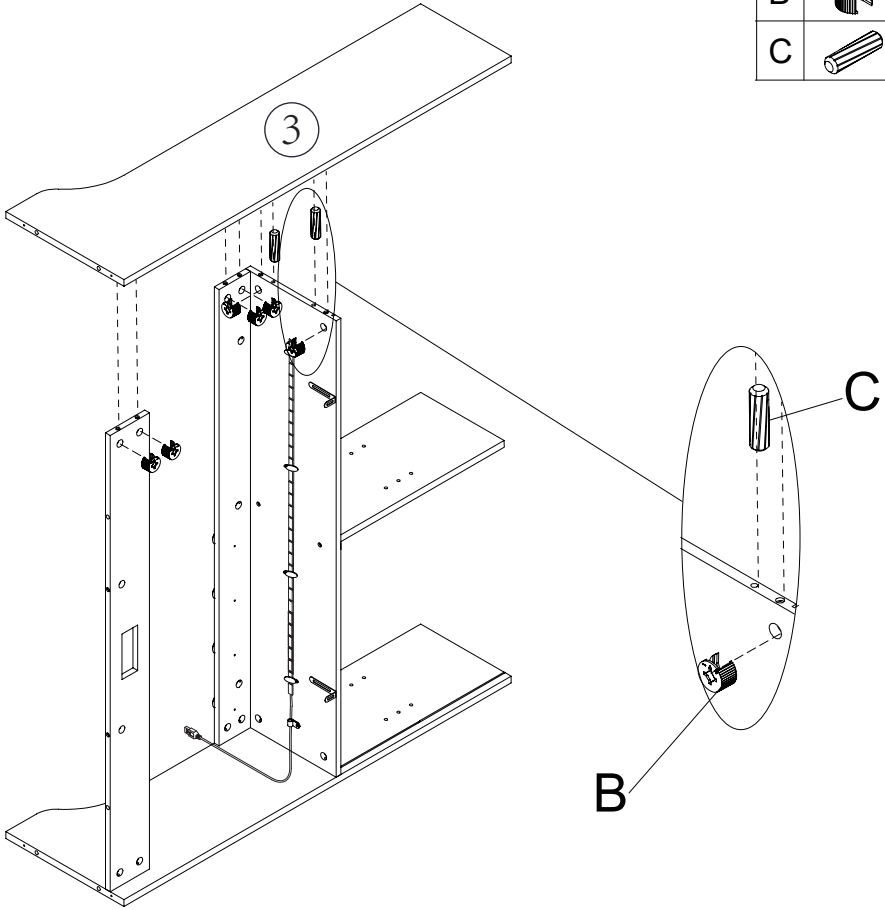

B		6 pcs
C		2 pcs


PRODUCT ASSEMBLY

Step 9

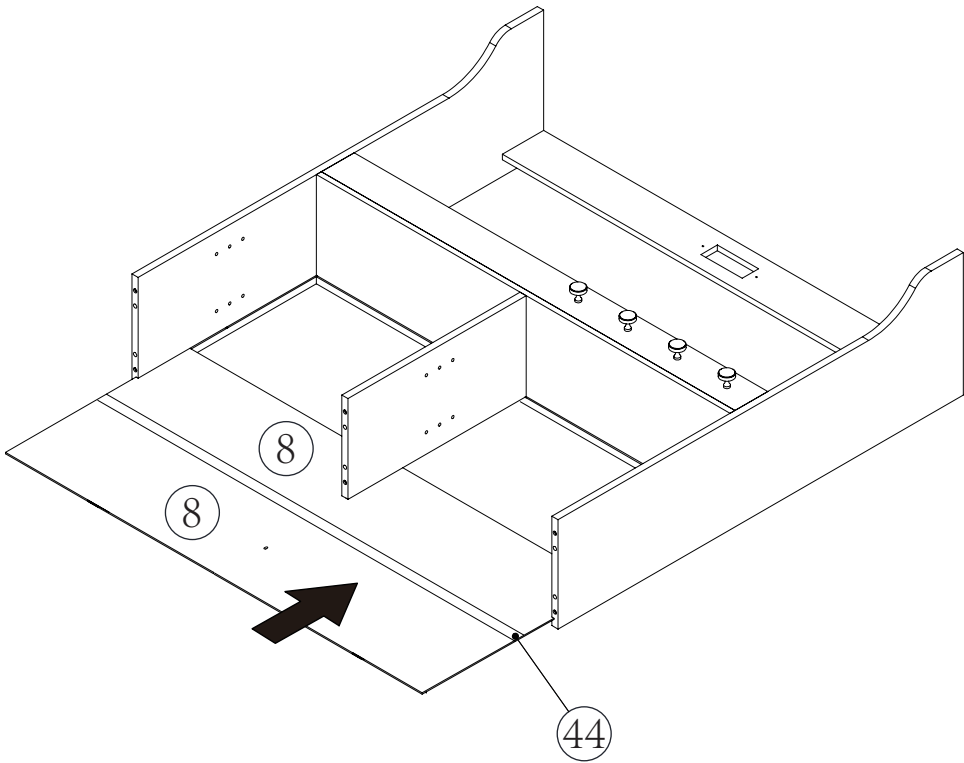

Step 10


T		6 pcs
C		6 pcs

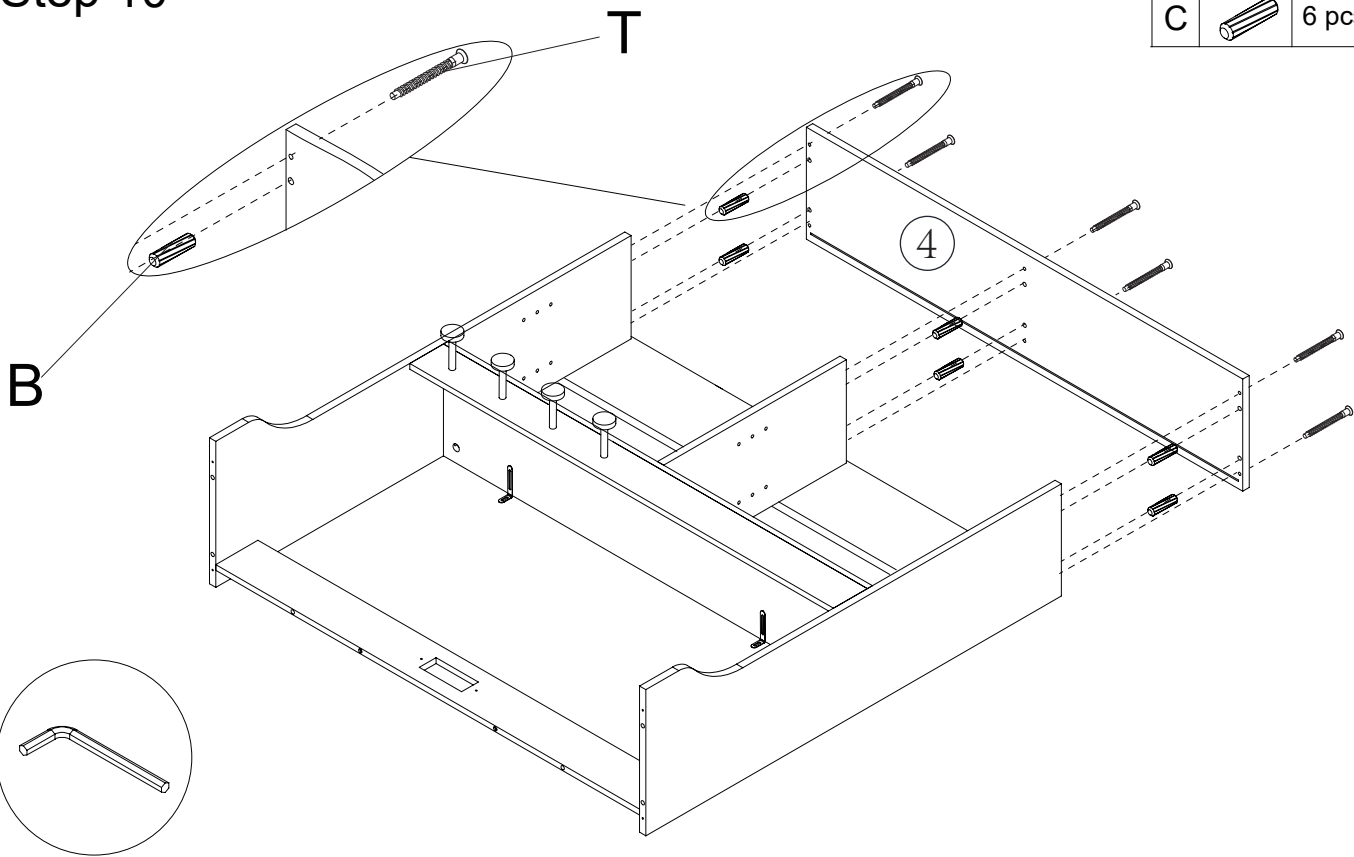

PRODUCT ASSEMBLY



Step 11

A		10 pcs
---	---	--------

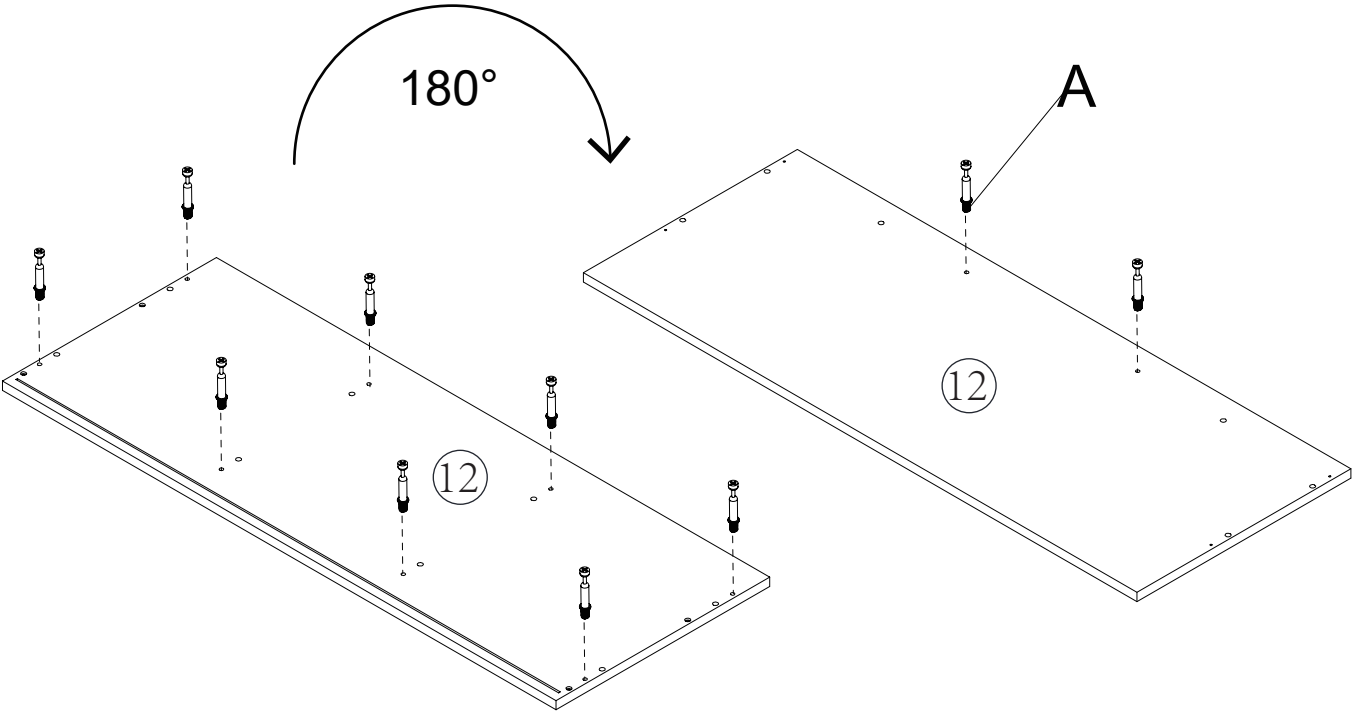


Step 12

B		2 pcs
C		6 pcs
T		4 pcs

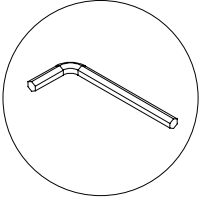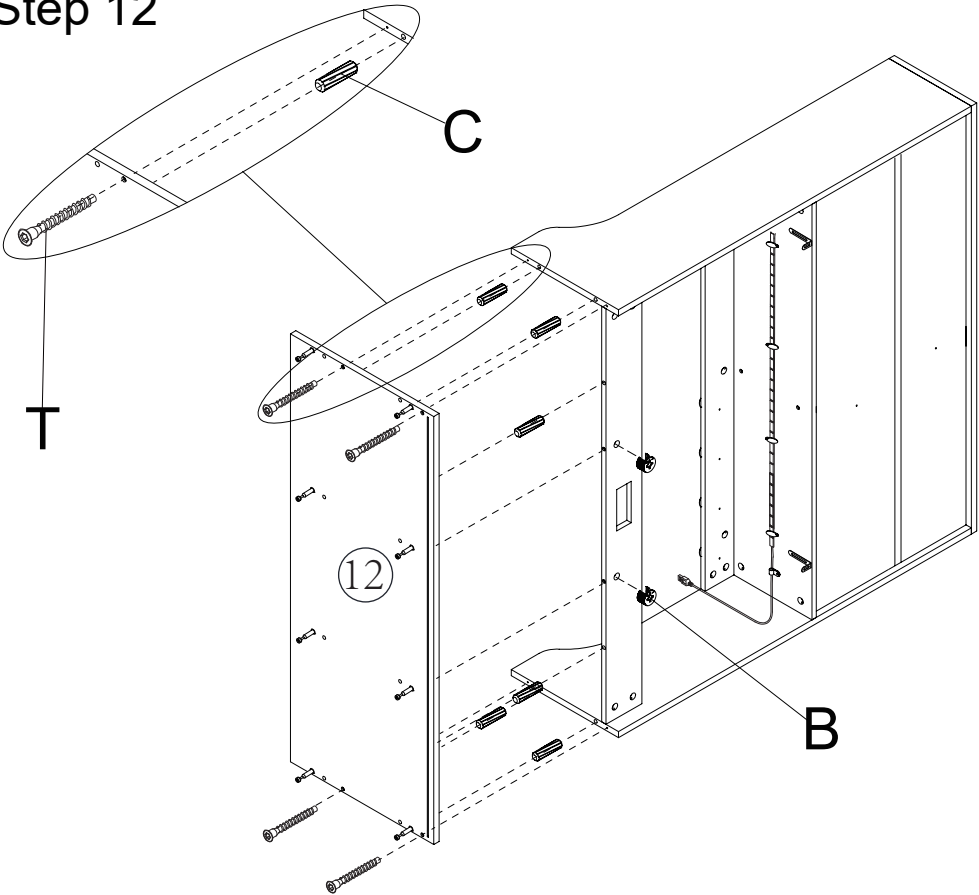


PRODUCT ASSEMBLY


Step 13

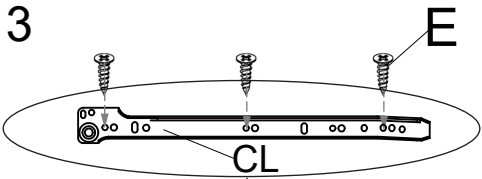

E		12 pcs
CL		2 pcs
CR		2 pcs

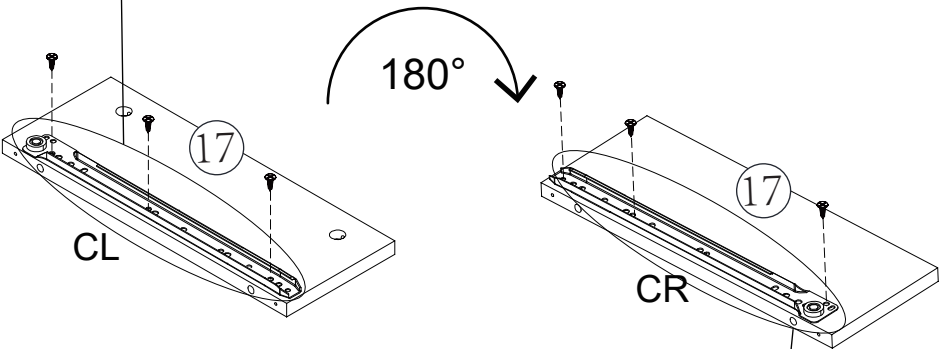


X2

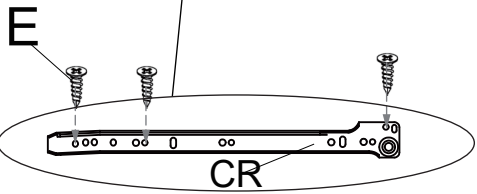

Step 14

C		4 pcs
D		4 pcs


Please pay attention
to the installation direction

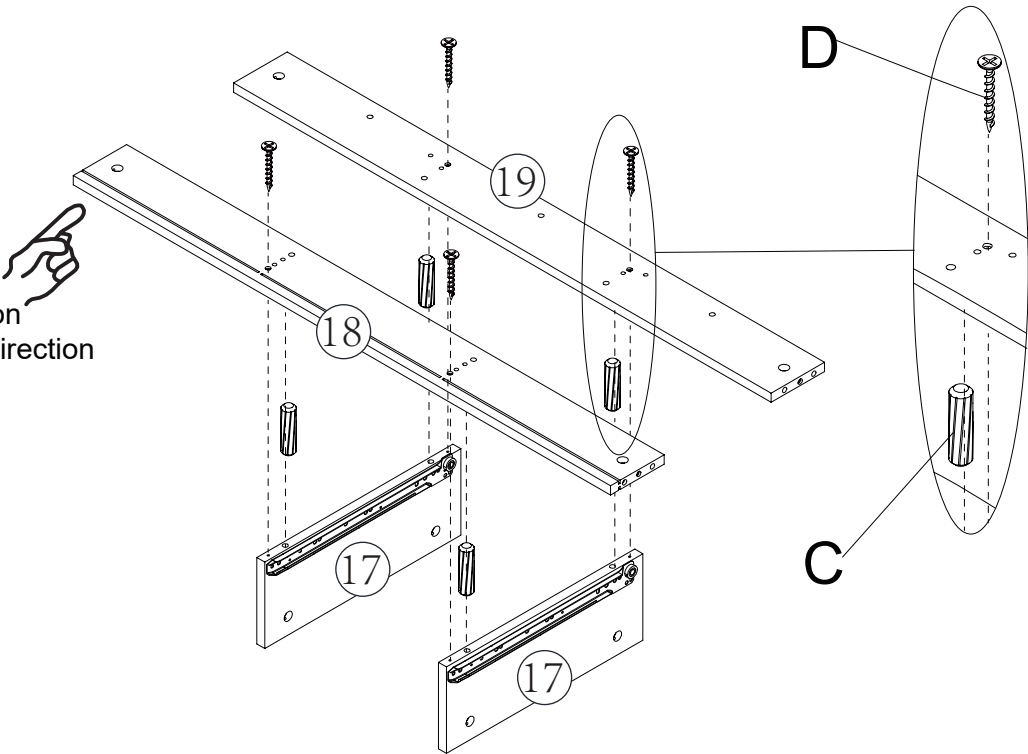

PRODUCT ASSEMBLY


Step 15

N		3 pcs
K		1 pc

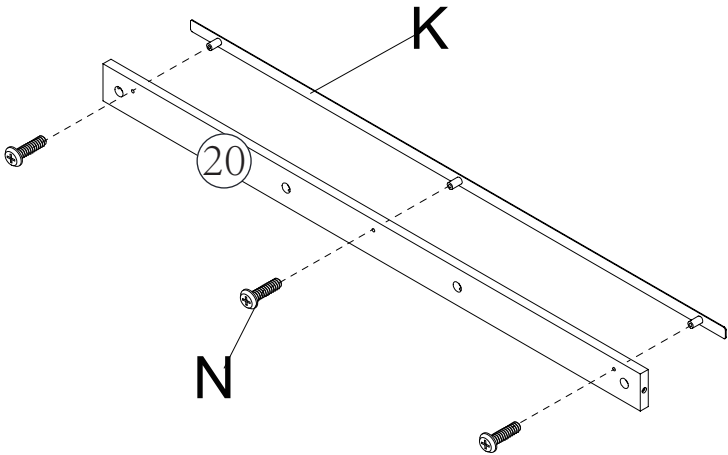

Step 16

A		6 pcs
B		2 pcs
C		3 pcs

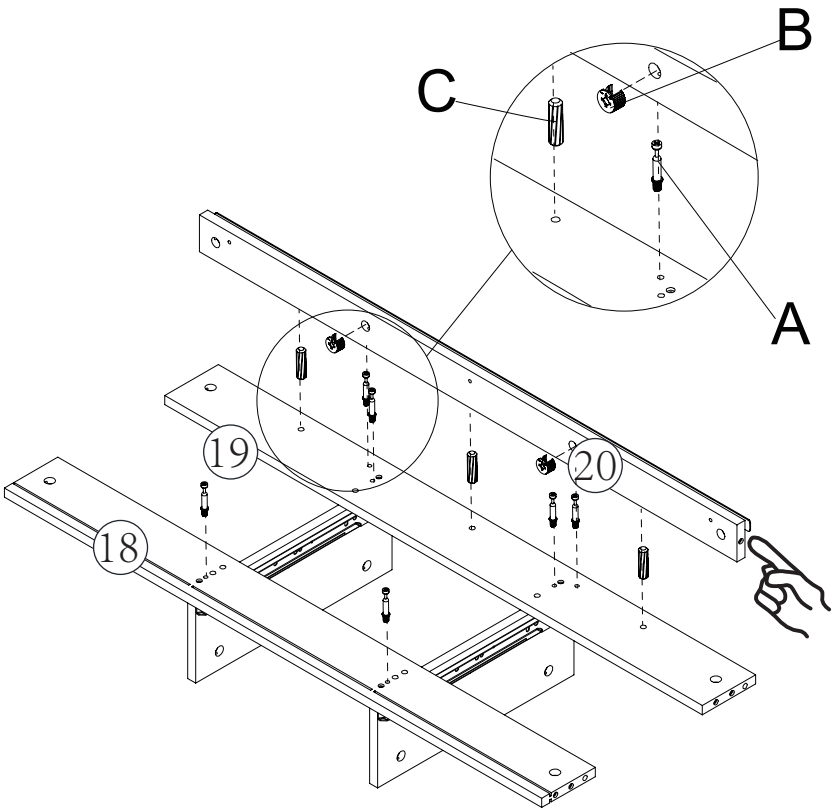


Please pay attention
to the installation direction


PRODUCT ASSEMBLY

Step 17

B		4 pcs
C		4 pcs

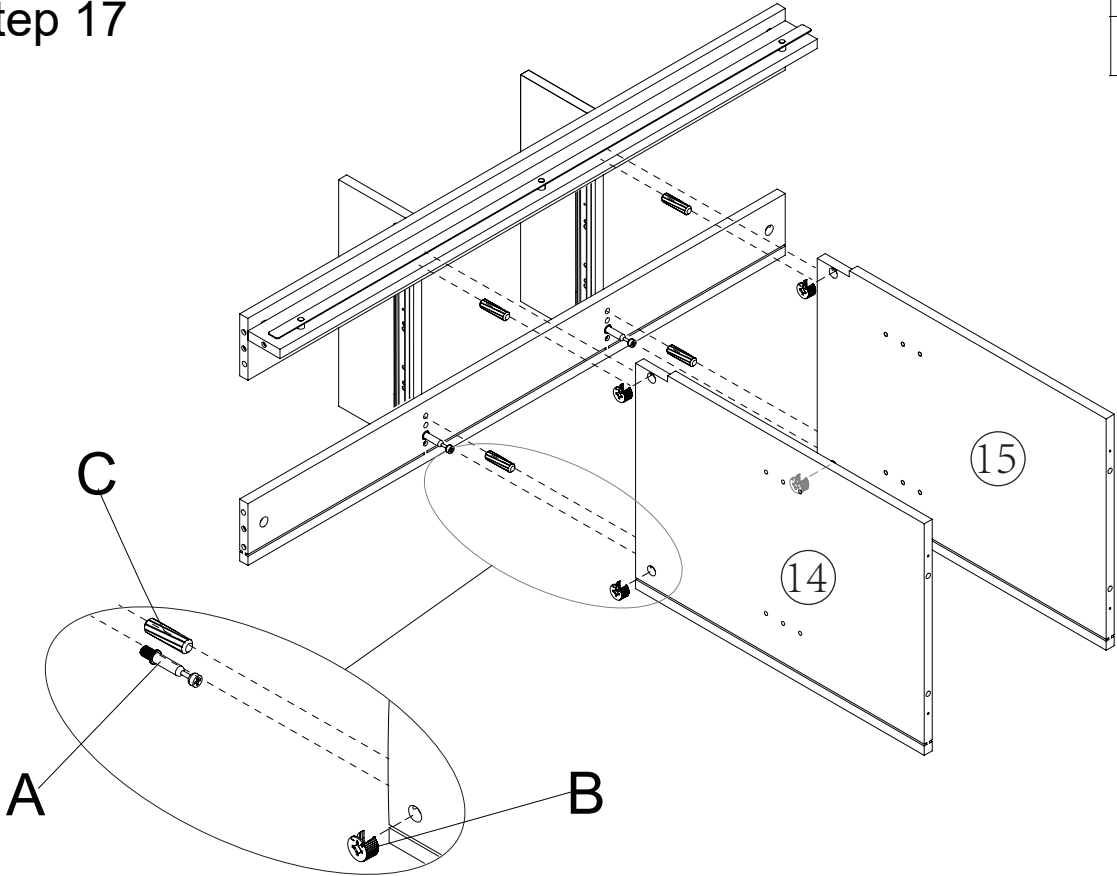


Step 18

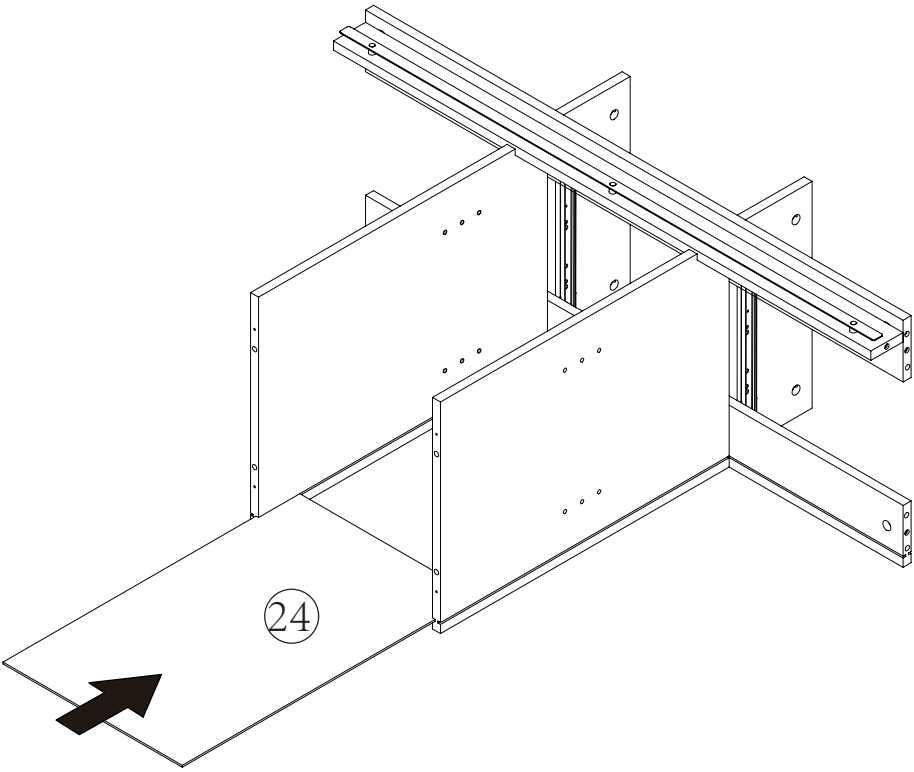

PRODUCT ASSEMBLY


Step 19

A		4 pcs
B		4 pcs
C		6 pcs

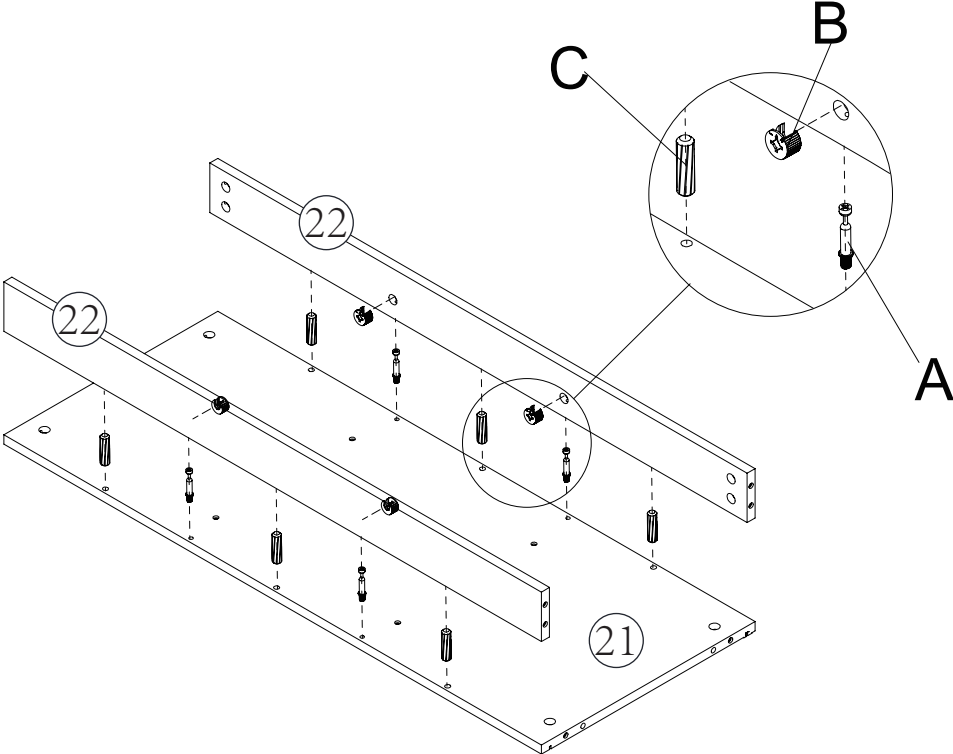


Step 20

C		4 pcs
D		4 pcs

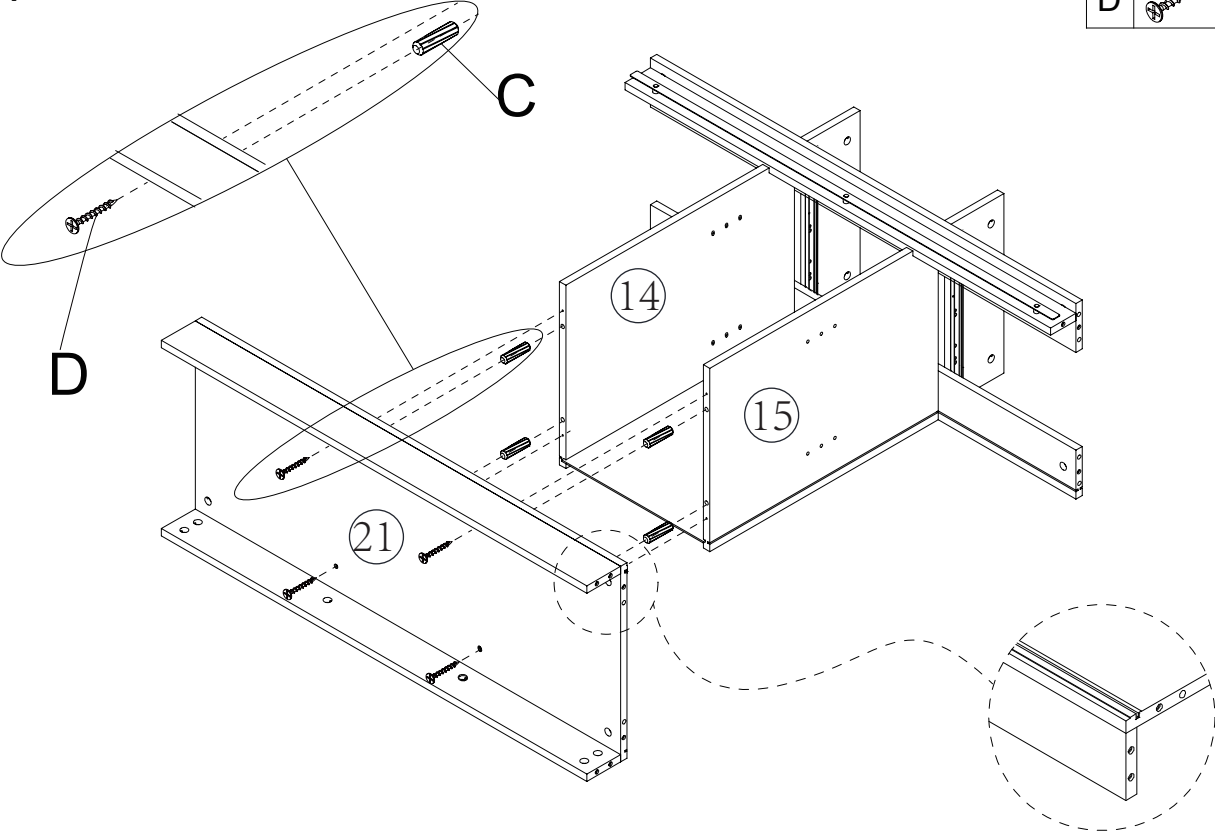


PRODUCT ASSEMBLY

Step 21

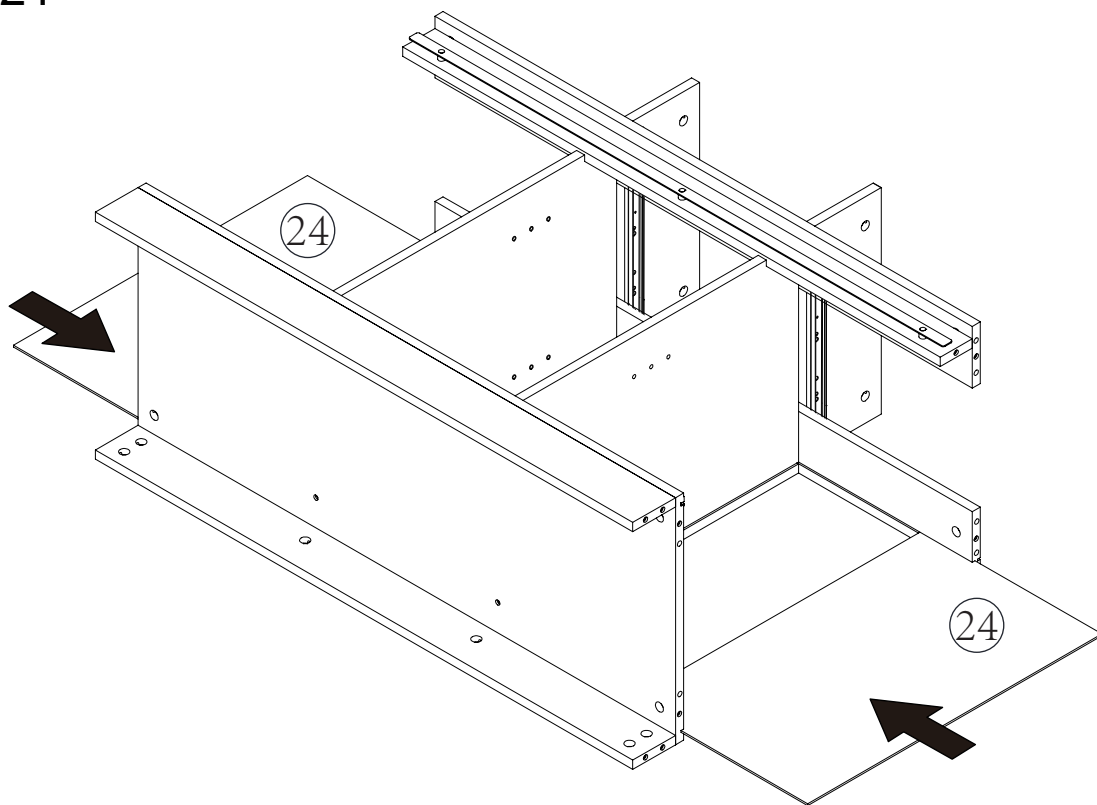


Step 22

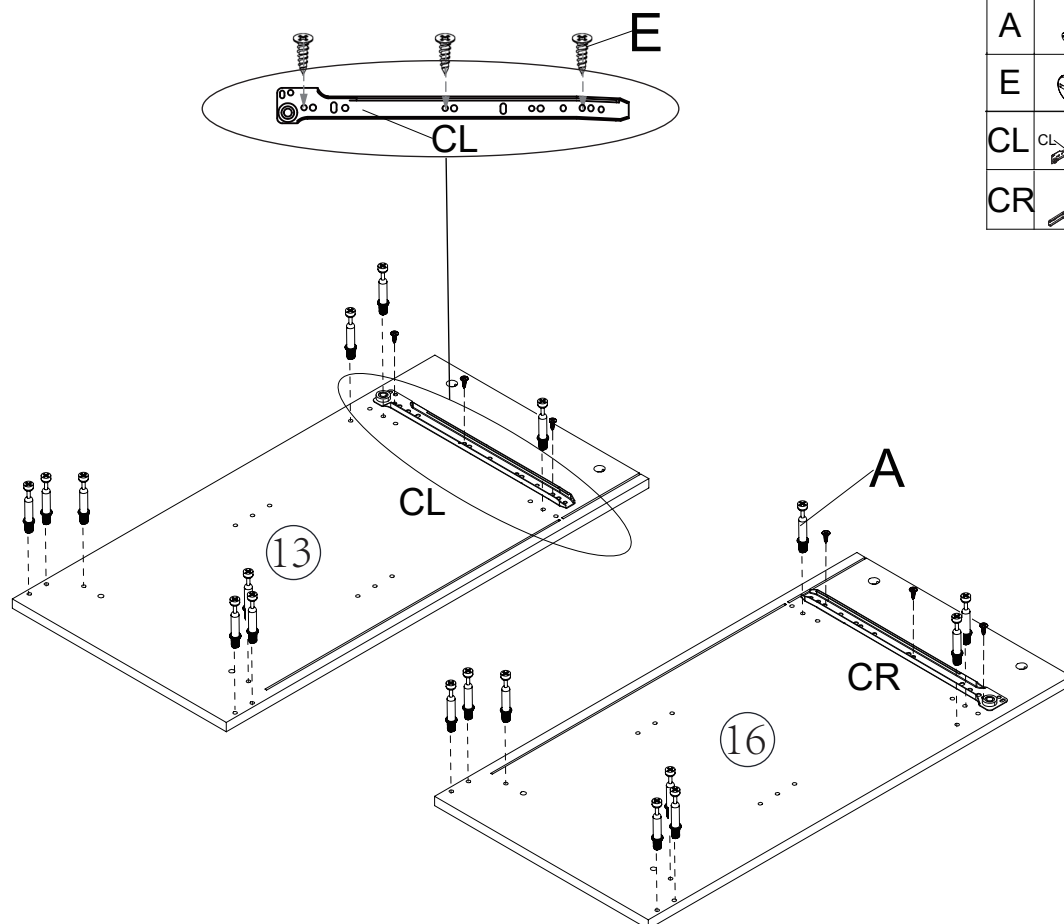


PRODUCT ASSEMBLY

Step 23

B		18 pcs
C		12 pcs

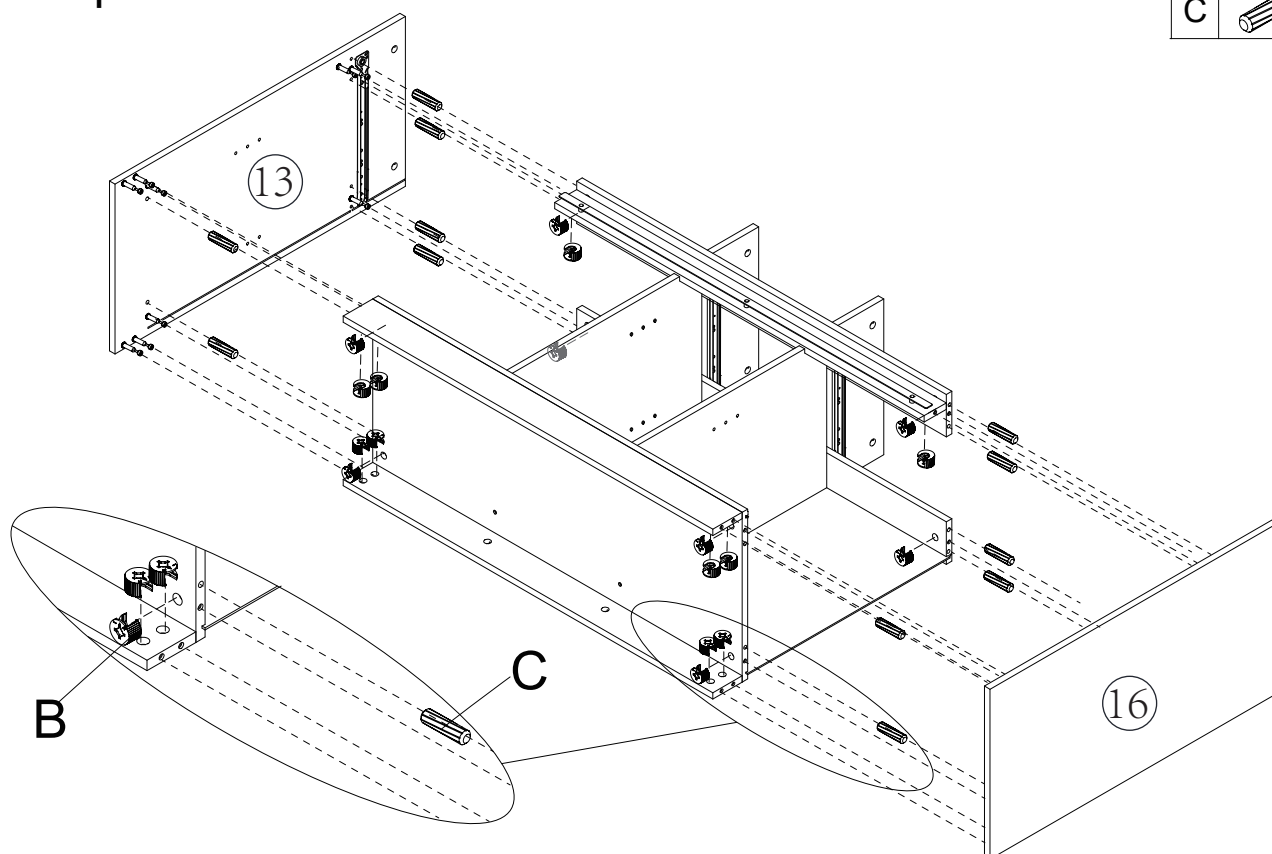


Step 24

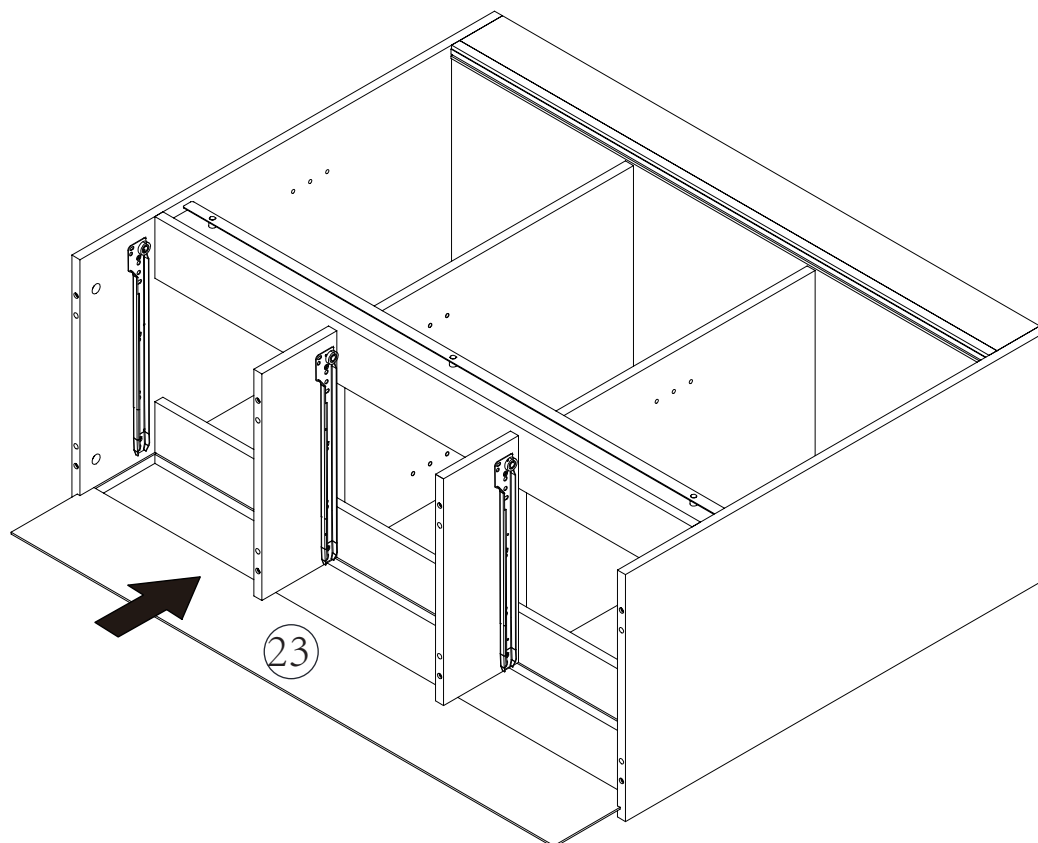

PRODUCT ASSEMBLY



Step 25

B		8 pcs
C		8 pcs

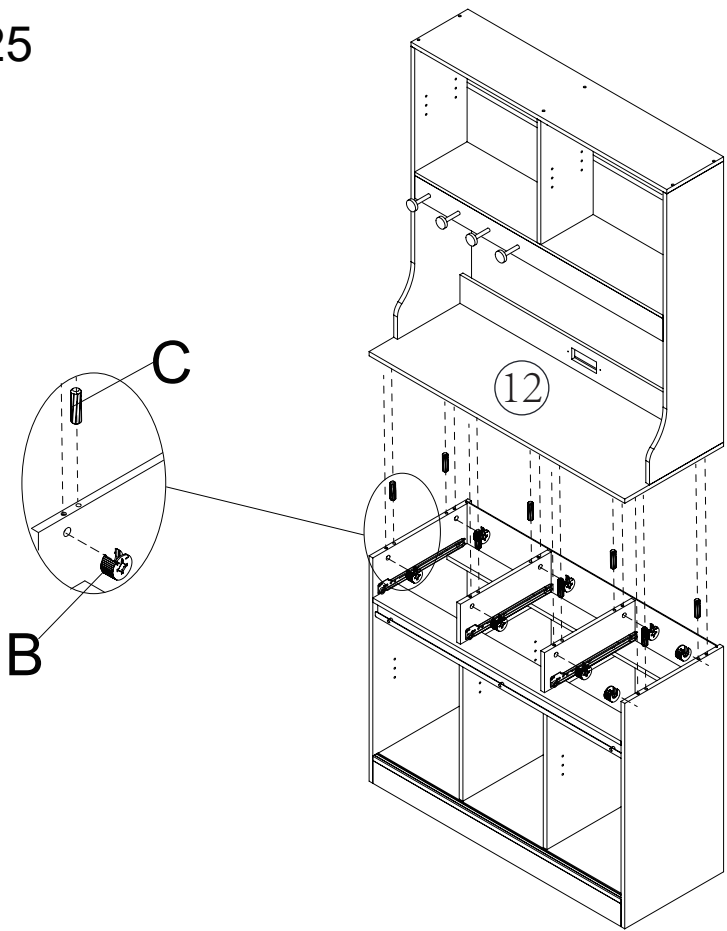


Step 26

F		20 sets
P		2 pcs

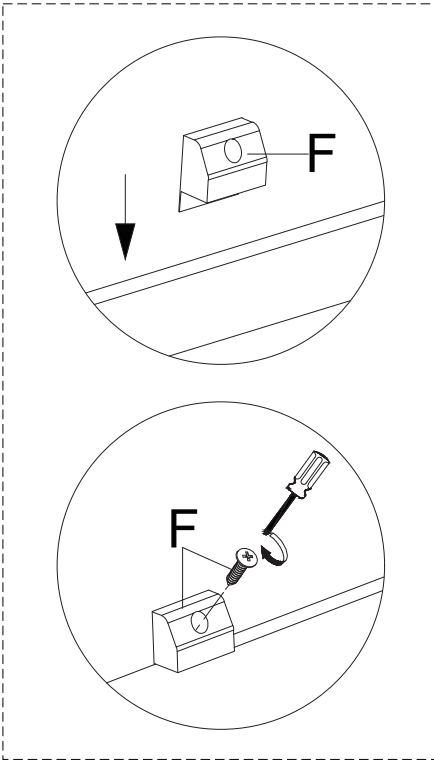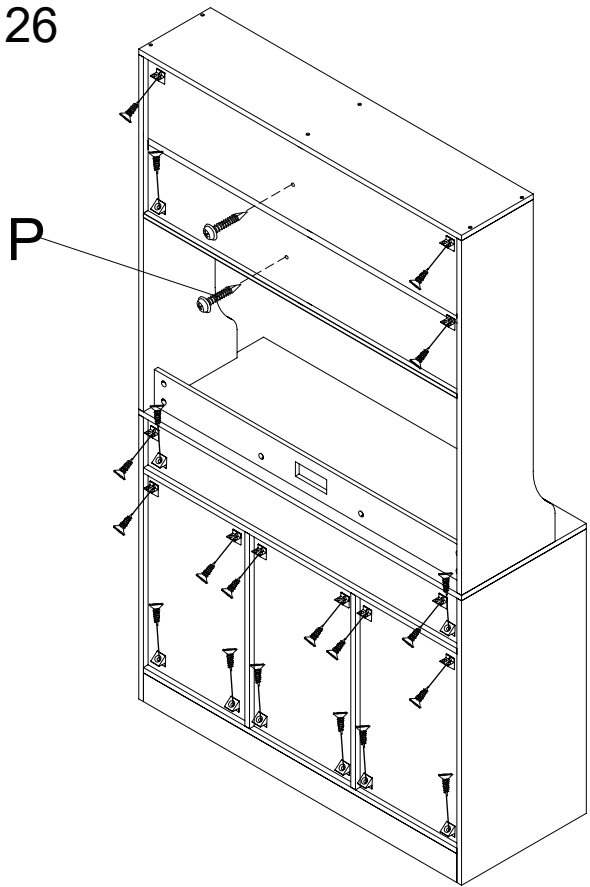


Step 27

D		12 pcs
---	---	--------

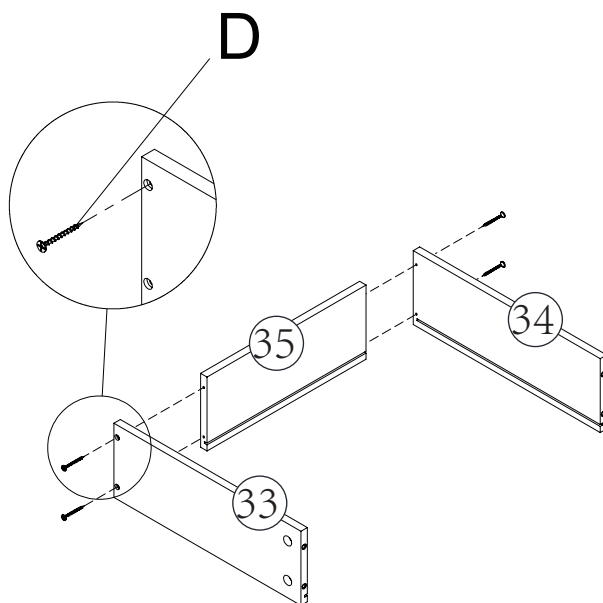

X3

Step 28

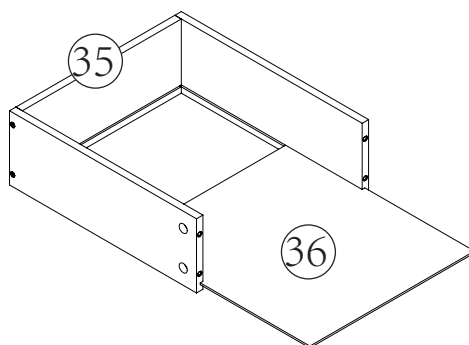


X3

PRODUCT ASSEMBLY


Step 29

A		8 pcs
B		8 pcs
G		2 sets

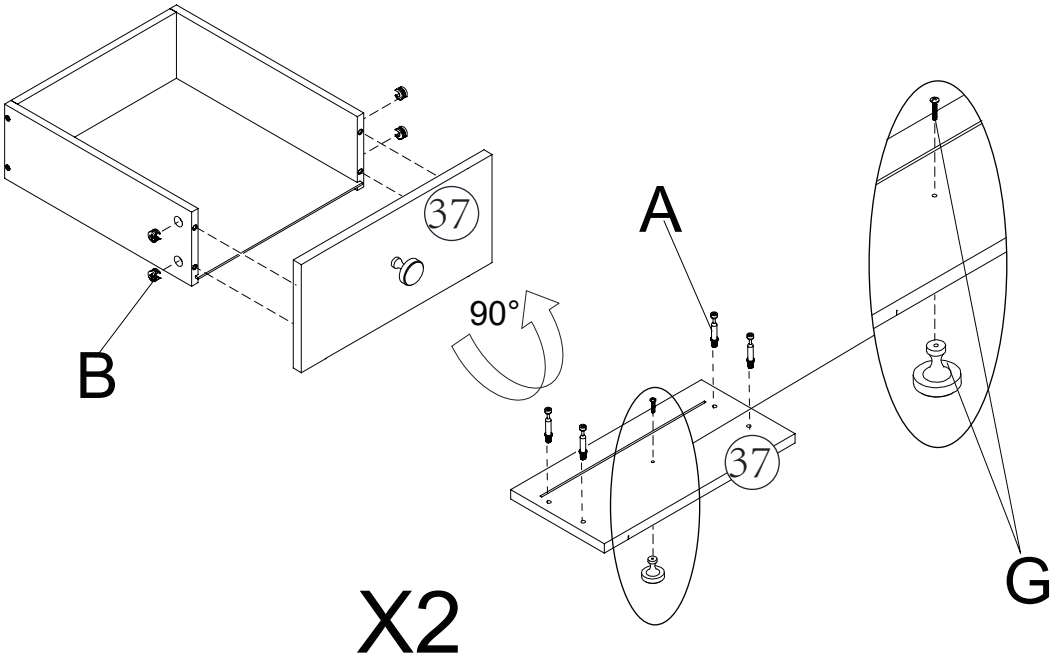

Step 30


A		4 pcs
B		4 pcs
G		1 set

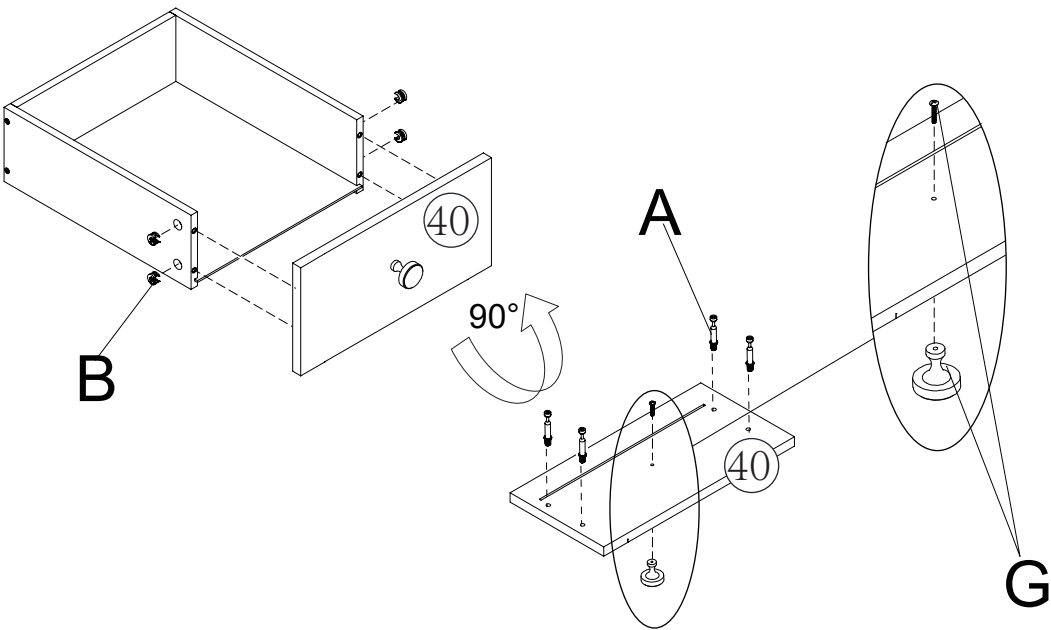


PRODUCT ASSEMBLY

Step 31

E		12 pcs
DL		3 pcs
DR		3 pcs

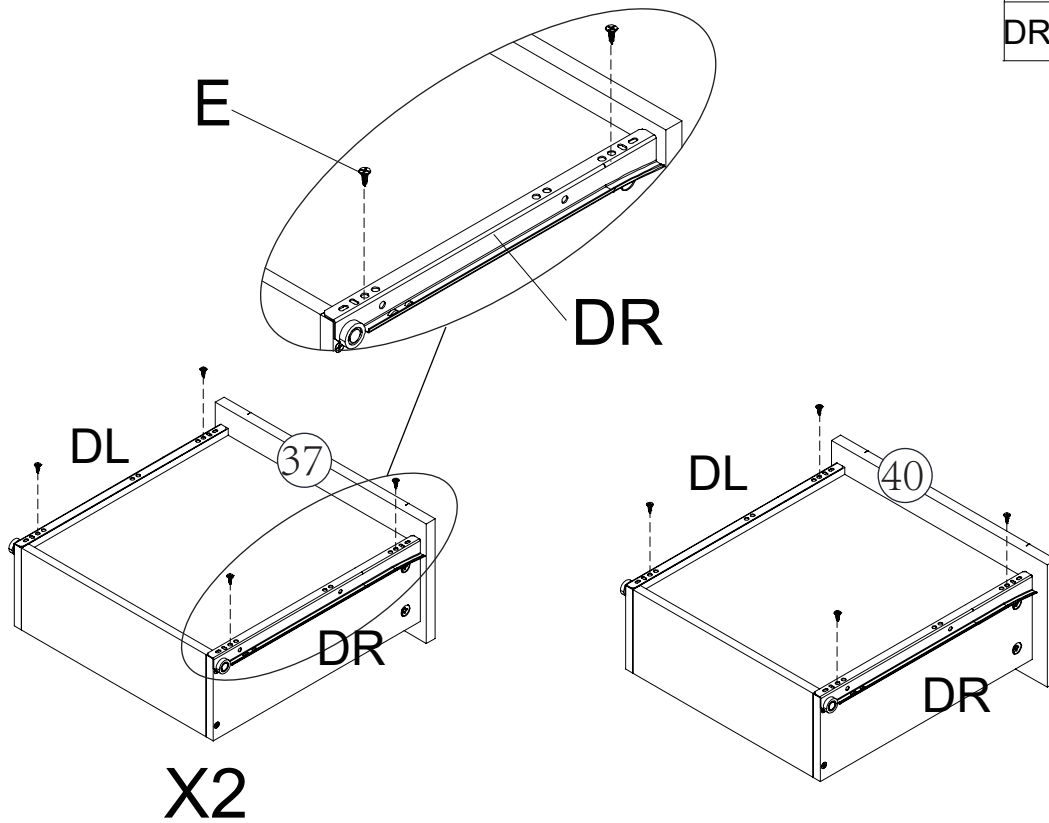


Step 32

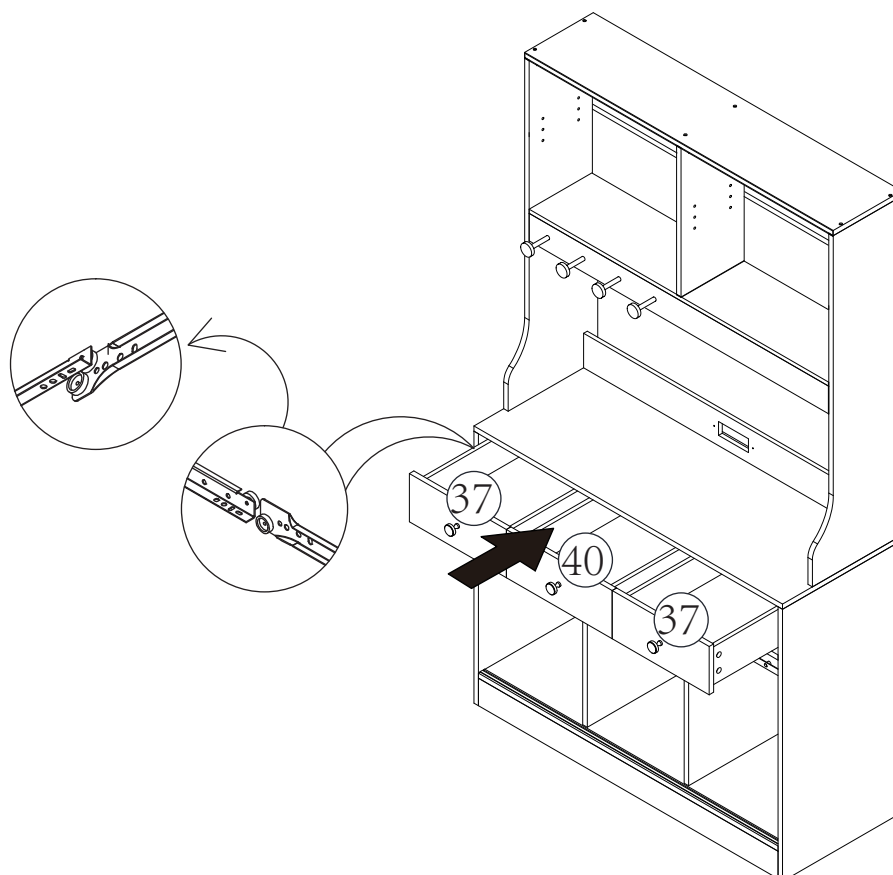


PRODUCT ASSEMBLY

Step 33

Q		20 pcs
---	---	--------

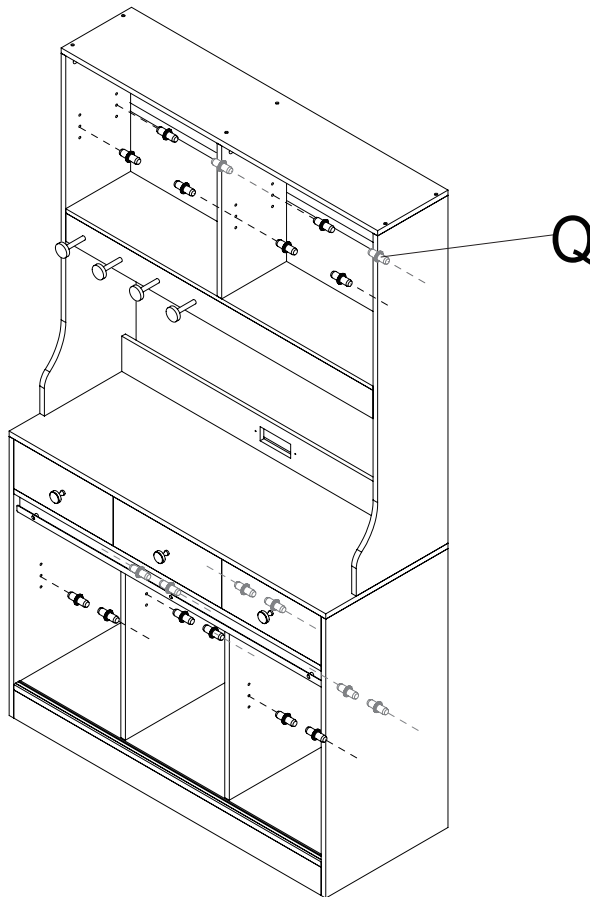


Step 34

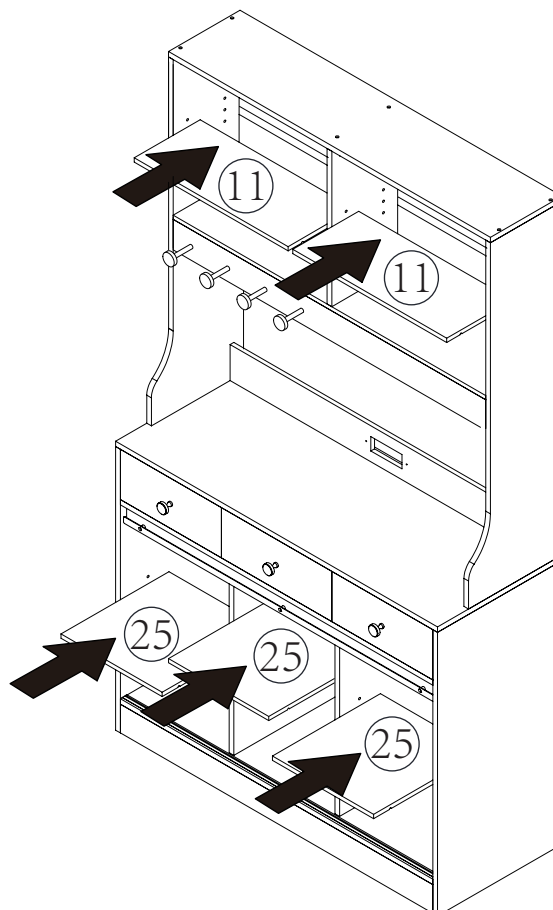


PRODUCT ASSEMBLY

Step 35

H		8 pcs
O		8 pcs
L		4 sets
I		4 pcs

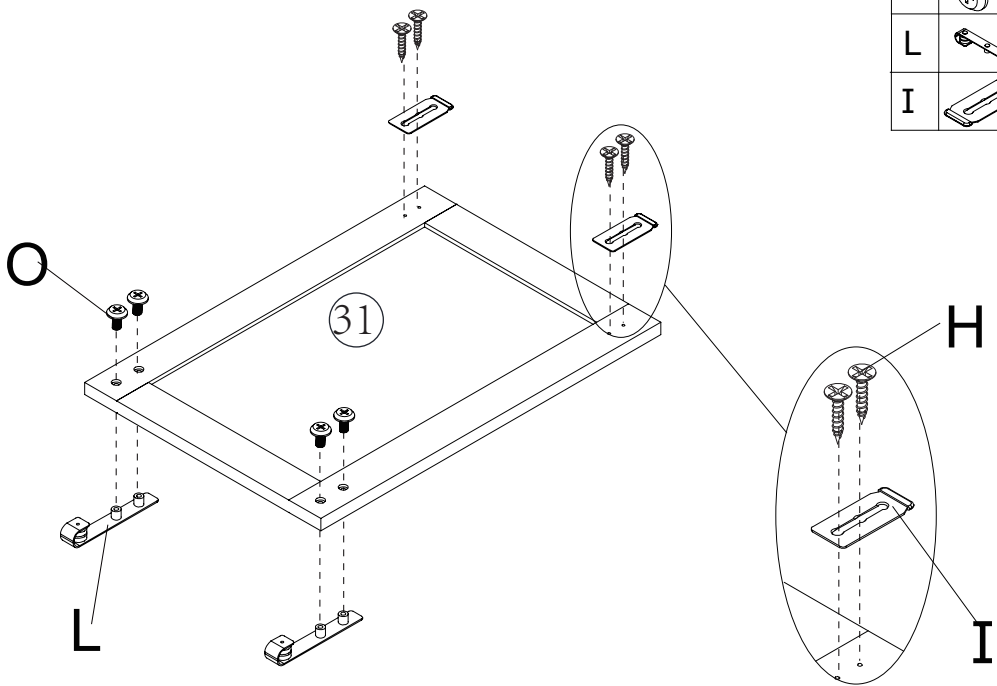


Step 36

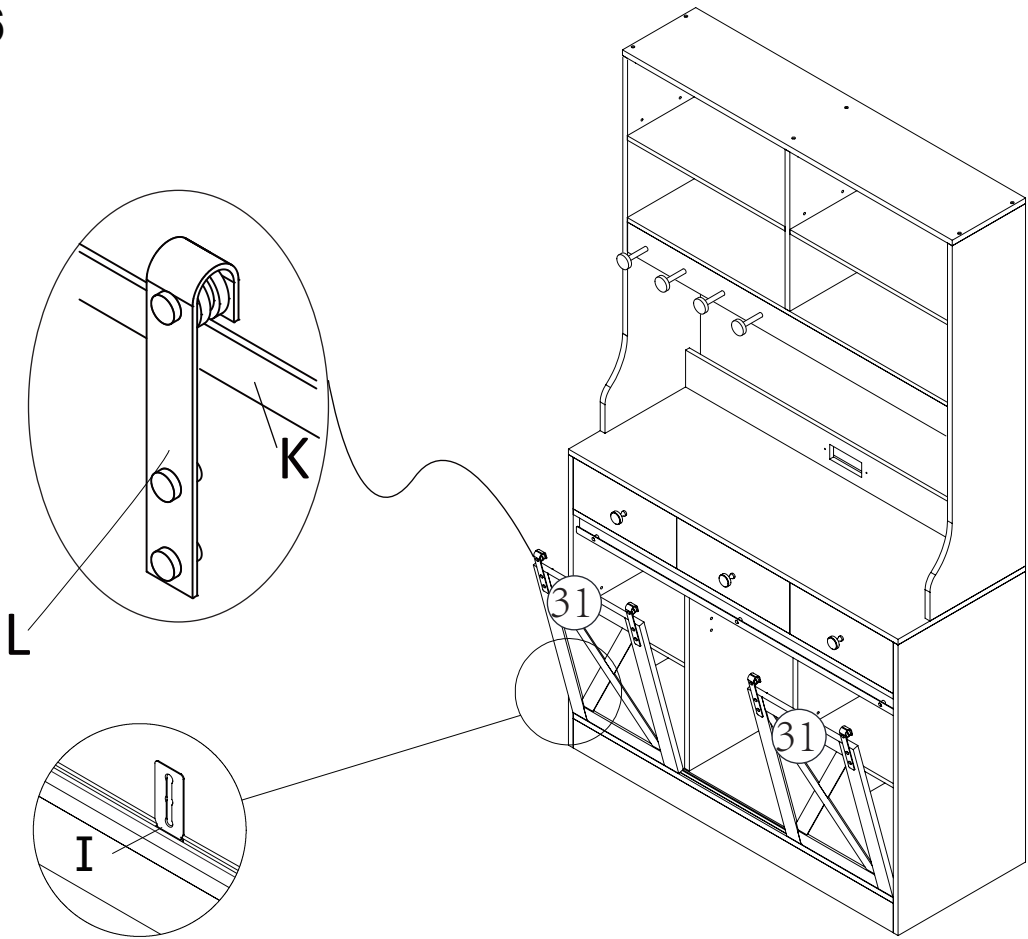

PRODUCT ASSEMBLY


Step 37

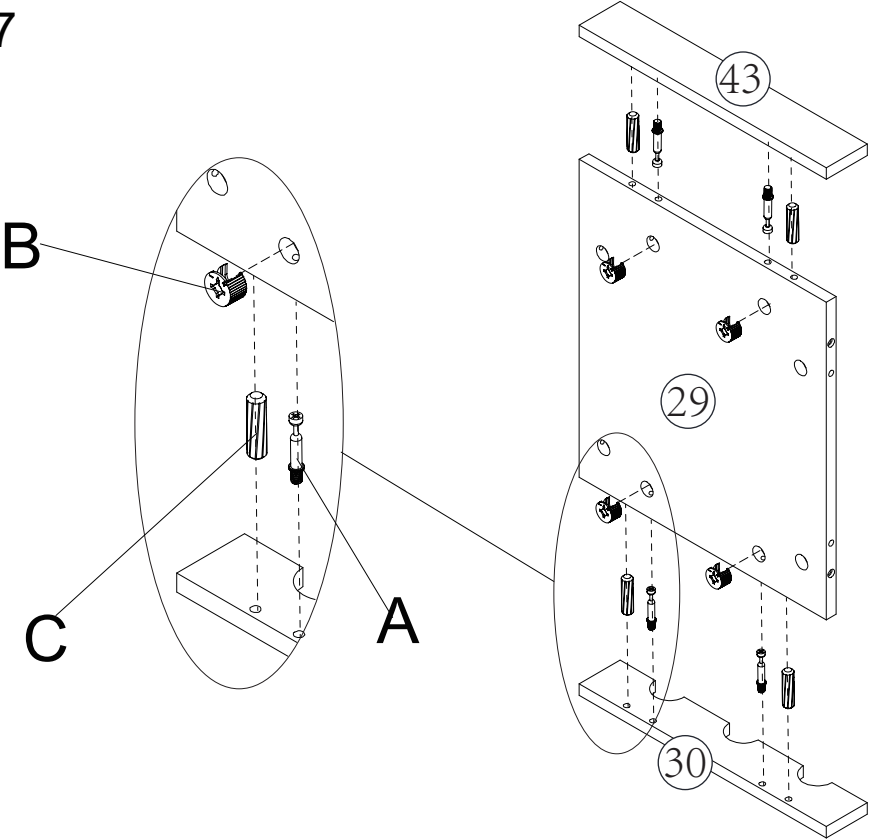

A		8 pcs
B		8 pcs
C		8 pcs

X2

Step 38

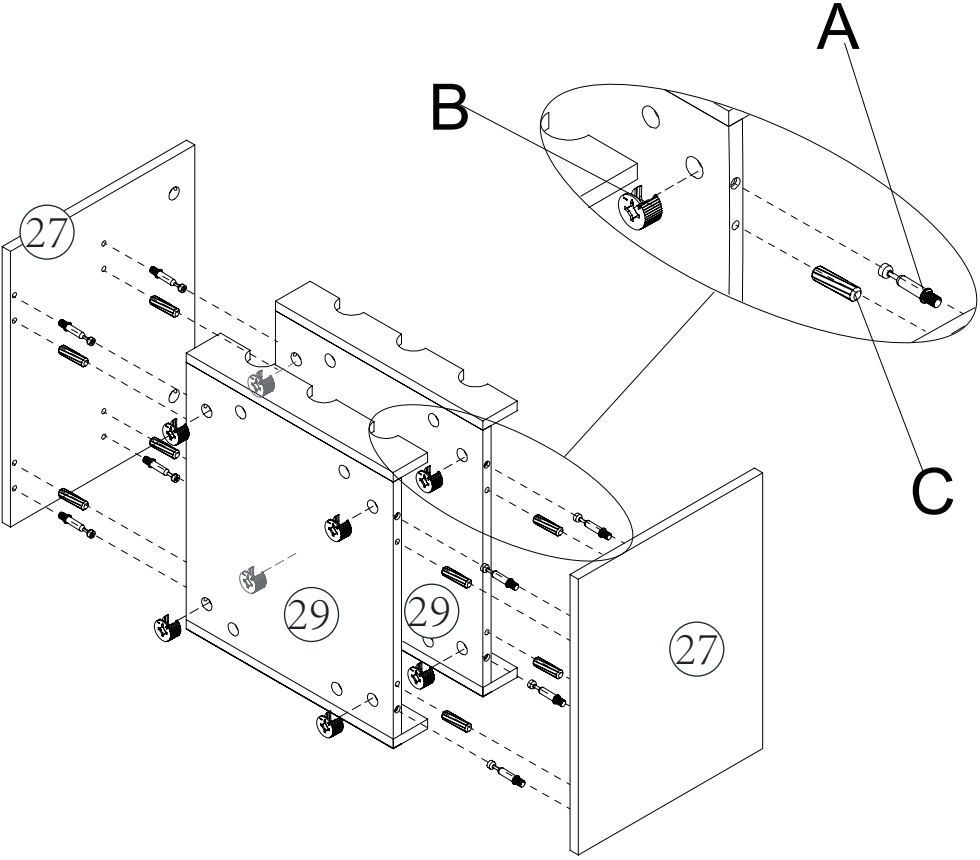


A		8 pcs
B		8 pcs
C		8 pcs

PRODUCT ASSEMBLY


Step 39

A		4 pcs
B		4 pcs
C		4 pcs

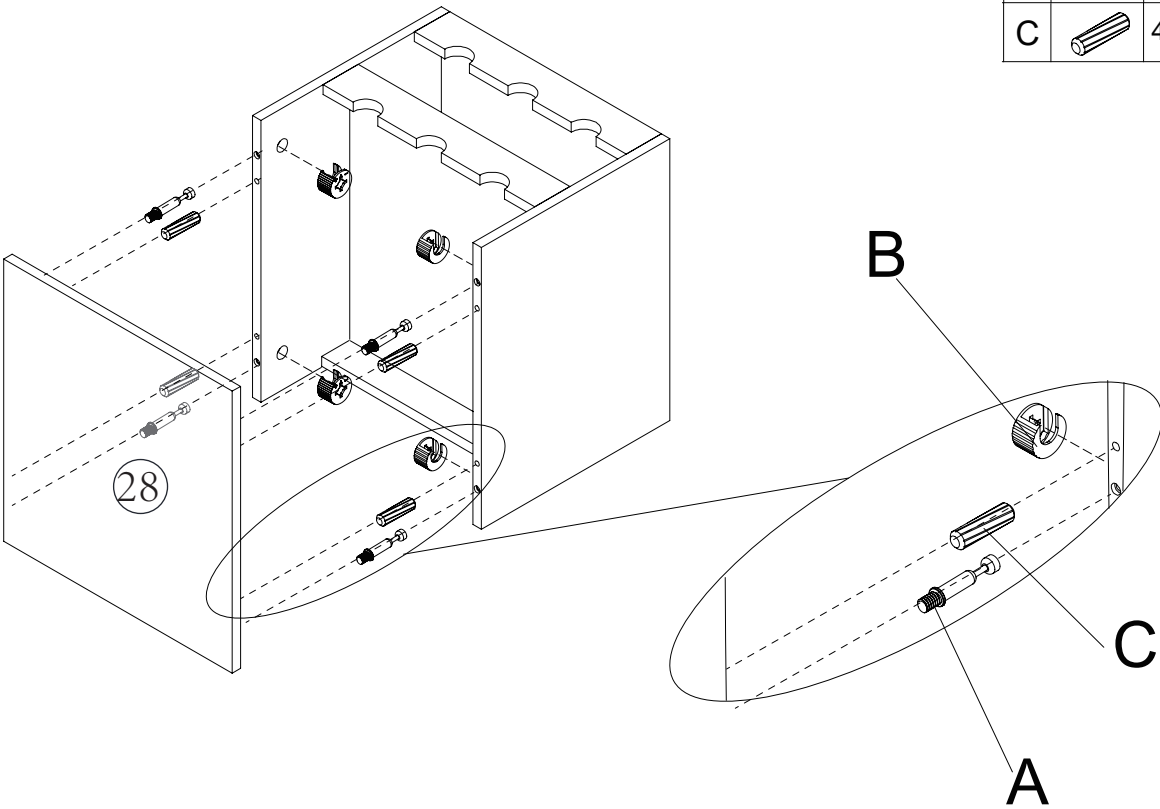


Step 40

E		2 pcs
---	---	-------

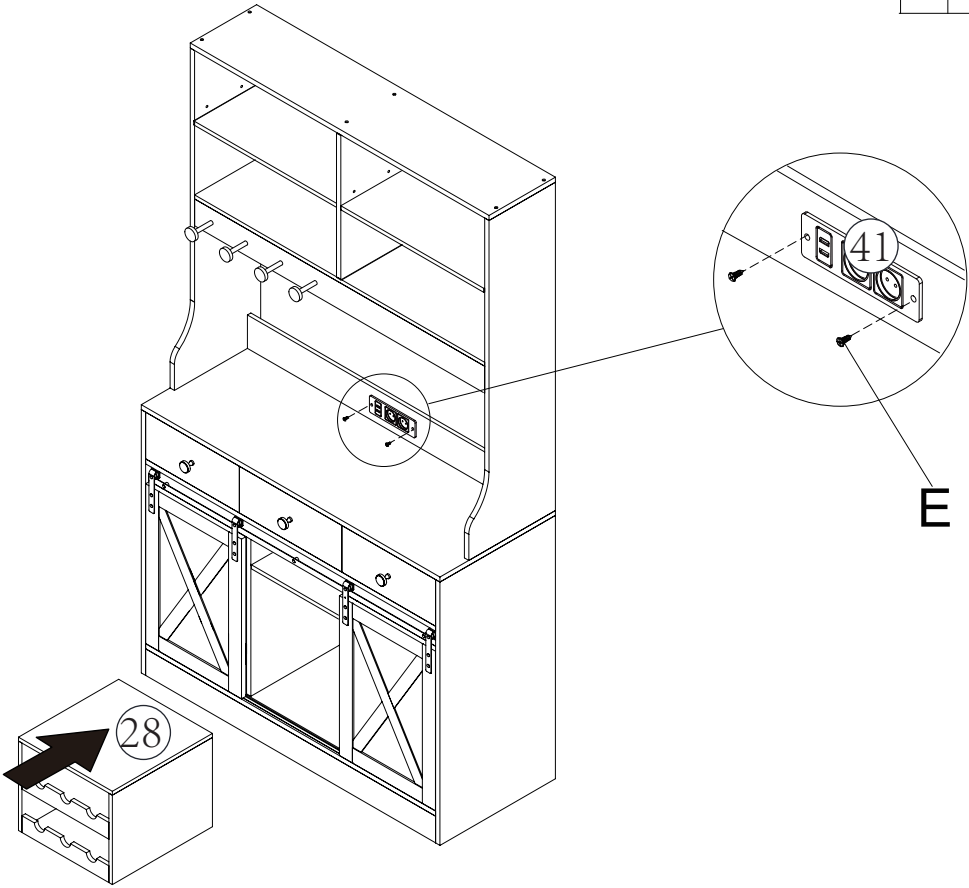

Step 41

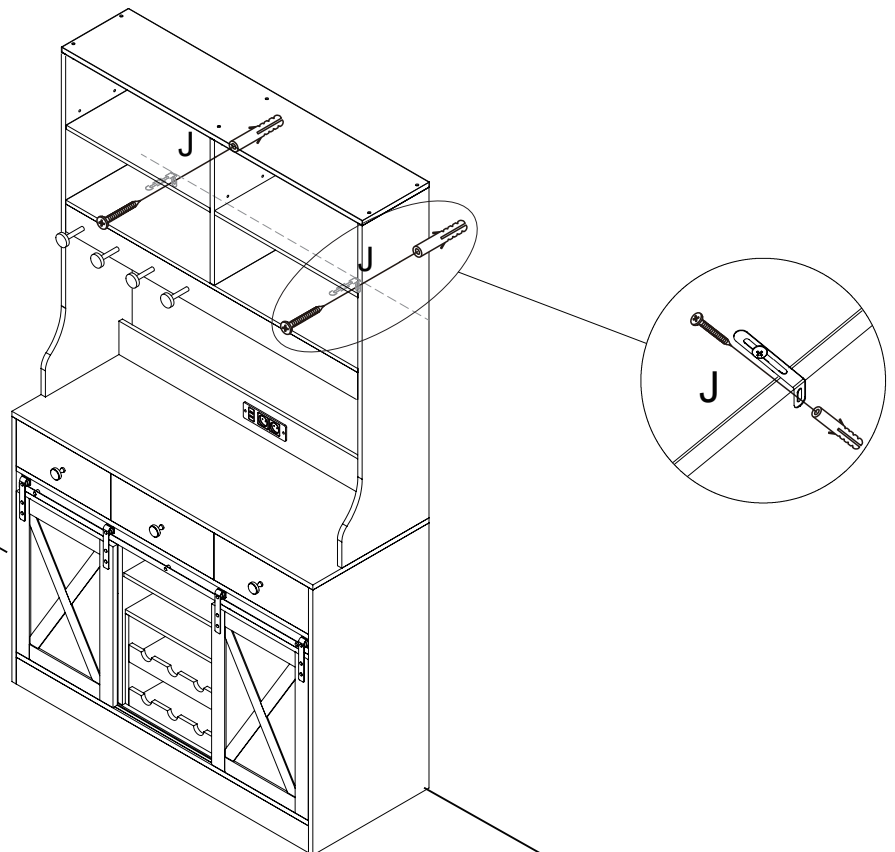

WARNING!

IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH THE
WALL ATTACHMENT DEVICE PROVIDED

AVERTISSEMENT!

AFIN D'ÉVITER LE RENVERSEMENT
CE PRODUIT DOIT ÊTRE UTILISÉ AVEC LE
DISPOSITIF DE FIXATION MURALE FOURNI

WARNUNG!

UM EIN UMKIPPEN ZU VERHINDERN
DIESES PRODUKT MUSS ZUSAMMEN MIT DEM
MITGELIEFERTE WANDBEFESTIGUNGSVORRICHTUNG

**WARNING: Before
drilling, check wall
for hidden pipes and
cables**

**AVERTISSEMENT : Avant
perçage, vérifier le mur
pour les tuyaux cachés et
Câbles**

**WARNUNG: Vor
Bohren, Wand prüfen
für verdeckte Rohre und
Kabel**