

Familienmanufaktur

# SUNNYWALL®


The Sunnywall **worry-free** application guide

## Our furniture film in your hands.




### Congratulations!

You are holding an original order from Sunnywall. Our high-quality film is easy to apply, but nevertheless, you should consider a few things.

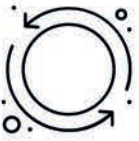

### Before we get started - The preparation.

To ensure that nothing unsightly shows through the film, you must thoroughly clean the surface to be covered. The surfaces should be dry, free from grease, and dust-free! Remove any handles that may be present on your piece of furniture. Read the instructions in full beforehand and use our provided application tool (Rakel).

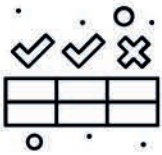

### The right technique for the inexperienced - wet application (easy).

The advantage of wet application is that you can slide the film back and forth while it's wet. The disadvantage is that the film takes a few days to fully adhere. Even we professionals mostly apply it wet.

- (1) Take a spray bottle. Fill it with water and add a few drops of dish soap.
- (2) Remove the film from its backing (ensure a dust-free surface) and spray the adhesive side of the film generously with water. It can also help to dampen the cabinet or the surface to be covered. The more water you use, the better the film will glide on the cabinet.
- (3) Position the furniture film and use an application tool (Rakel) to push out the water trapped between the cabinet and the film. Work from top to bottom and from the inside to the outside. The remaining water will evaporate over a few days, and the film will tighten. Make sure that any excess water doesn't damage your beloved flooring, and dry it. The adhesive strength of the film will fully develop after a few days. Simply use your fingers to smooth out any remaining bubbles.



### The right technique for skilled hands - Dry application (difficult).

- (1) Begin by holding the film taut at its two upper corners and then align the top edge of the film along the top edge of the surface you want to cover. Ensure both corners are properly aligned, and lightly place the film against the adjacent edge.
- (2) Next, gently smooth the surface with the application squeegee (Rakel) from top to bottom and from the inside to the outside. If wrinkles form or the film doesn't sit correctly at the edges, simply remove the affected area and smooth it out again.
- (3) Once everything is in position, firmly press down on the film and carefully work the edges. The adhesive strength will develop over a few days. Use your fingers to smooth out any remaining bubbles.

Do you have any more questions?

We're here to help. Contact us.

Discover more designs on [www.sunnywall.de](http://www.sunnywall.de)  
© 2024 Sunnywall | [info@sunnywall.de](mailto:info@sunnywall.de)