

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromazďování instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу

H Gennyesevés utasítások


Boxspringbett Vital

Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapizata pat-Upholstered bed-Мягкая кровать-ятак kapitone-Letto imbottito-Lit rembourré
Čakuněné postele čalouněné postele kárpitovztt ágy

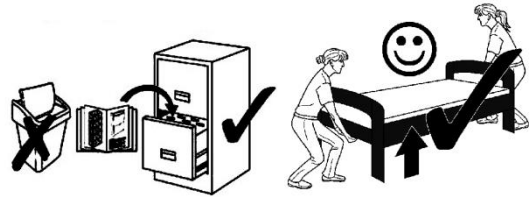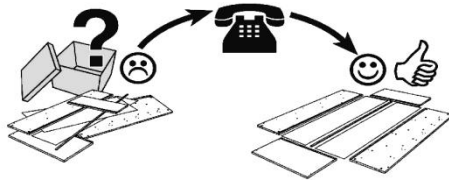


160/180/200 cm

2x


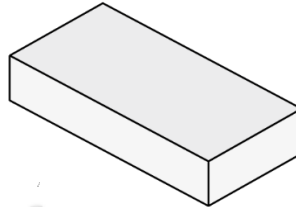


2x

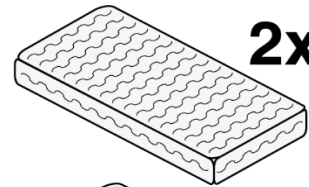

8x


1x

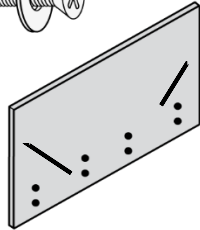

8x







1x

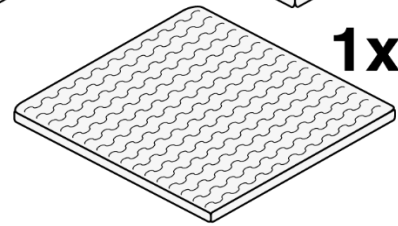

Schrauben in der Kopfteilverpackung enthalten

Dieses Produkt enthält eine Lichtquelle der Energieeffizienzklasse >E>

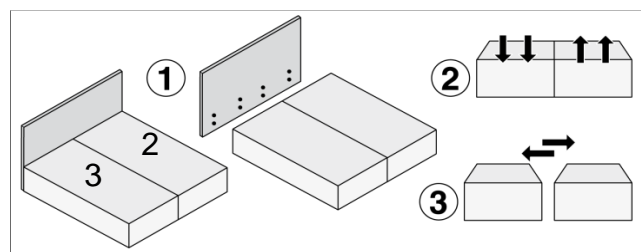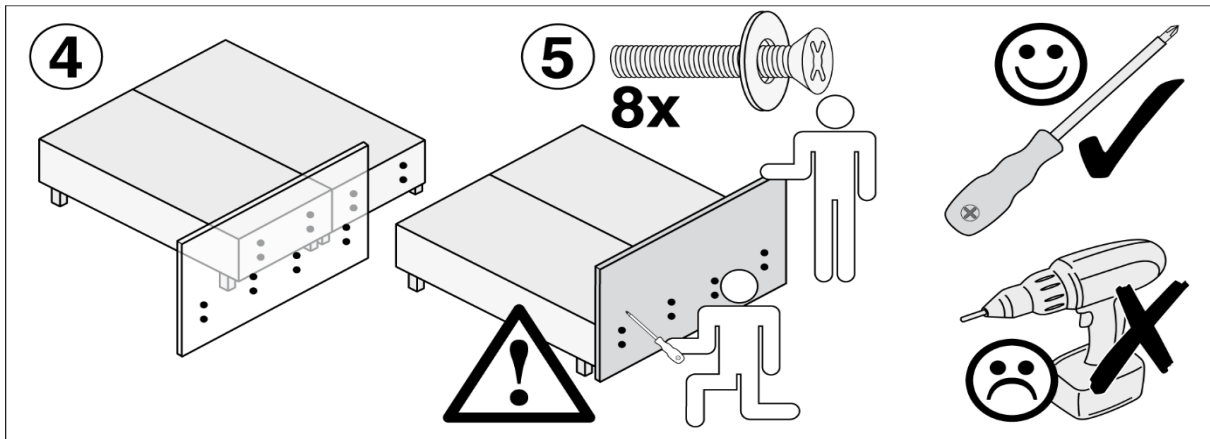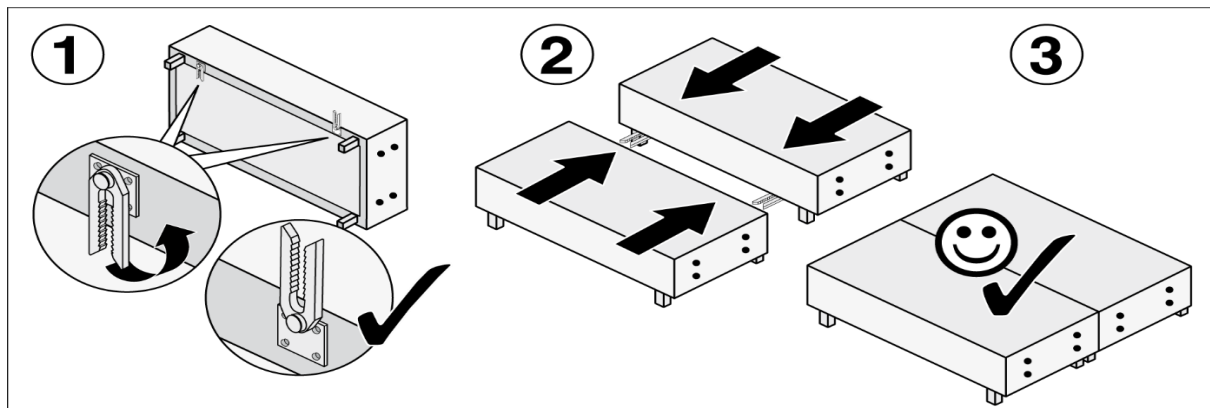

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Straße 123
32584 Löhne