

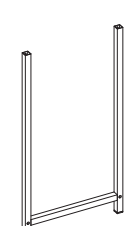


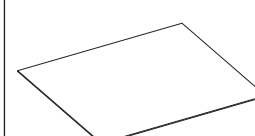
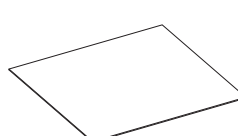







**INSTRUCTION MANUAL/BEDIENUNGSANLEITUNG/NOTICE D'UTILISATION/
MANUAL DE INSTRUCCIONES DE USO/MANUALE DI ISTRUZIONI**
PARTS LIST/STÜCKLISTE/PARTS LIST/LISTA DE PIEZAS/LISTA DEI PEZZI

A  2pcs	B  2pcs	C  540mm 2pcs	D  600x350mm 1pc	E  540x350mm 1pc	
F  510x340mm 1pc	G  540x350mm 1pc	H  542x350mm 1pc	I  542x350mm 1pc	J  582x350mm 2pcs	
K  590x520mm 1pc	L  550x520mm 1pc	M  508x315mm 1pc	N  579x251mm 1pc	O  579x251mm 1pc	
P1  2pcs	P2  2pcs	P3  M4x25mm 2pcs	Q  4pcs	R1  20pcs	
R2  20pcs	S1  2pcs	S2  M3x10 4pcs	T1  2pcs	T2  M3x7 4pcs	
U  4pcs	V  M5x12 8pcs	W  M6x30 12pcs	X  M5x45 4pcs	Y  4pcs	Z  1pc

ASSEMBLY/MONTAGE/ASSEMBLAGE/MONTAJE/ASSEMBLAGGIO



Warning!

Warnung!

Attention !

Atención!

Avvertimento!

Tight all the screws to 60% first then tight to 100%.



Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.

Serrez toutes les vis à 60% d'abord puis serrez à 100%.



Primero apriete los tornillos al 60% y después al 100%.

Stringere le viti dapprima al 60% e successivamente completamente al 100%.



1

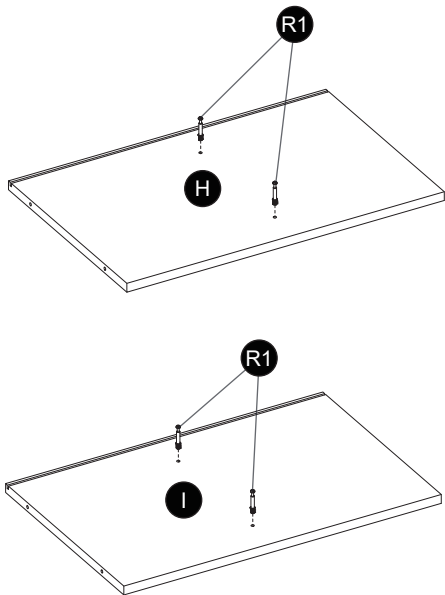




2

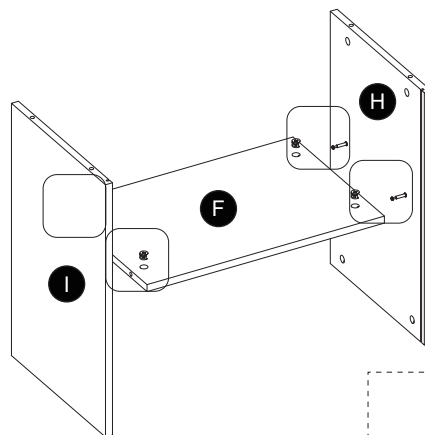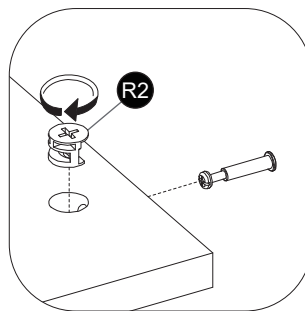

3

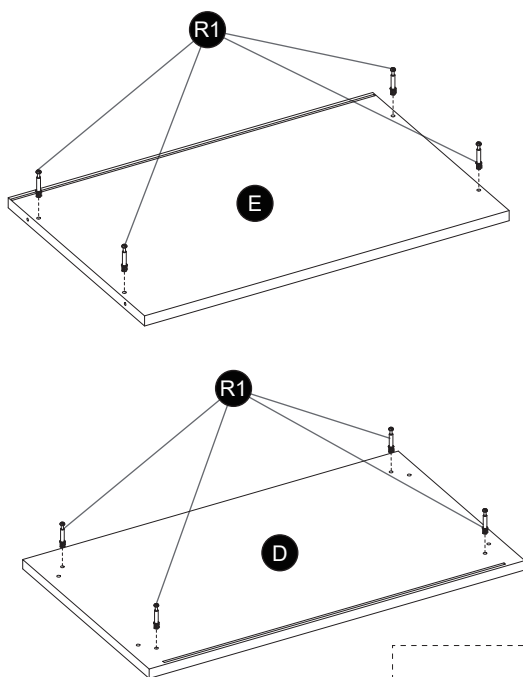

4

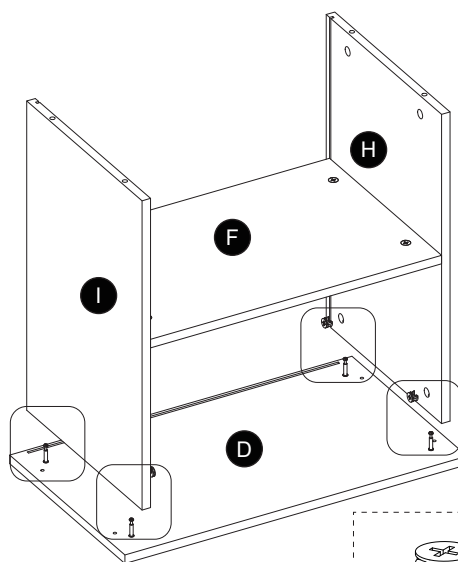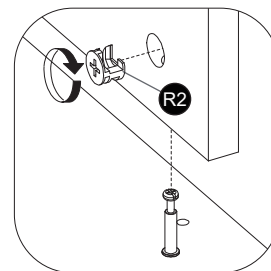







Warning!
Warnung!
Attention !
Atención!
Avvertimento!

Tight all the screws to 60% first then tight to 100%.
Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
Serrez toutes les vis à 60% d'abord puis serrez à 100%.
Primero apriete los tornillos al 60% y después al 100%.
Stringere le viti dapprima al 60% e successivamente completamente al 100%.




5

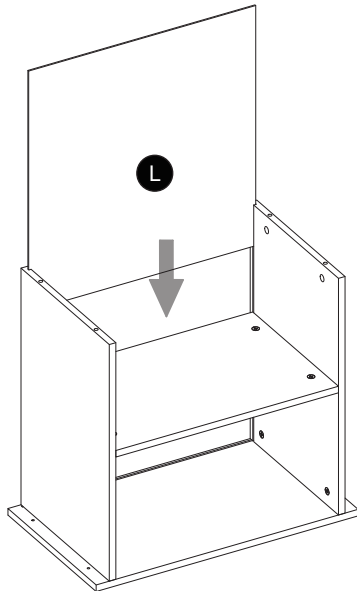


6

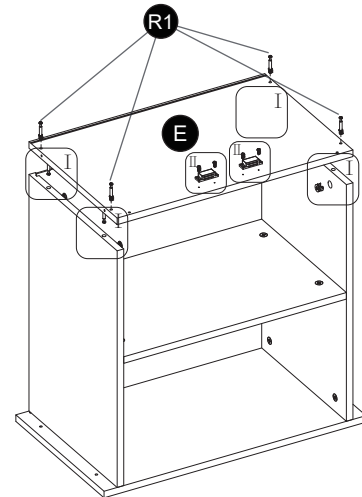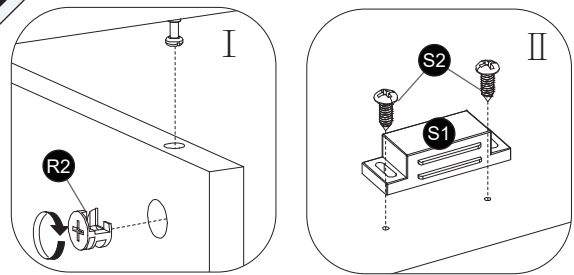

7

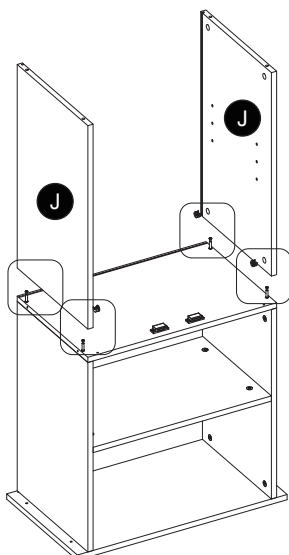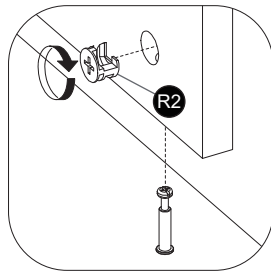

8


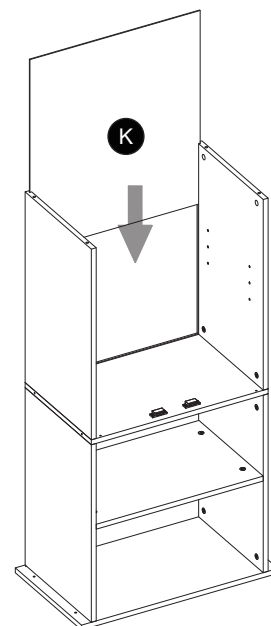





Warning!
Warnung!
Attention !
Atención!
Avvertimento!

Tight all the screws to 60% first then tight to 100%.
Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
Serrez toutes les vis à 60% d'abord puis serrez à 100%.
Primero apriete los tornillos al 60% y después al 100%.
Stringere le viti dapprima al 60% e successivamente completamente al 100%.




9

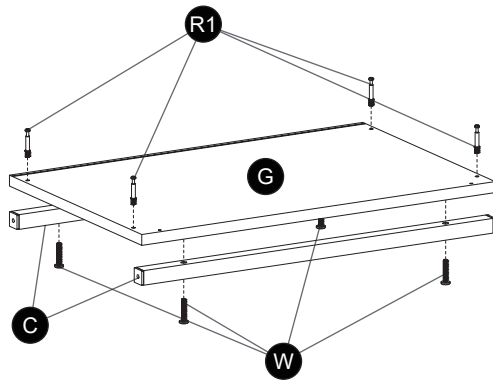

10


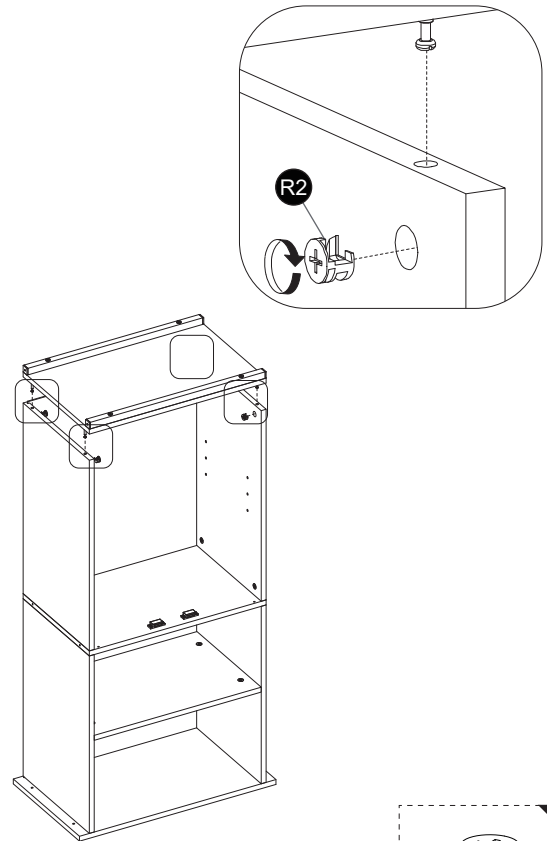


11

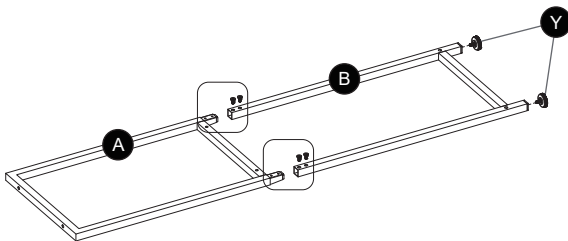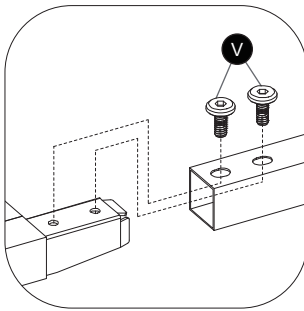

×2

12


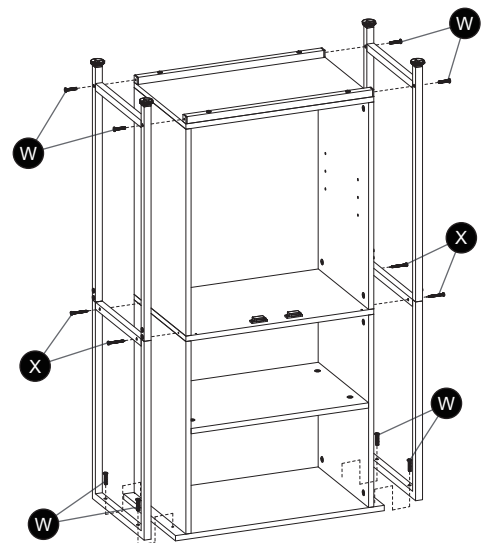









Warning!
Warnung!
Attention !
Atención!
Avvertimento!

Tight all the screws to 60% first then tight to 100%.
 Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.
 Serrez toutes les vis à 60% d'abord puis serrez à 100%.
 Primero apriete los tornillos al 60% y después al 100%.
 Stringere le viti dapprima al 60% e successivamente completamente al 100%.

13

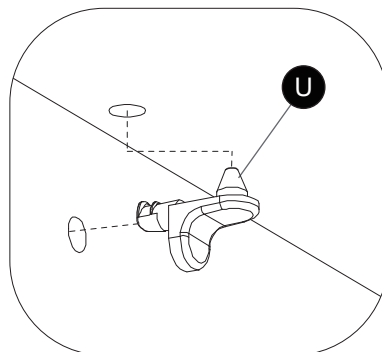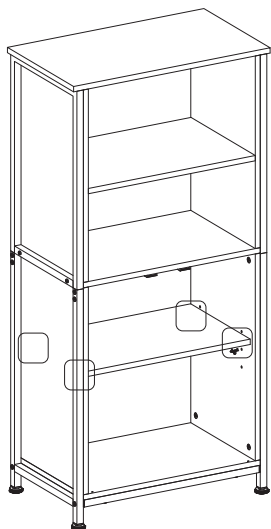

14

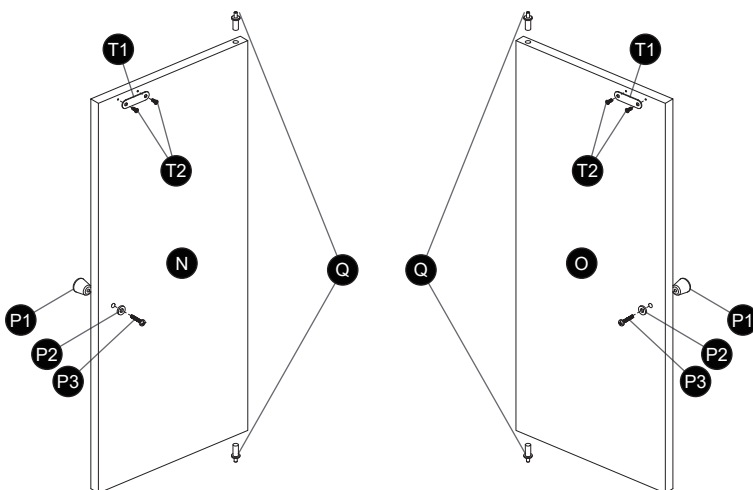

15

