



1	Beschlag		1
3	870**	296	2
2	900**	296**	2
4	280**	296	6
5	870**	296	2



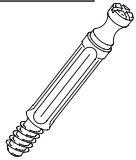
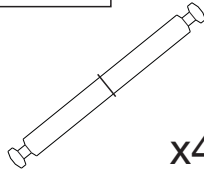




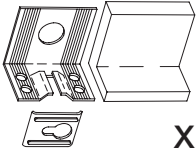
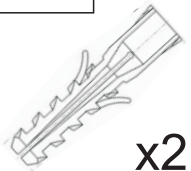
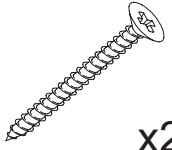
VCM.


seit 30 Jahren
 service@vcm-gruppe.de

Aufbauanleitung

Artikel Benos (3x3 Fach)

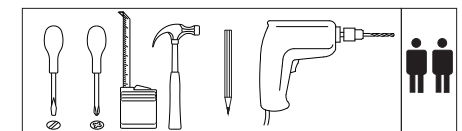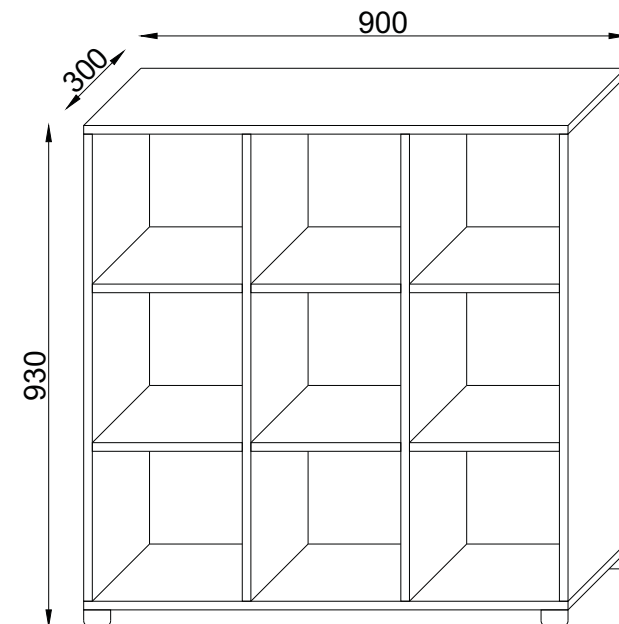

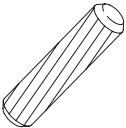1.14  x42	1.17  x21	1.16  x13	1.31 84mm  x4
1.11  x4	1.12 4x20mm  x4	1.30  x21	1.5 3,5x16mm  x4
1.18  x2	1.36 8x40mm  x2	1.33 4x50mm  x2	

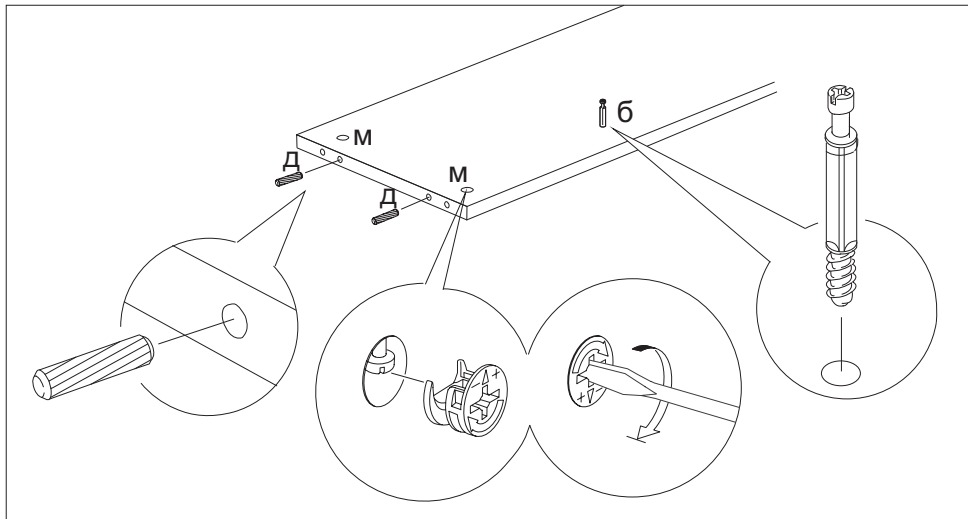

Achtung!!!
Unbedingt Wandbefestigung (Teile 1.18, 1.33, 1.36) verwenden!

