



NOVA LUCE


9088136

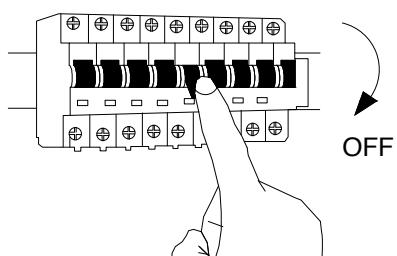


1. Turn off the general Switch

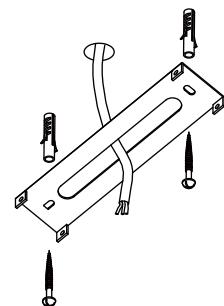


2. Align, mark and drill holes
to apply the screws

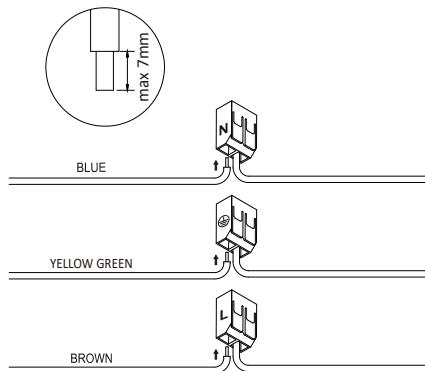

3. Connect the wires

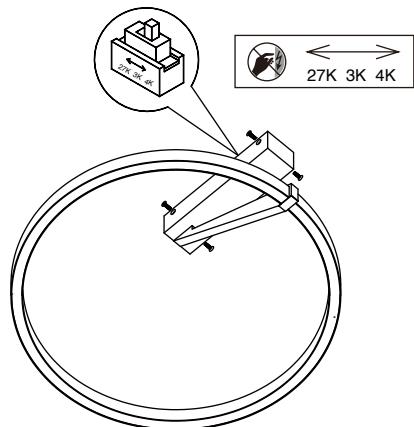

4. Apply the side screws

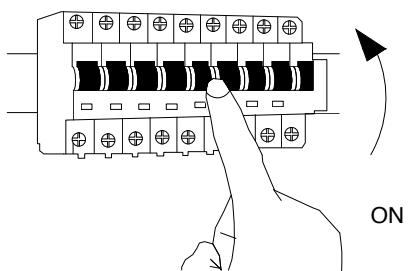

5. Turn on the general Switch

