

P5042S Installation instruction

Install tool




【Electric drill】



【Screwdriver】



【Tape】

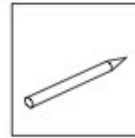

【Pen】



【Hammer】




【SCW-AL】
Length: 12mm




【Plastic expanding plug】

Vanity installation

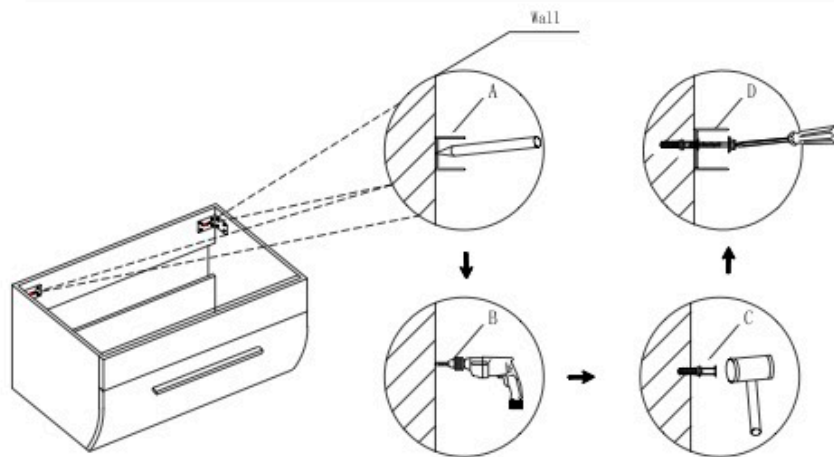

Vice cabinet installation

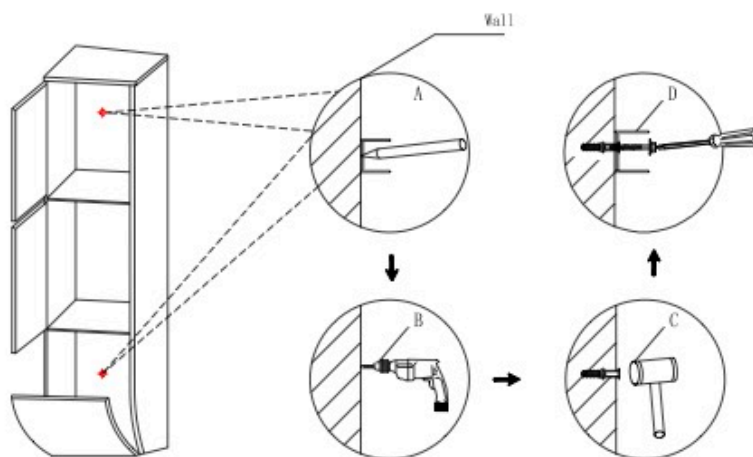

Please the bathroom cabinet height width and spacing on the wall first with tape

Inhalt der Installationspakets

1. Fertig im Installationspakets

- Wirbel x 2
- Schraube-6*60mm x 2
- Schrankgriff*3
- Schrauben für Schrankgriff*6


2. Sie Benötigen zur Installation

- Bohrmaschine
- Hammer
- Stift
- Meter
- Wasserwaagen


2018

MONTAGEANLEITUNG

BADMÖBELSET DANNY

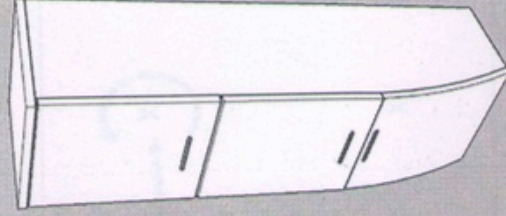


A

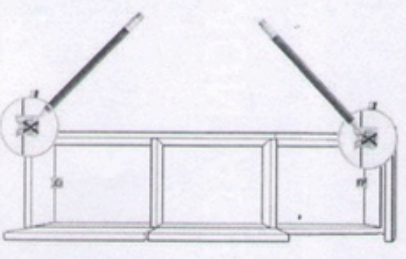


B



C

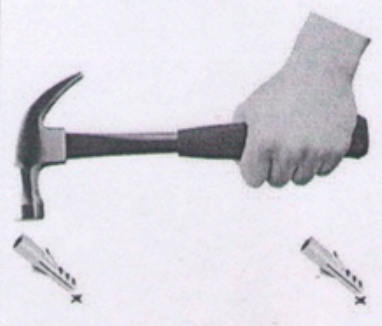


D

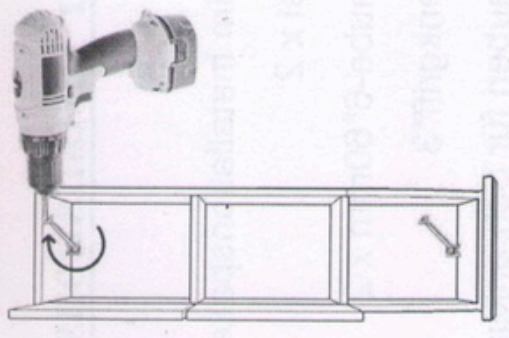


- Schrauben für
- Seitenbretter
- Schraube-Ø 6,0
- Vierfel x 2

E

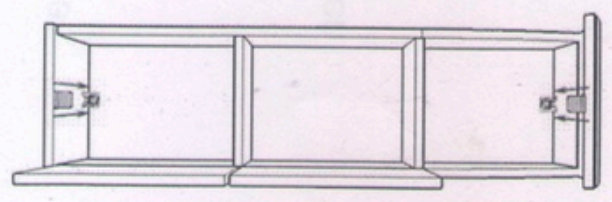


- Bohrer
- Hammer
- Stift
- Meißel
- Wasserwaage


C

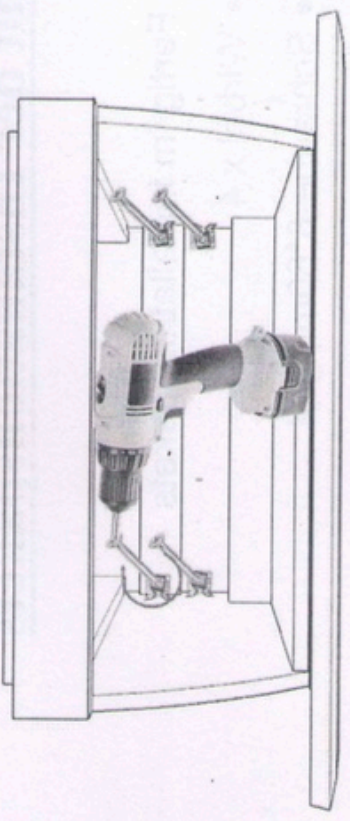

D

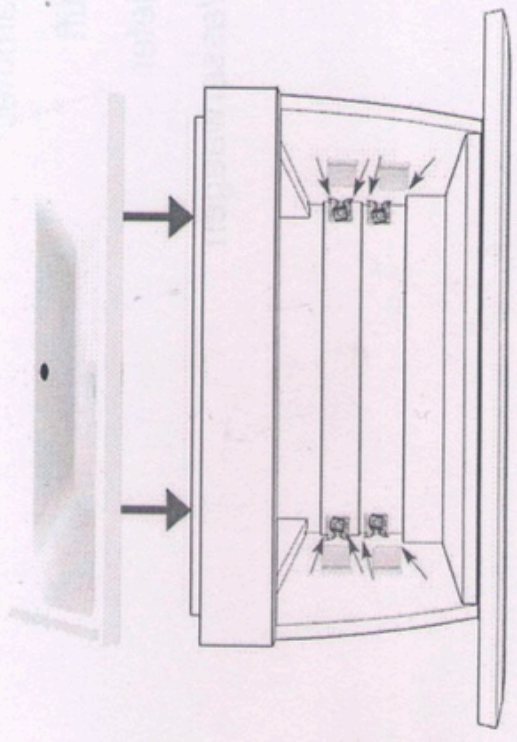

A

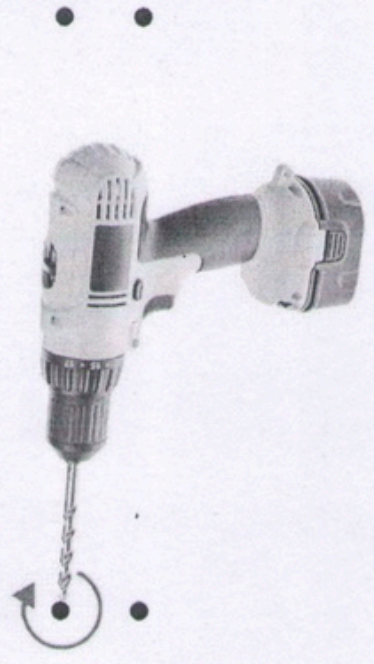

B

