


Assembly Instruction

SKU: WF318271/WF318272

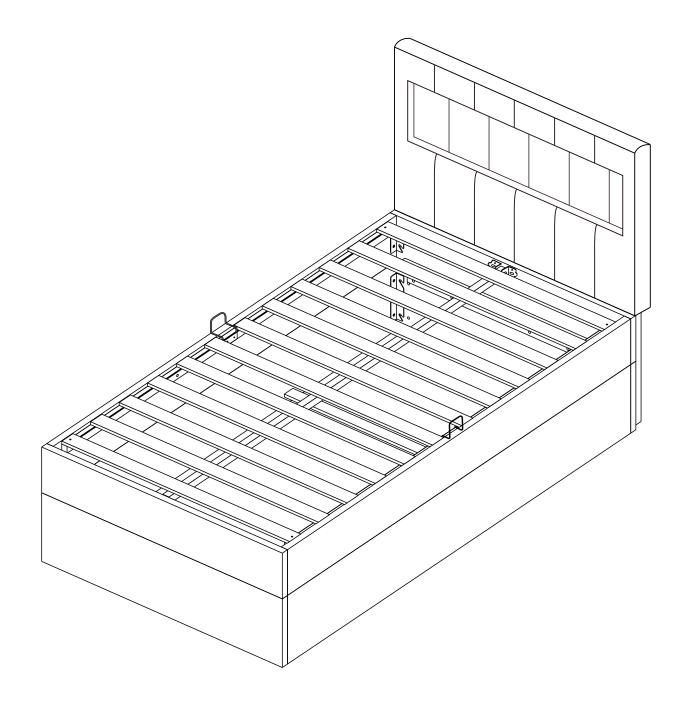


BED FRAME (Single)

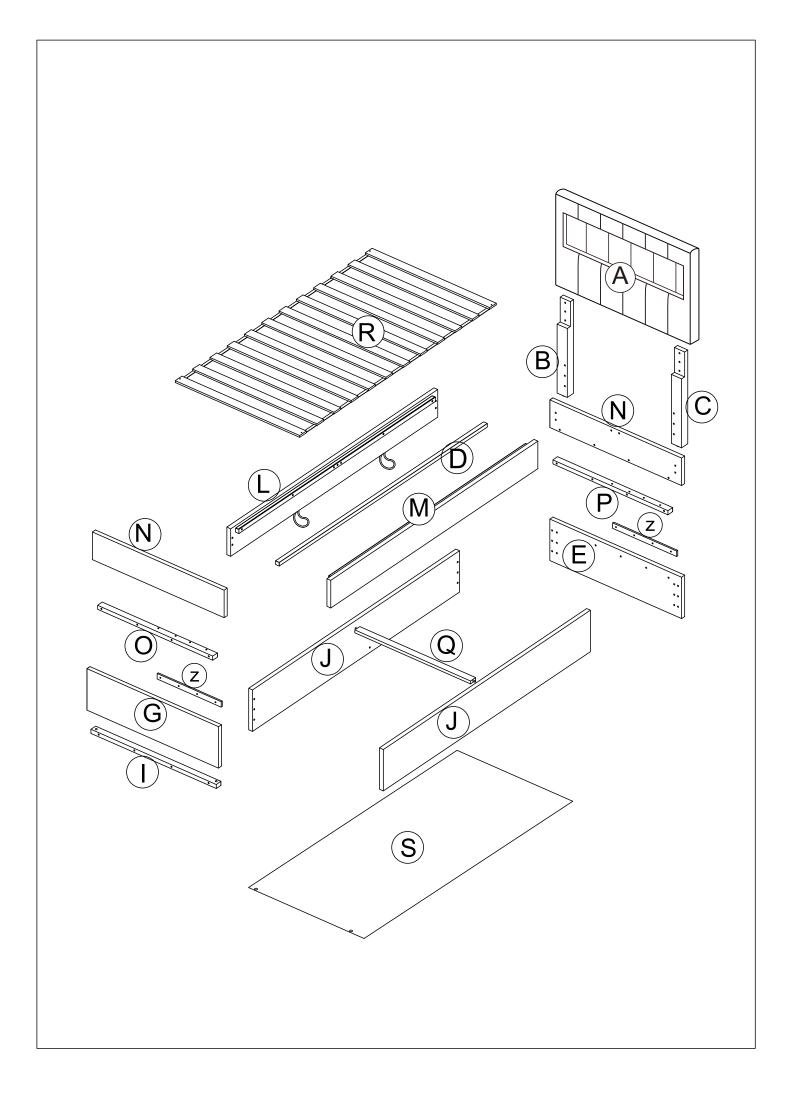

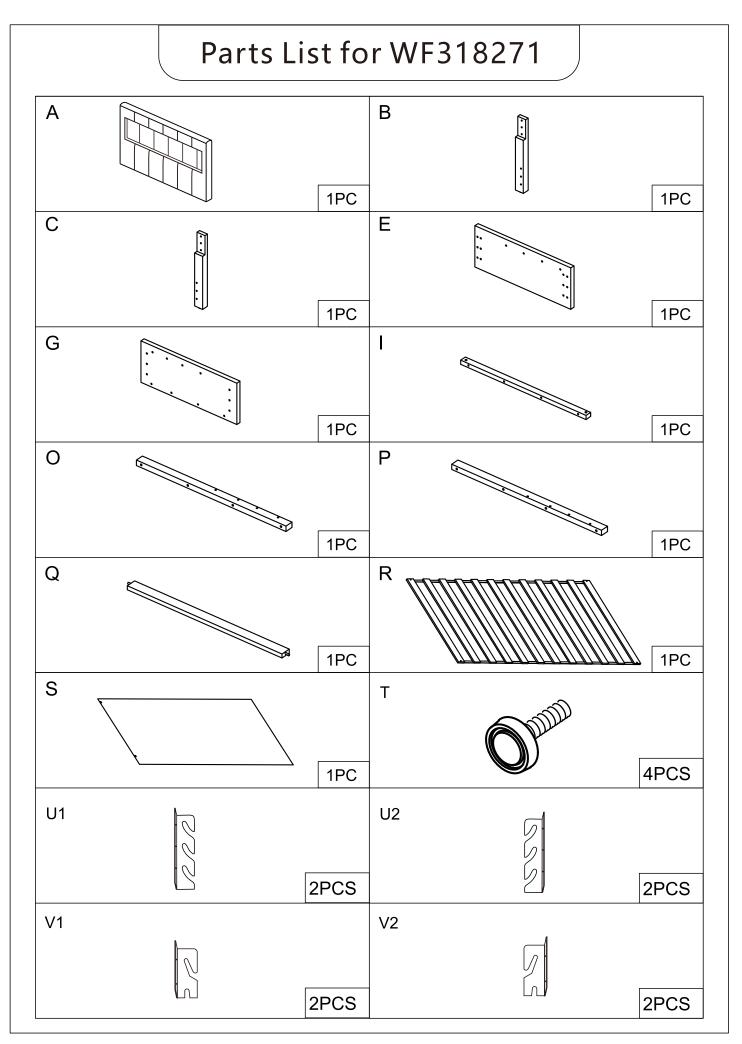

Parts List for WF318272

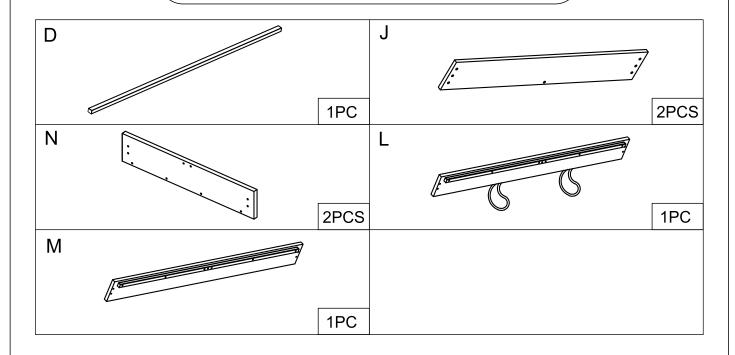


(Hardware List for WF318271)

| 1 | <pre></pre> | 12PCS | 2 | <a>\(\begin{aligned} \text{0} \\ \text{M8*20mm} \\ \text{2} \\ \text{M8*20mm} \\ \t | 40PCS |
|-----|-------------|-------|-----|--|-------|
| 3 | | 12PCS | 4 | | 16PCS |
| 6 | M4*25mm | 8PCS | 7 | M8 | 52PCS |
| 8 | Ø19mm | 52PCS | 9 | M5 | 1PC |
| 10 | M4 | 1PC | 11) | <a>® <a>M6*20mm | 8PCS |
| 12) | | 2PCS | 13) | | 2PCS |
| 14 | | 1PC | 24 | | 1PC |
| X1 | | 1PC | X2 | | 1PC |
| Y | | 2PCS | Z | | 2PCS |

Installation Steps


Before your installation, please make sure that you have all the parts listes in the manual. If you find something missing please do not hesitate in contacting us.


TIP: please don't tighten the screws on step 1 until step 2 finished.

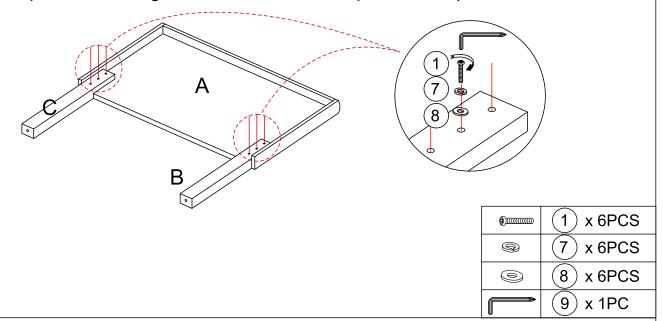

2 TIP:


when you assemble part B please screw the 3 holes on the right side, when you assemble part C please screw the 3 holes on the left side.

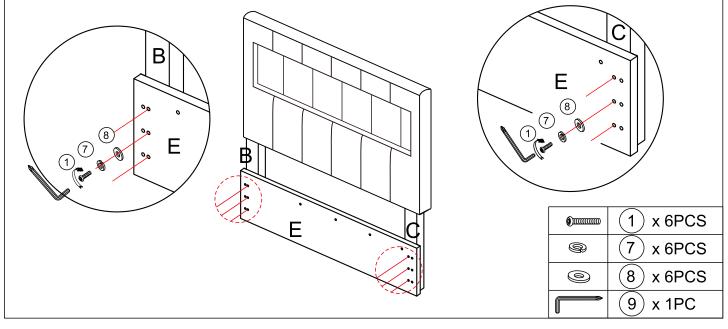

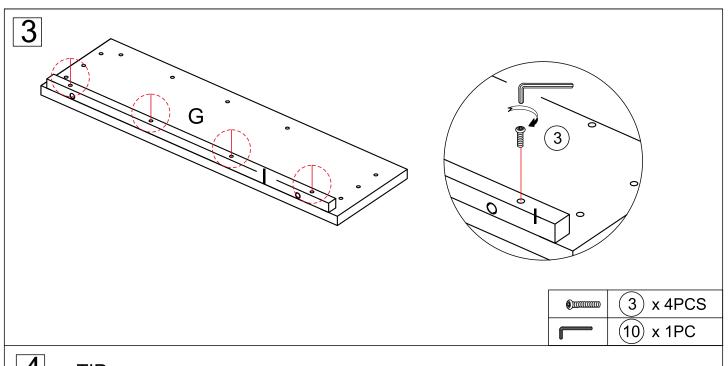


TIP:


please make sure the edge of part U1 and U2 was vertically with the edge of part J, as the picture shown.

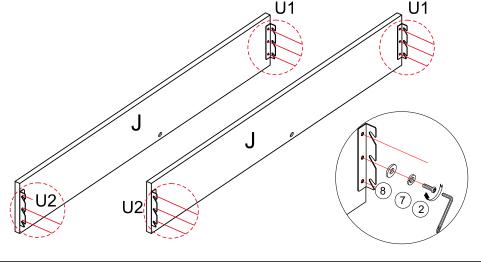



| (1) | 2 x 12PCS |
|------------|-----------|
| | 7 x 12PCS |
| 0 | 8 x 12PCS |
| | 9 x 1PC |
| and | U1 x 2PCS |
| تنن | U2 x 2PCS |

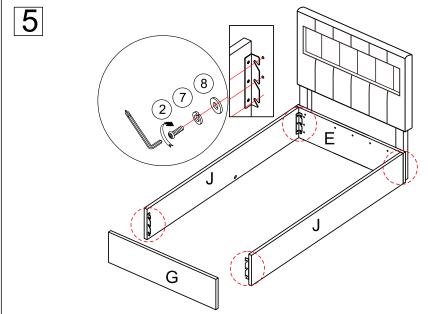


| (3) | 2 x 12PCS |
|------------|-----------|
| | 7 x 12PCS |
| 0 | 8 x 12PCS |
| | (9) x 1PC |

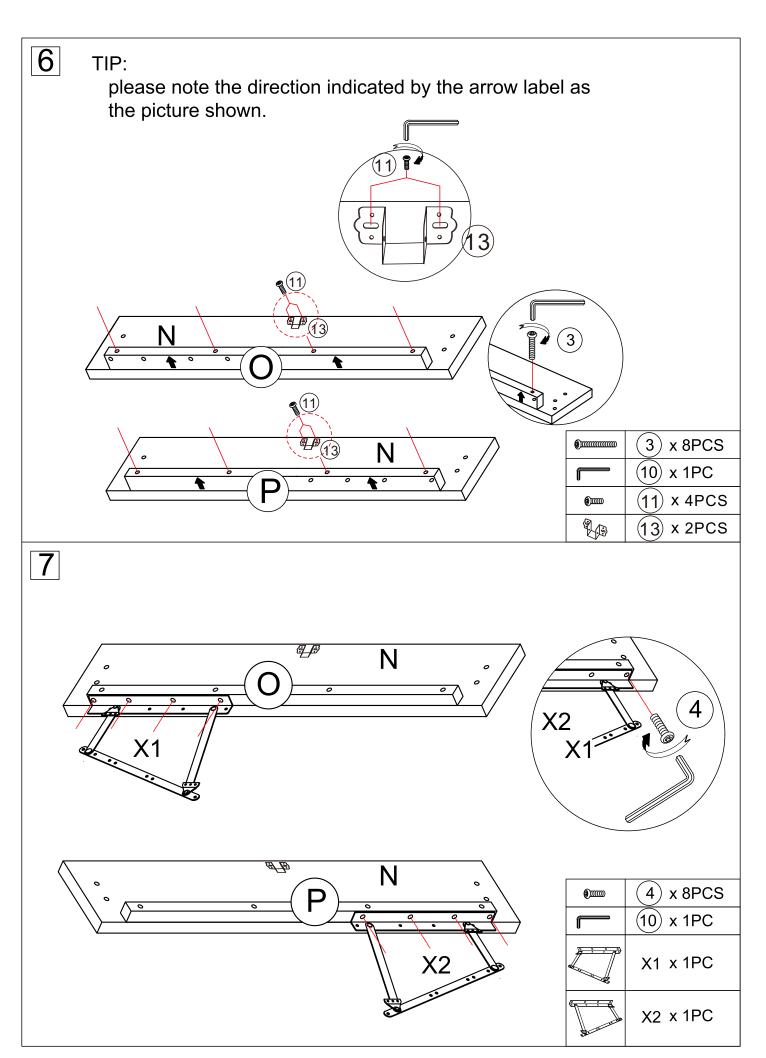


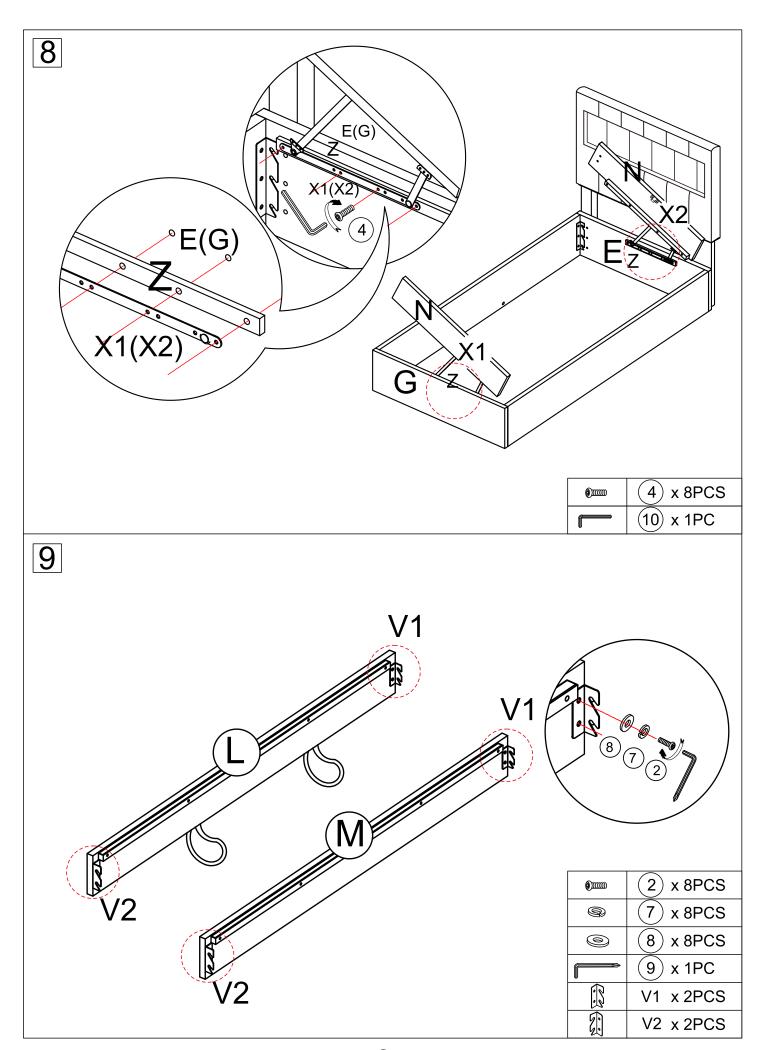

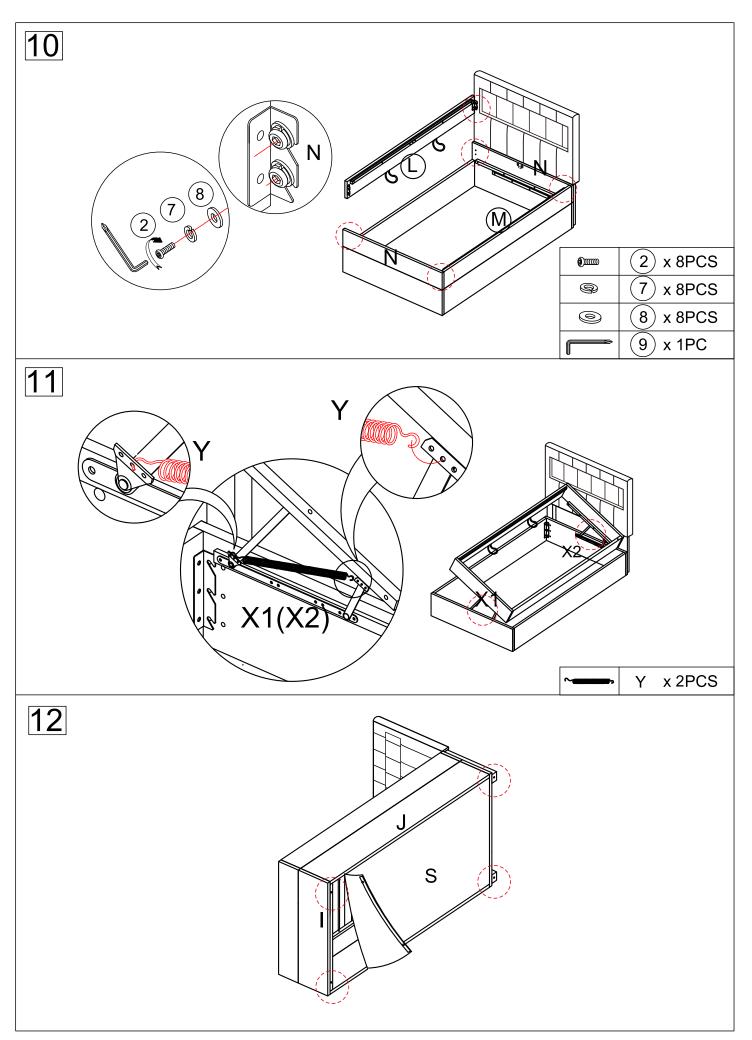

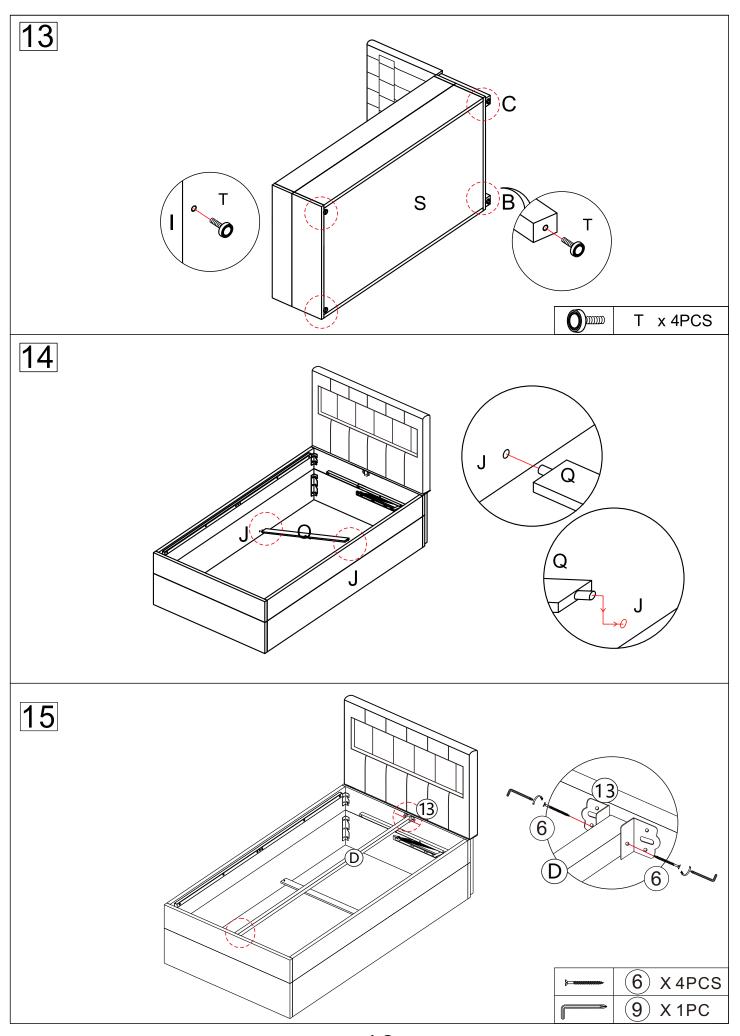

—10 —

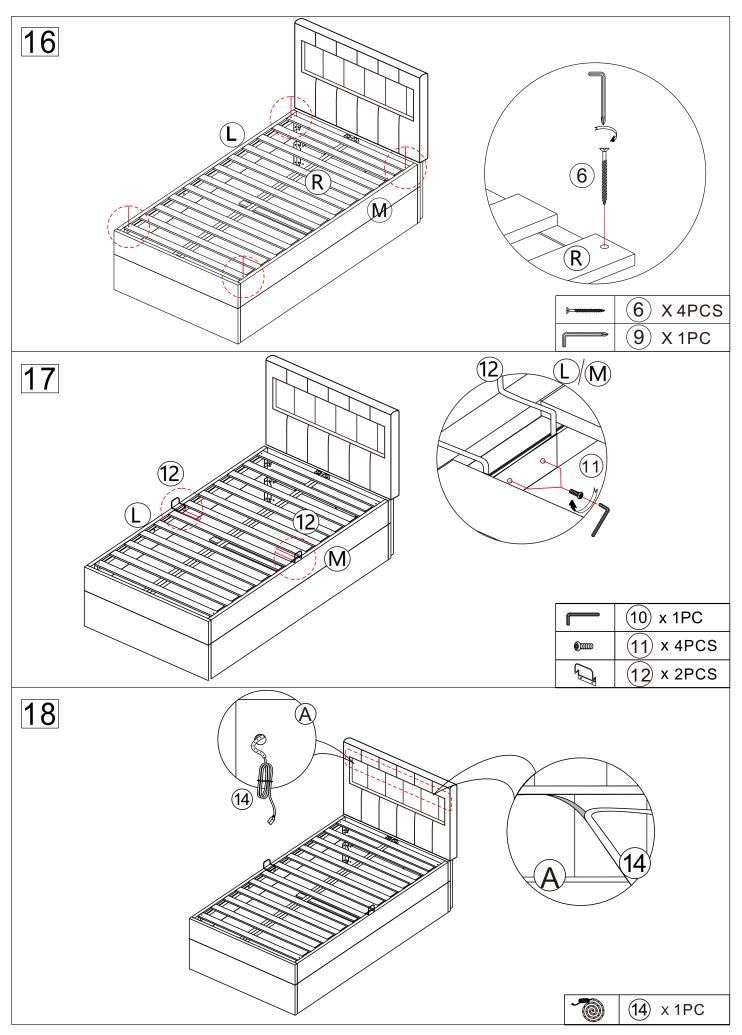

—11 —