
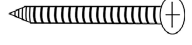

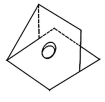
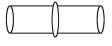



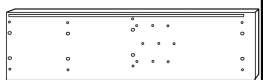
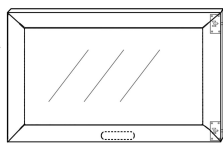
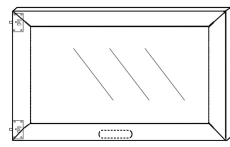








ASSEMBLY INSTRUCTION

(DON'T FULLY TIGHTEN THE SCREWS BEFORE FINISHING ASSEMBLY)

HARDWARE LIST



A 	B  Ø:4x40mm	C  Ø:3x16mm	D 	E 
1 pc	20pcs	12 pcs	12 pcs	18pcs

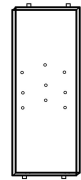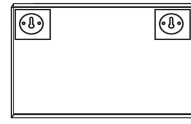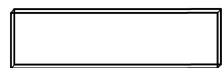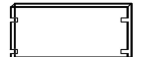PART LIST

F1 	F2 	G1 	G2 	H 
1 pc	1 pc	1 pc	1 pc	1 pc
I 	J 	K 	L 	M 
1 pc	2pcs	1 pc	1 pc	3pcs
N 	O 			
1 pc	1 pc			


INSTRUCTION STEPS

Step 1

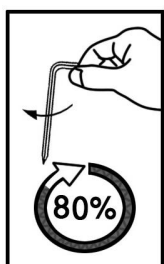
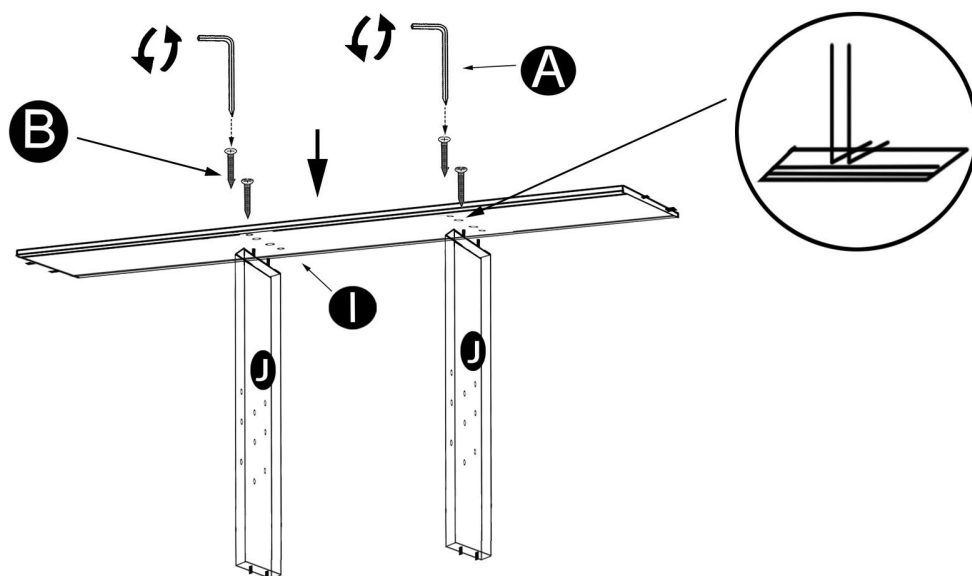


Reminder: 1, Before the cabinet is fully assembled, tighten all the assembly screws again to about 80% to facilitate the later adjustment of the alignment of the panels.

2, When installing the first step, the slot of wooden board I faces downward.

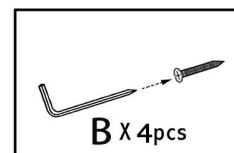


Step 2

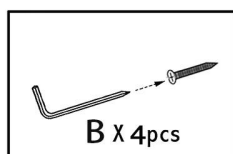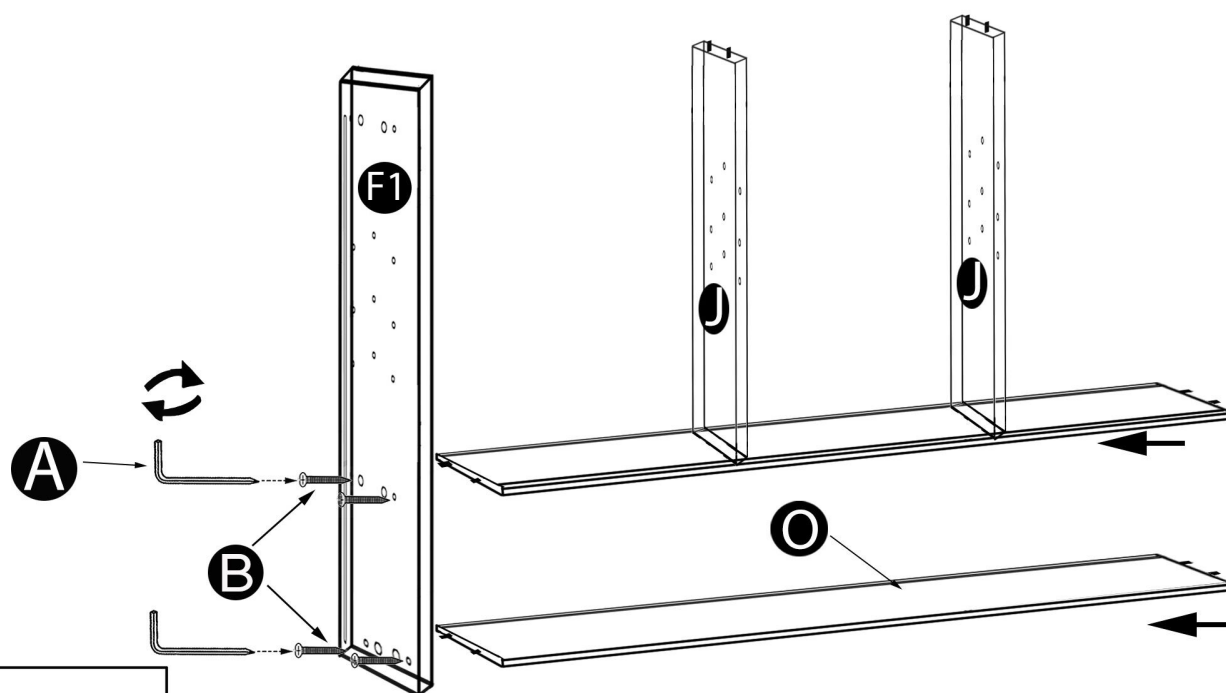


INSTRUCTION STEPS

Step 3

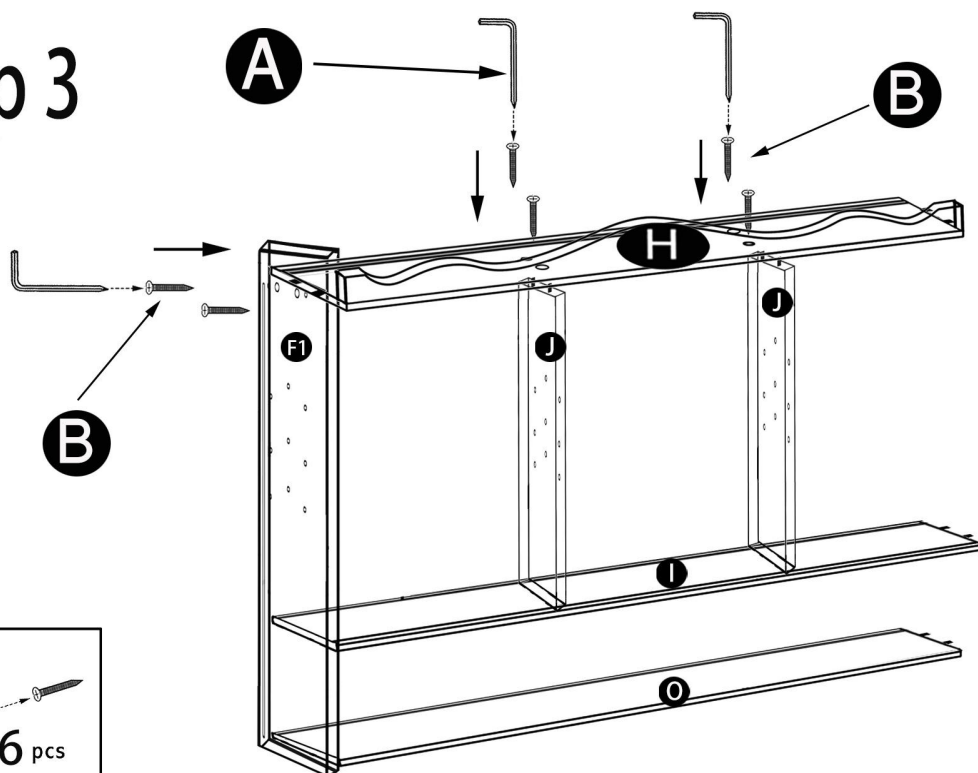


Step 4

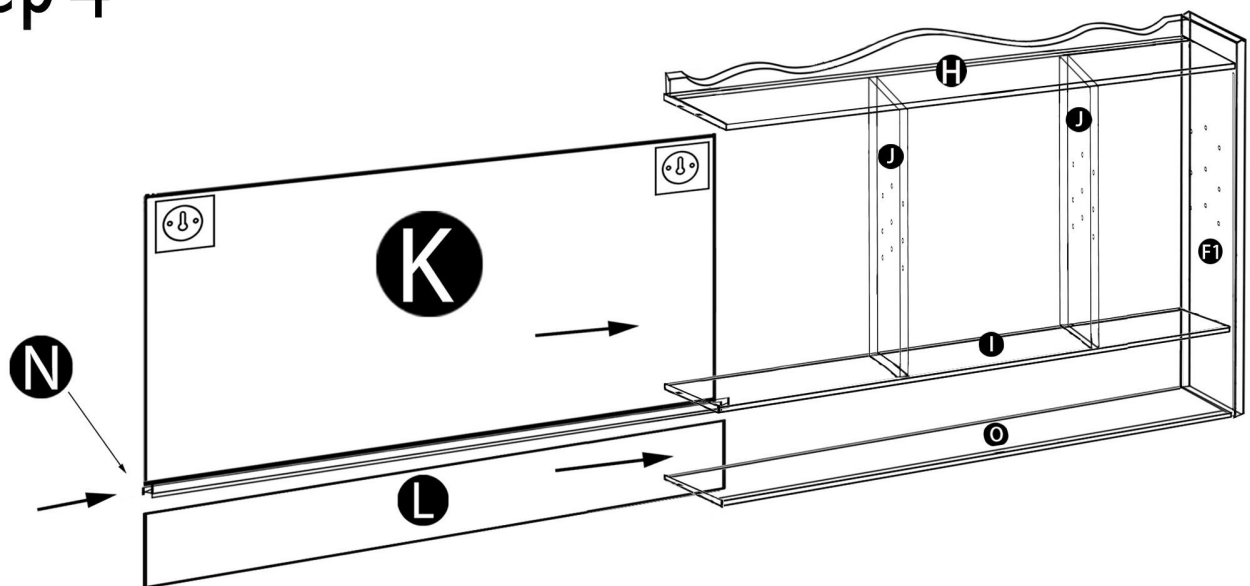


Warm reminder: Push the rear plate L, plastic slot N, and rear plate K into the slots of the F1, H, and O plates in sequence.
Reminder: The hook hole on the back panel should face the wall outside the cabinet.

INSTRUCTION STEPS

Step 5

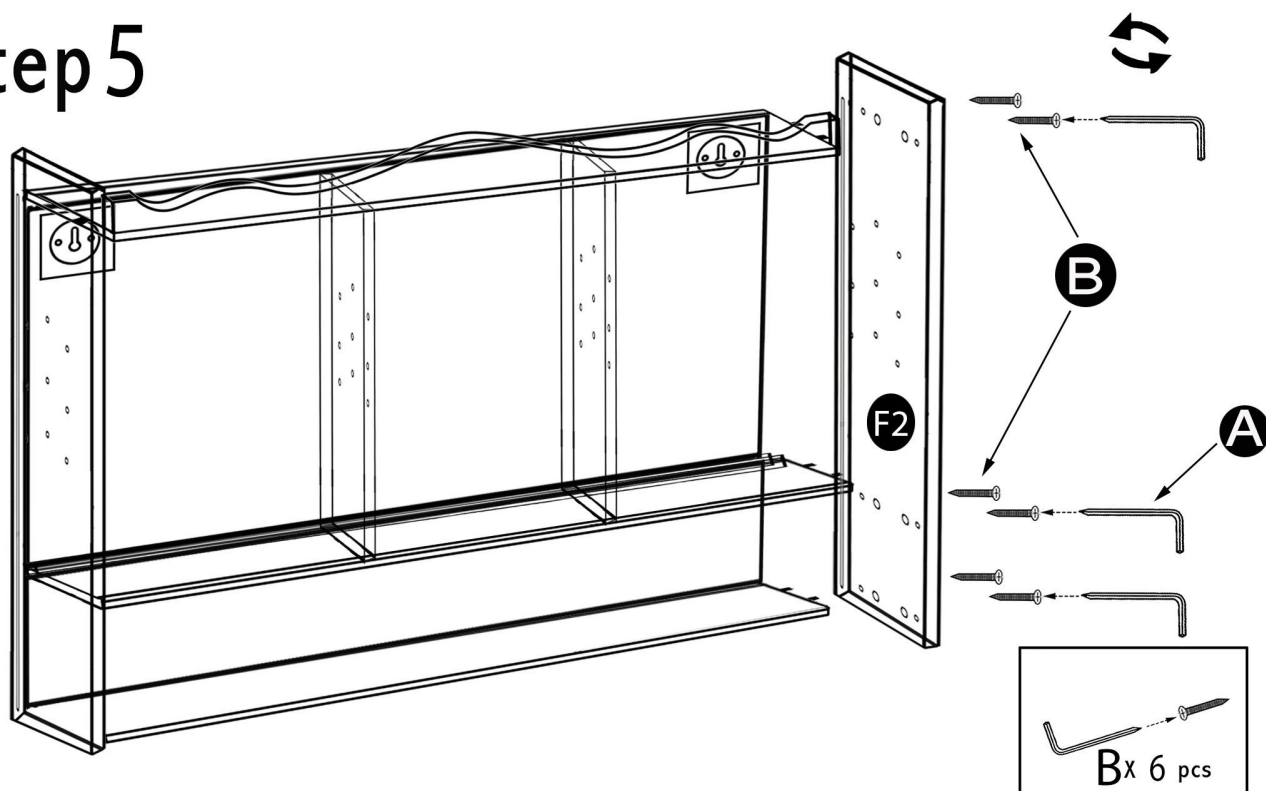


Step 6

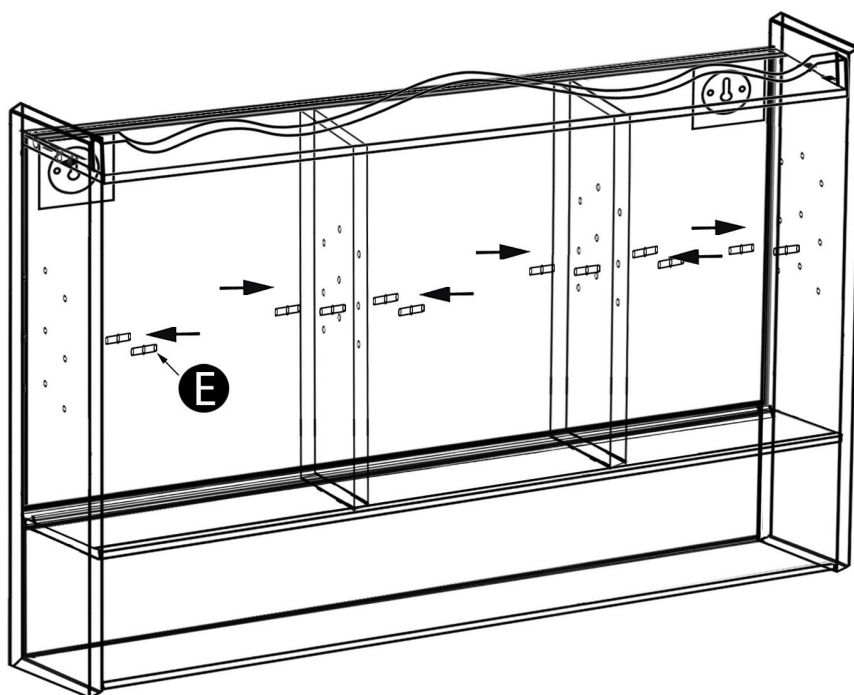

Warm reminder: Sieve E can be adjusted in height and inserted into the corresponding small hole according to the needs of use.


INSTRUCTION STEPS

Step 7

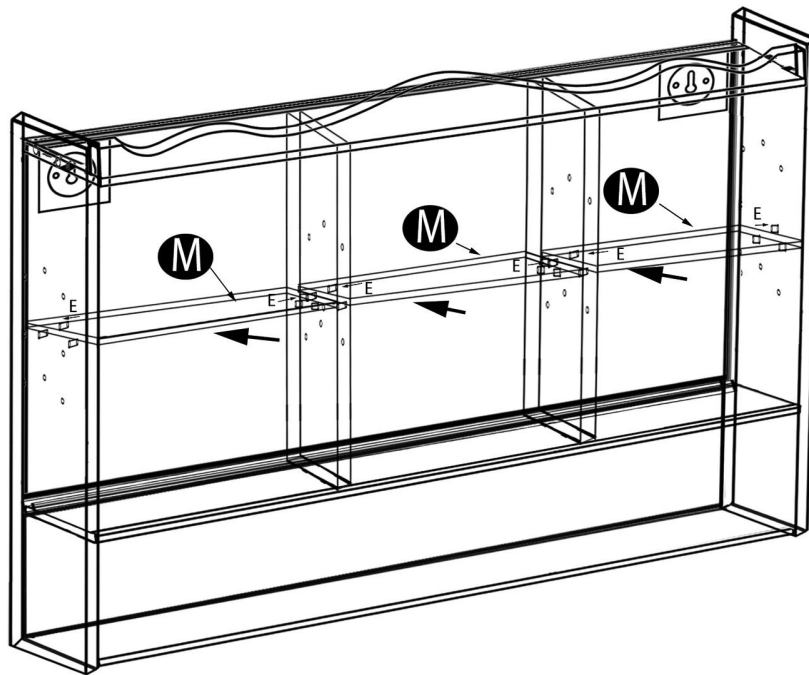

Warm reminder: After pushing the partition M flat onto the plug E, insert the upper hole of the partition into the plug E to prevent the partition from falling out.


Step 8

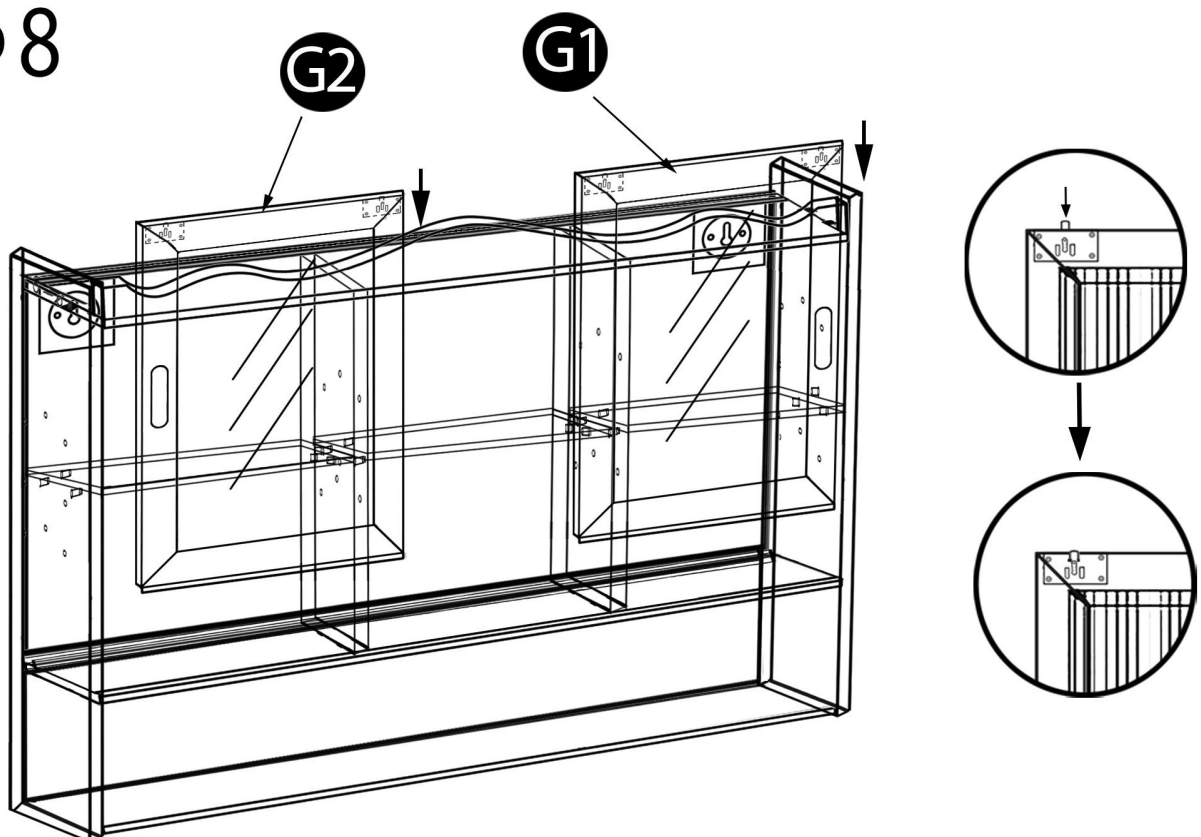




Installation reminder: 1. Press the door clip to the bottom first.
2. The bottom edge of the door is stuck in the lower groove.
3. The top of the door matches the upper groove.
4. Lift the door clip.

INSTRUCTION STEPS

Step 9

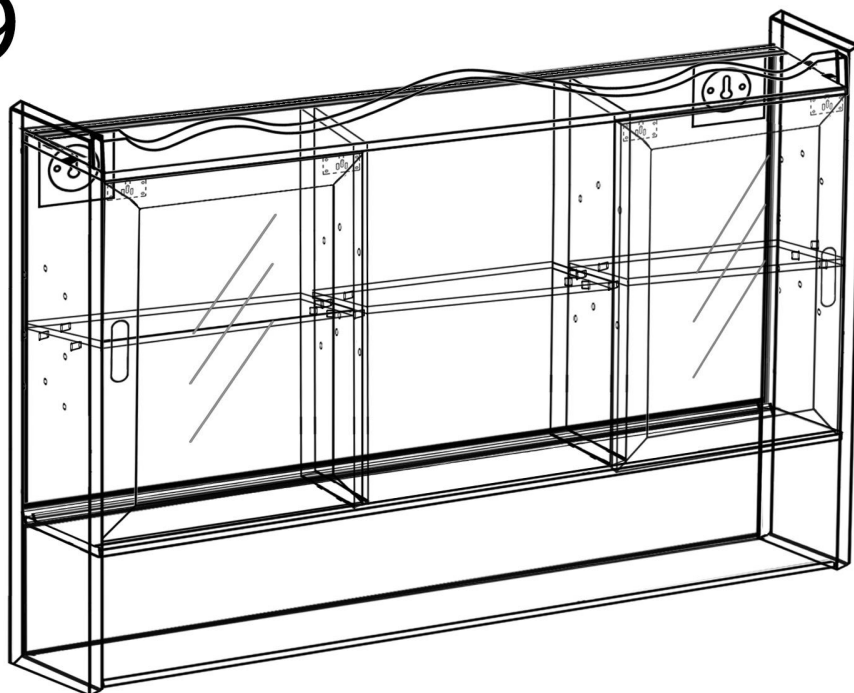


Step 10

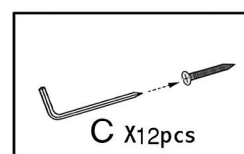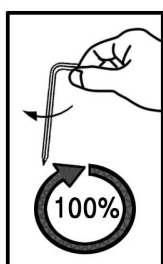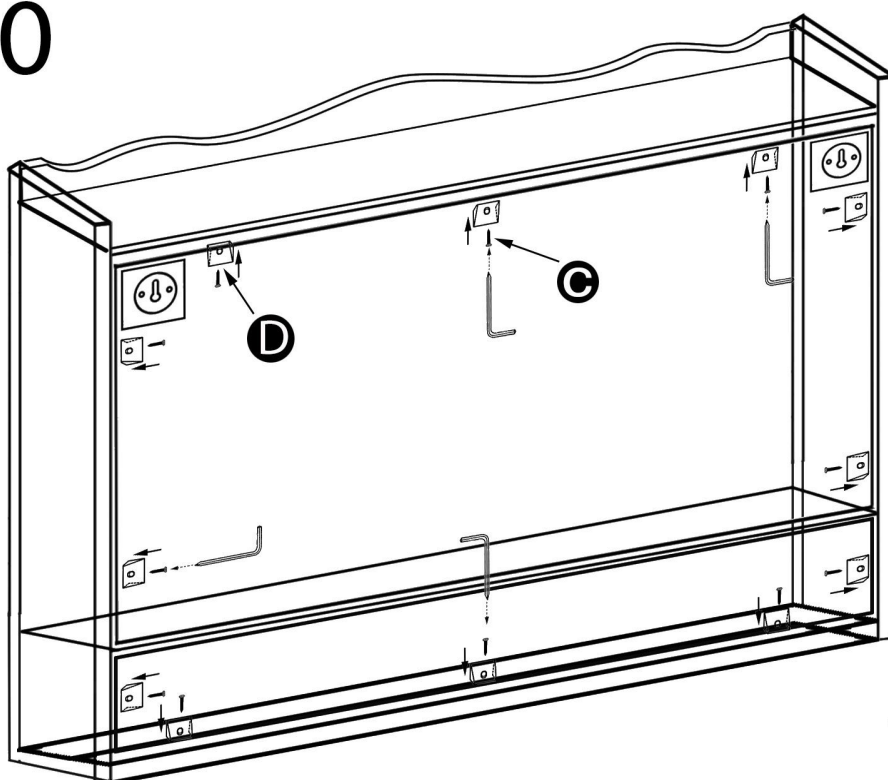

Reminder: After the cabinet is fully assembled, tighten all the assembly screws again to 100% tightness.

INSTRUCTION STEPS

Step 1 1

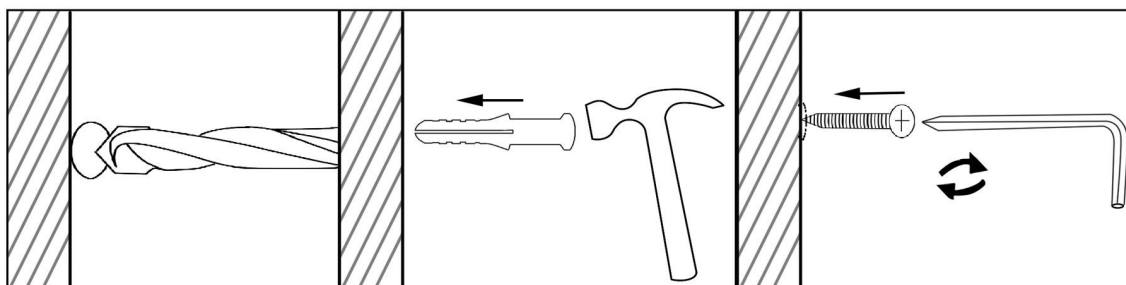

Step 1 2

