

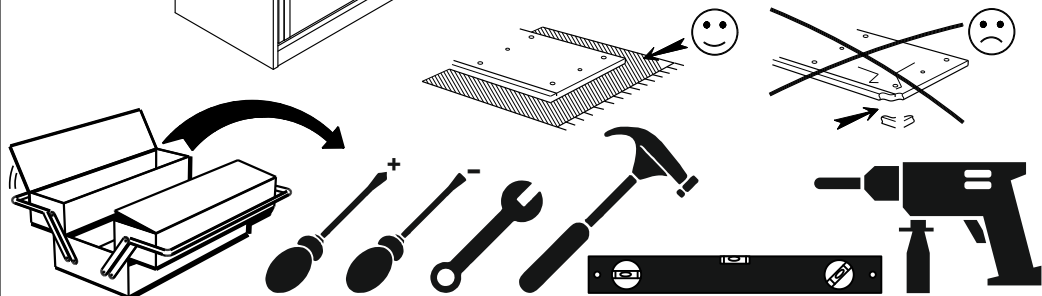


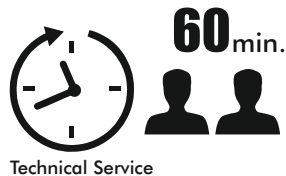

MULTIMO

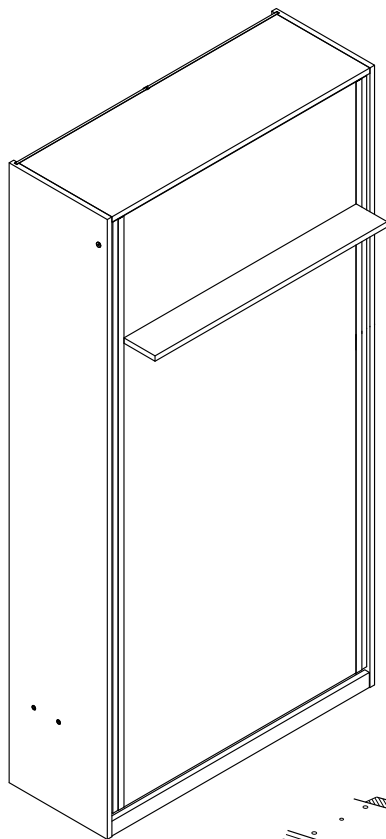












701-PRIMER VERTICAL SINGLE




Assembly Instructions

Track Title	Piece	(inch)			(mm)			
		Thickness	Length	Width	Piece	Thick	Height	Most
A		0,71	81,89	14,96	2	18	2080	380
B		0,71	39,37	14,17	1	18	1000	360
C		0,71	39,37	14,17	1	18	1000	360
D		0,71	39,37	10,24	1	18	1000	260
E		0,71	39,37	10,24	1	18	1000	260
F		0,71	39,37	1,97	1	18	1000	50
G		0,71	35,43	4,72	1	18	900	120
H		6,61	78,11	38,74	1	168	1984	984
K		0,31	81,54	19,96	2	8	2071	507


Accessories List

<p>MNX 02</p>  <p>21 / piece</p>	<p>MNG - 01</p>  <p>21/ piece</p>	<p>VDA - 01 (6,5x50) mm</p>  <p>8/ piece</p>	<p>OT-054</p>  <p>2 / piece</p>
<p>CT - 02 (6x30) mm</p>  <p>2/ piece</p>	<p>DD - 01 (R10)</p>  <p>2 / piece</p>	<p>VD - 01(6X70) mm</p>  <p>2 / piece</p>	<p>DSE - 01 (40x90x32) mm</p>  <p>2 / piece</p>
<p>PL - 01 (6x19x2) mm</p>  <p>2 / piece</p>	<p>VTB - 01 (4,8x16) mm</p>  <p>12/ piece</p>	<p>IM - 02 (6x20) mm</p>  <p>4 / piece</p>	<p>CT - 04 (6x20) mm</p>  <p>8/ piece</p>
<p>VD - 02 (3,5x25) mm</p>  <p>10 / piece</p>			

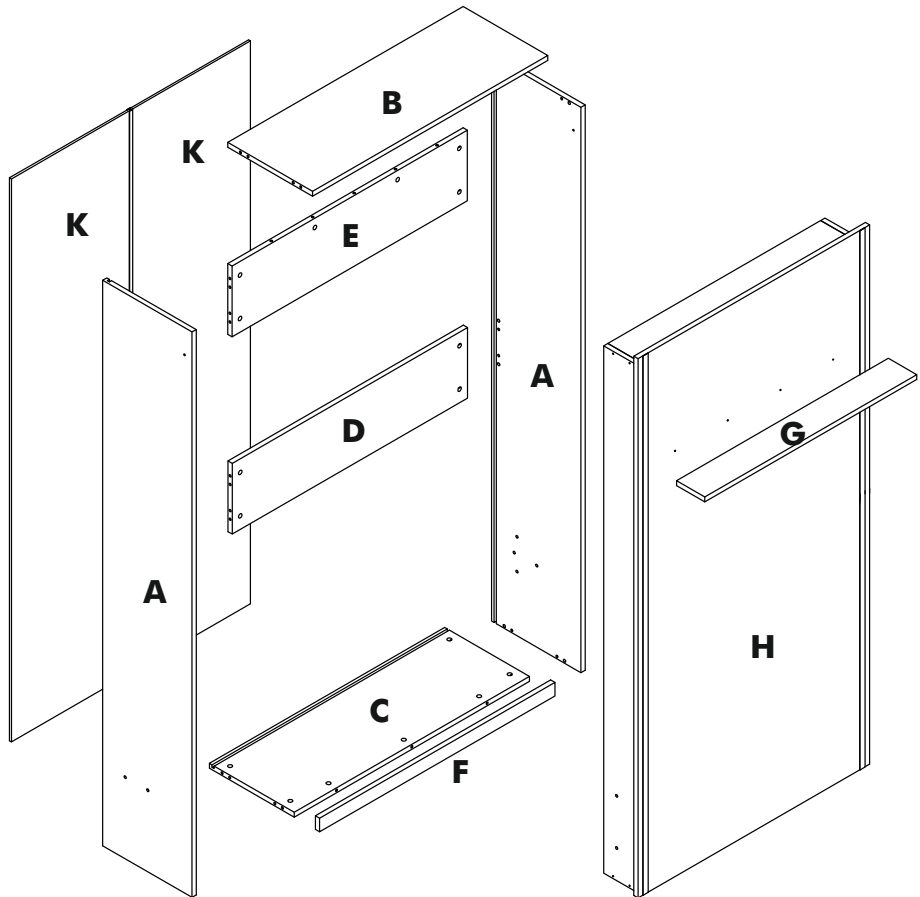




MNX - 02





KVL 01

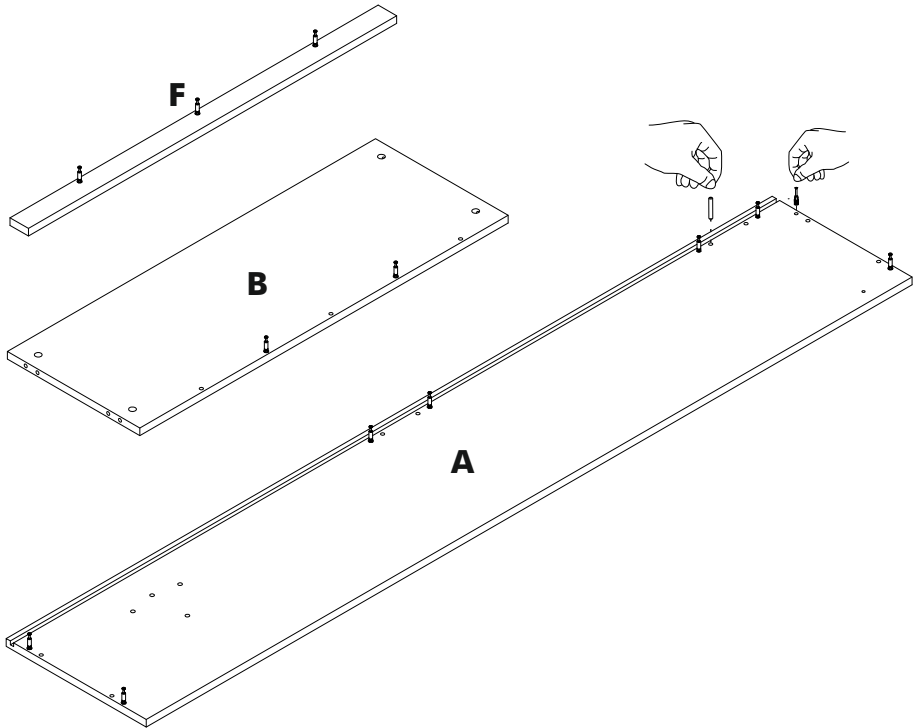


STEP 2



MNG - 01

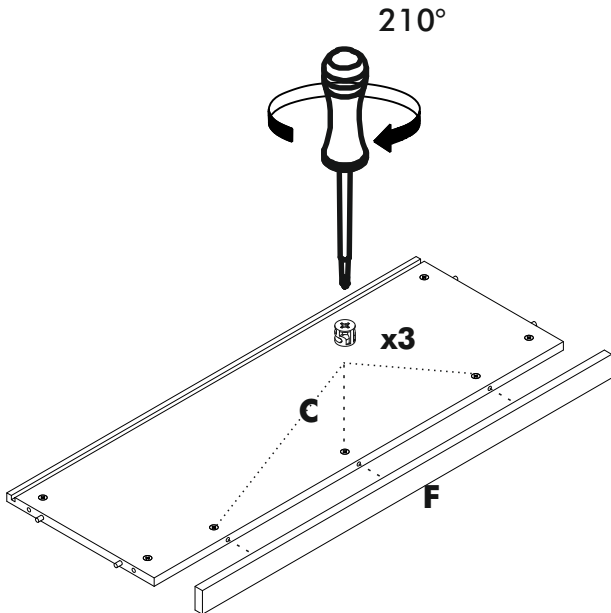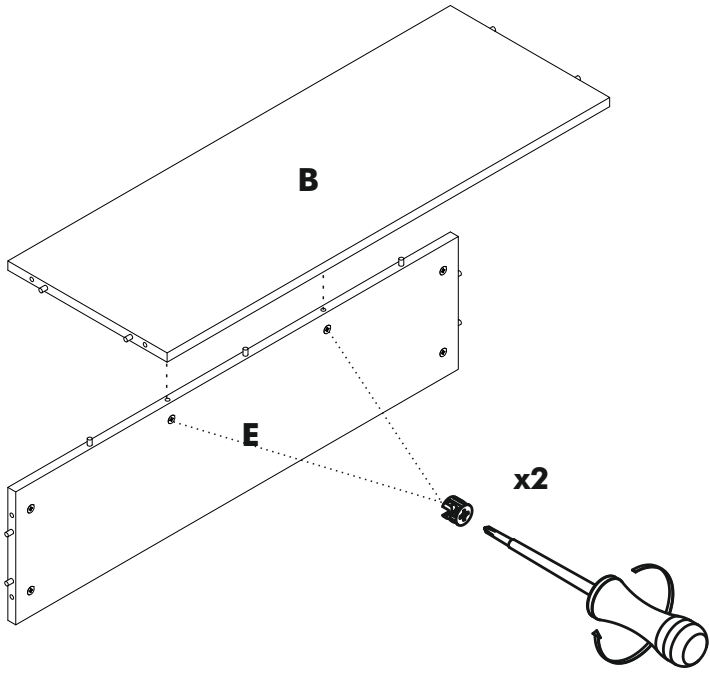


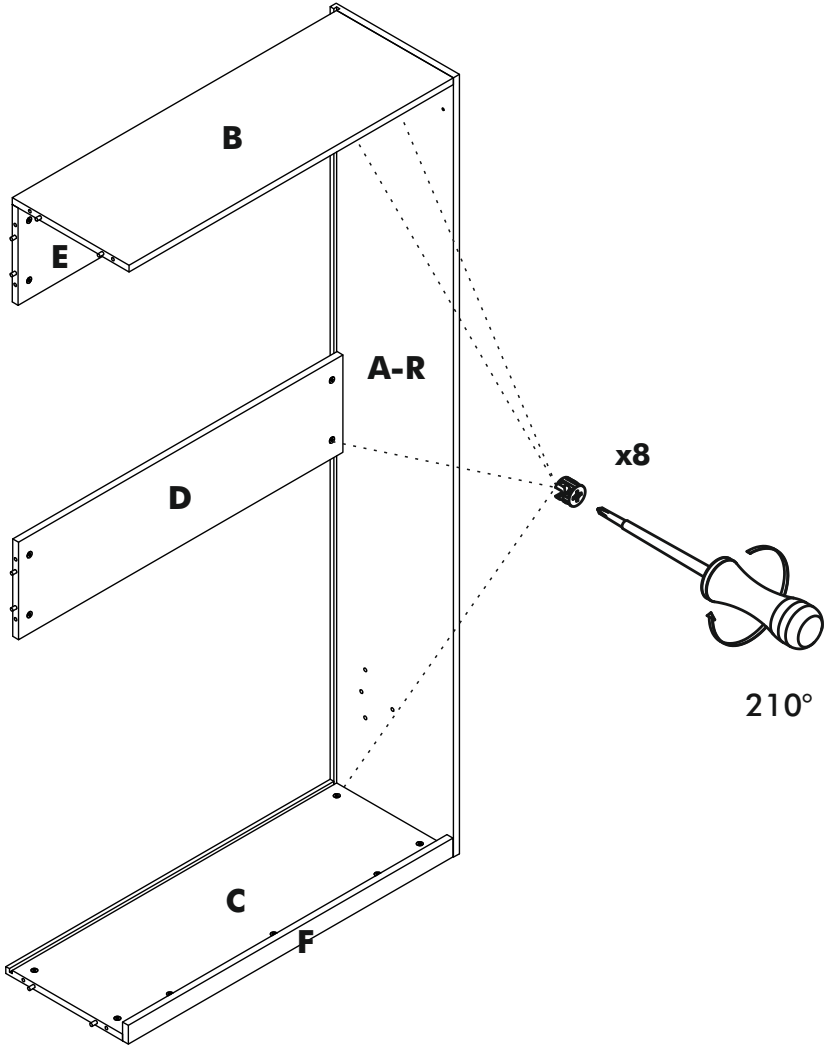


STEP 4





MNG - 01


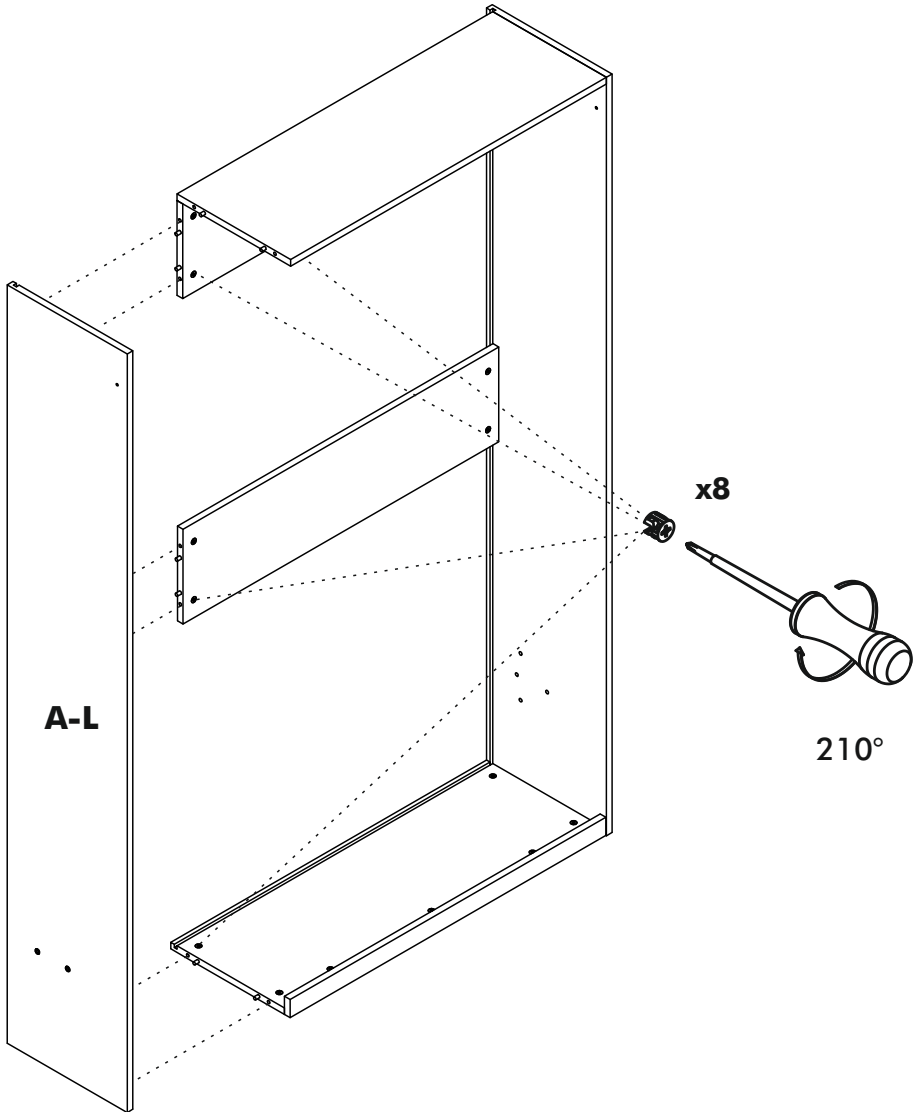


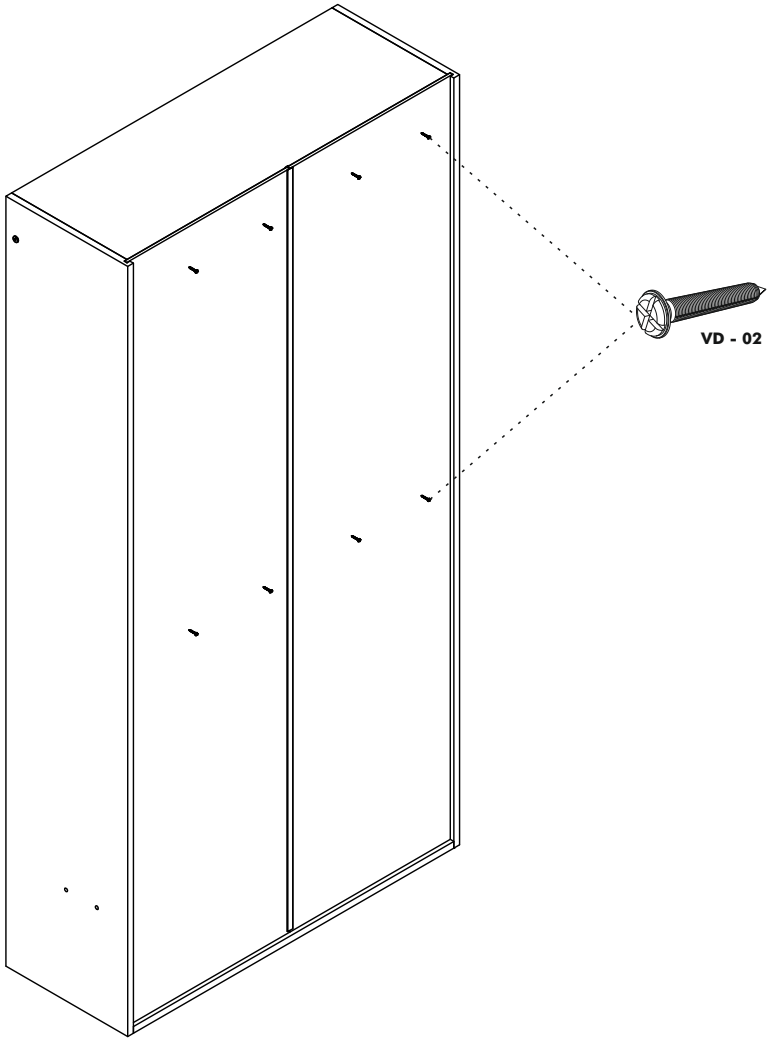

STEP 6

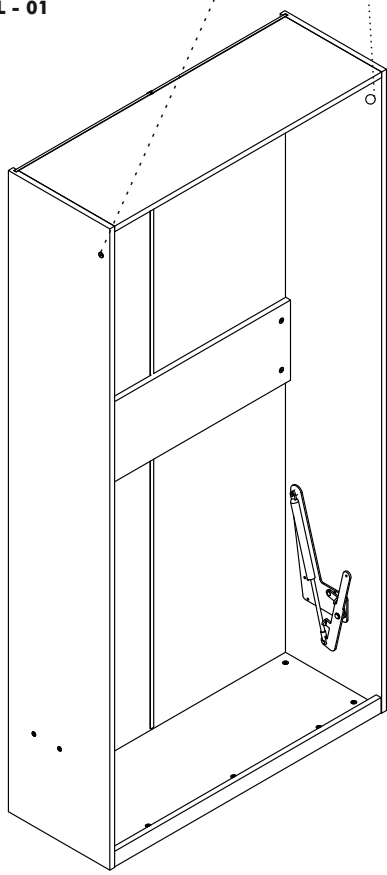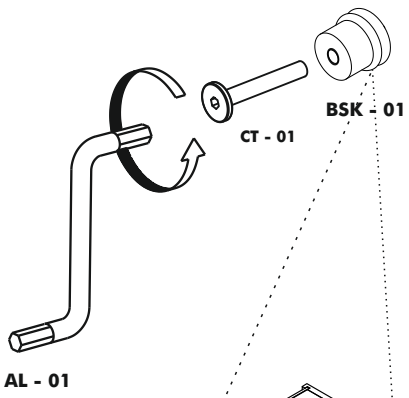

CAUTION
DO NOT UNLOCK BEFORE INSTALL

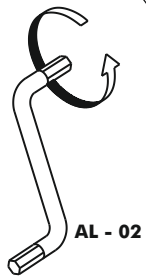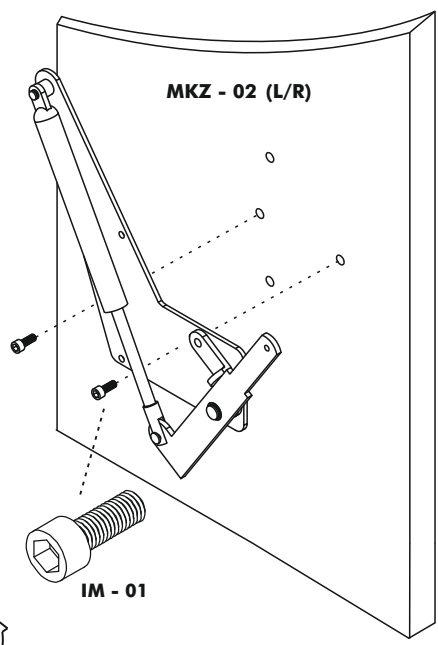



DD - 01


Ø 10 mm / 0,254 inch

PL - 01


VD - 01


VTB - 01

DSE - 01


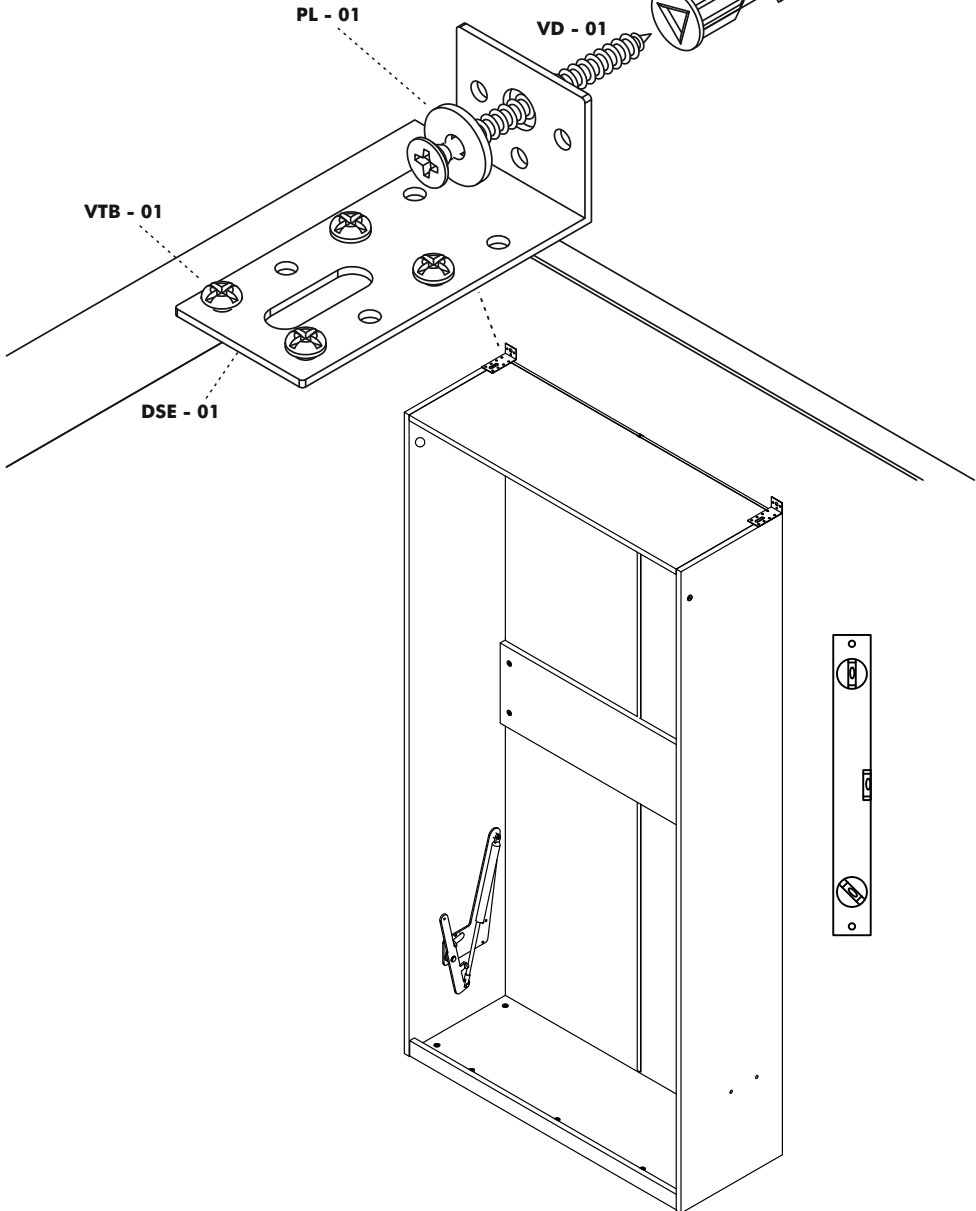


STEP 8

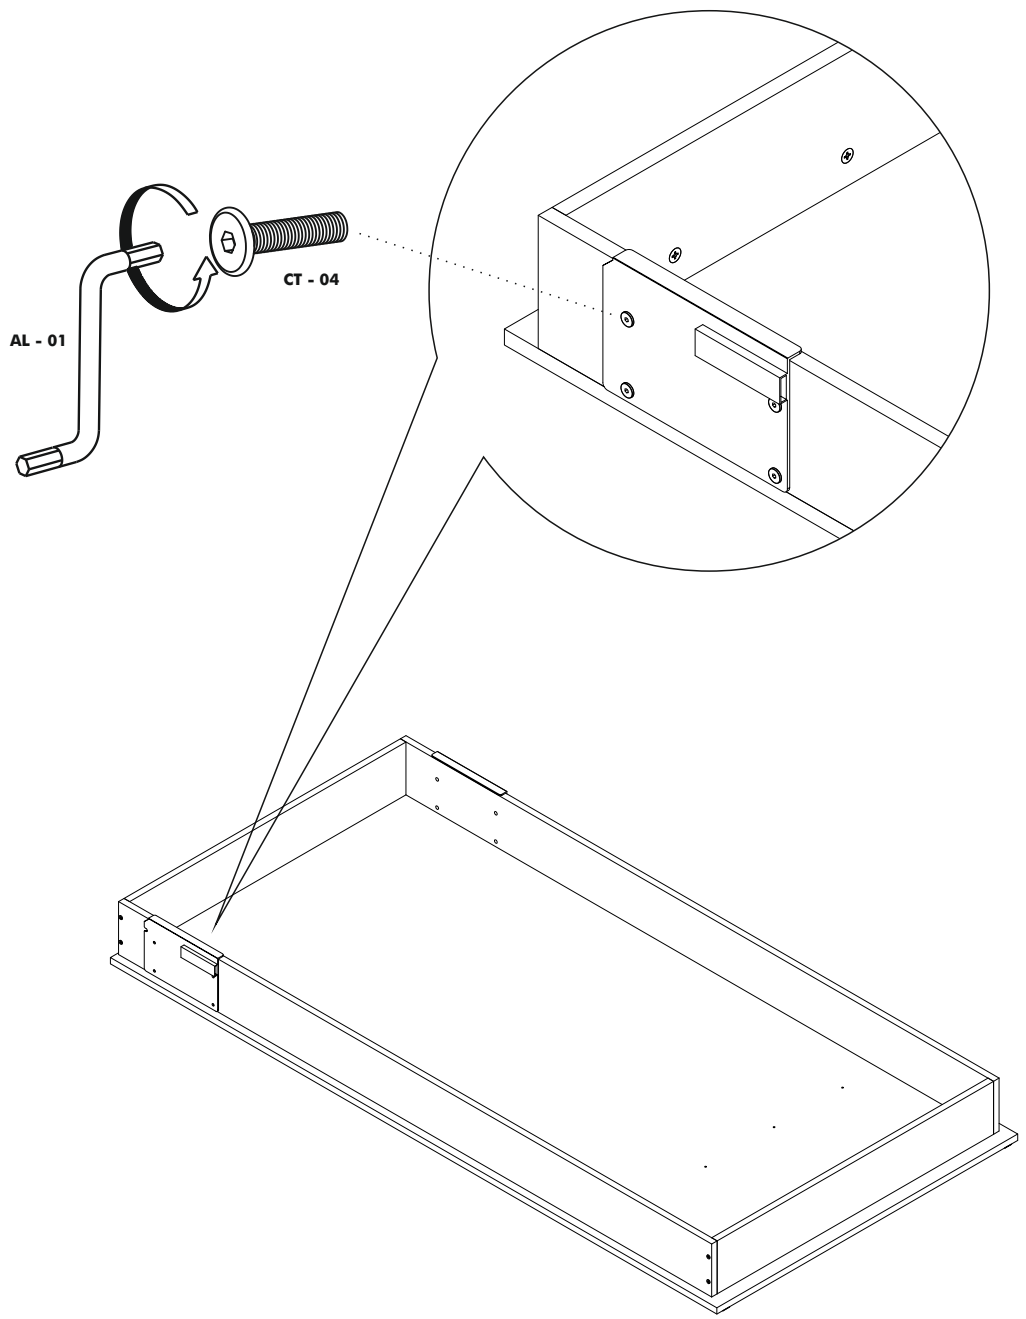


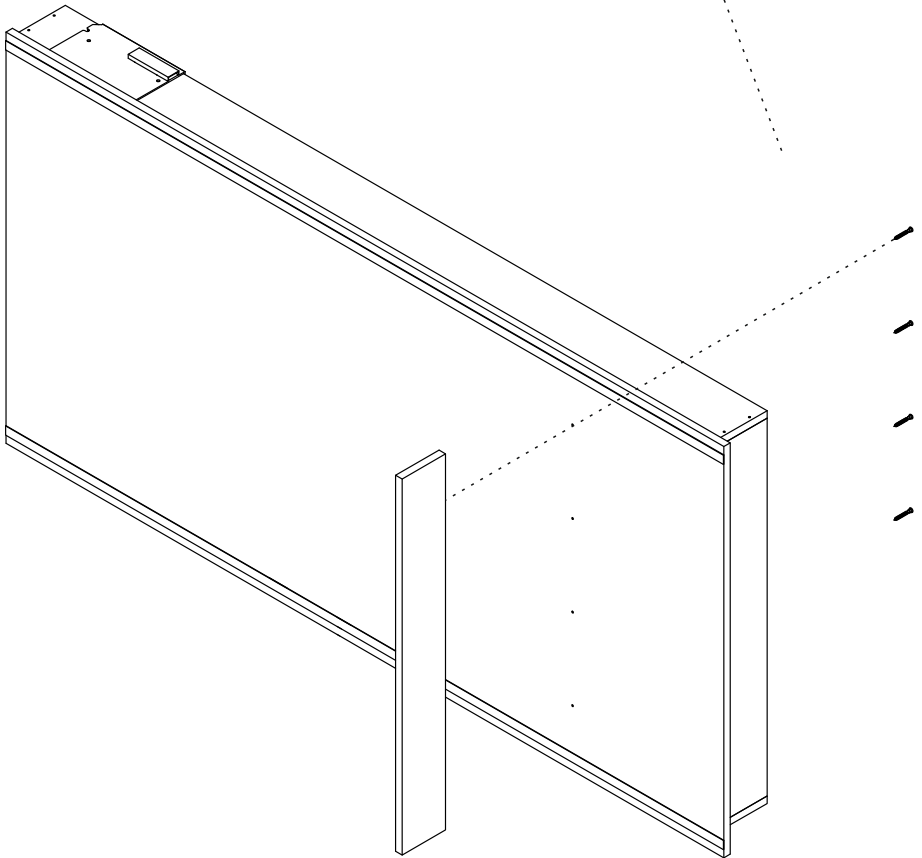


STEP 10

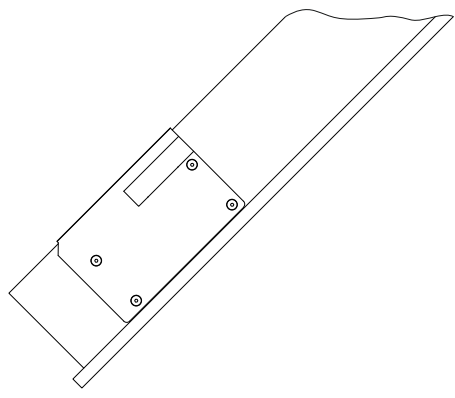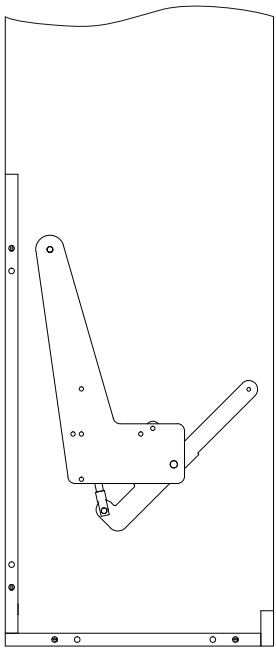


STEP 11

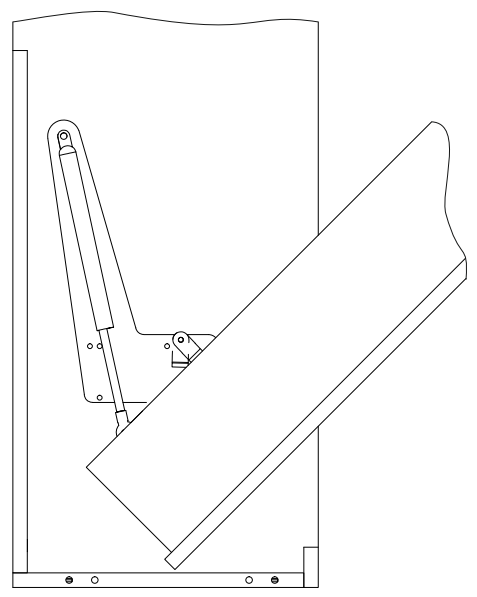

STEP 12

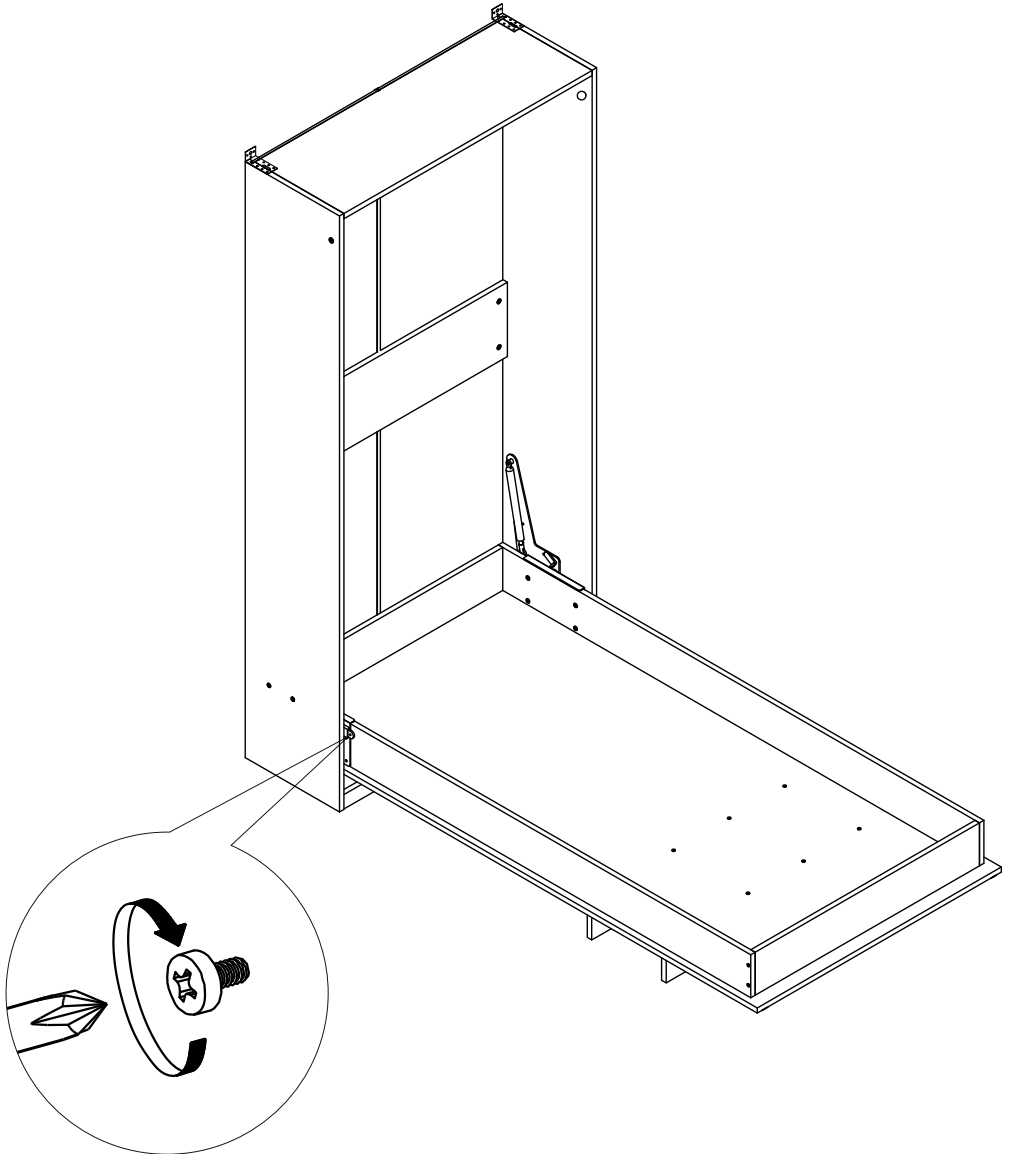

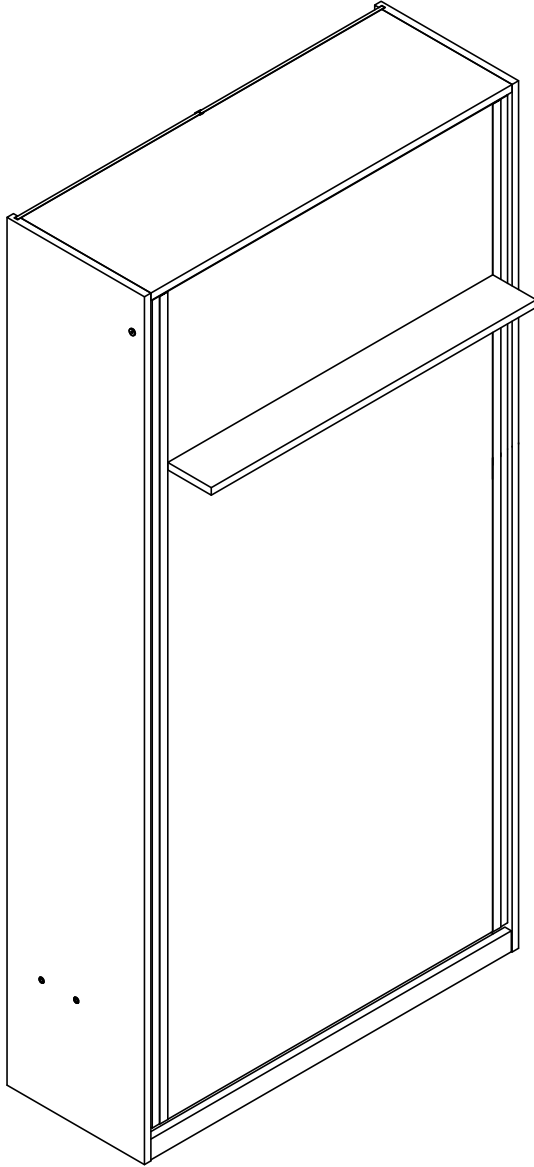



www.multimo.com