

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromážďovací instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу



H Gennyesedés utasítások

Nordica



Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapizate pat-Upholstered bed-Мягкая кровать-уатак капитоне-Letto imbottito-Lit rembourré
Čalouněná postele čalouněná postele kárpizovaný ágy

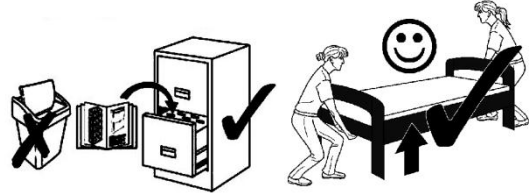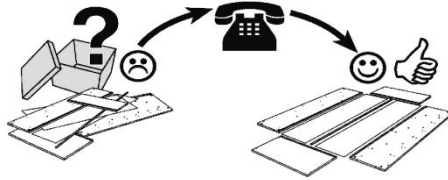



90 cm

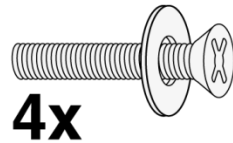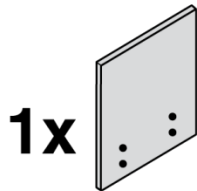



1x

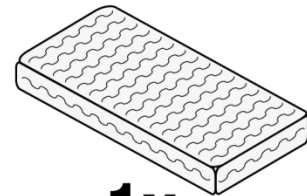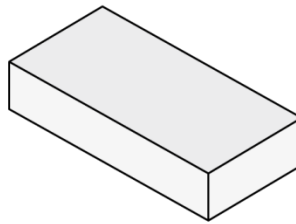



140 cm

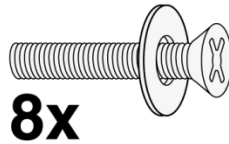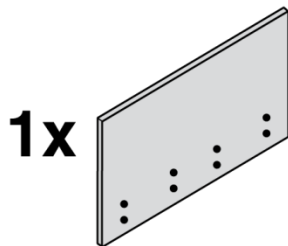



2x



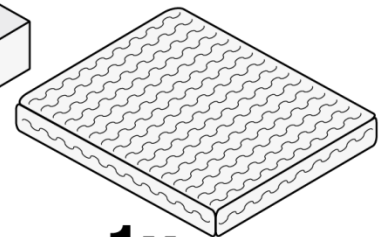
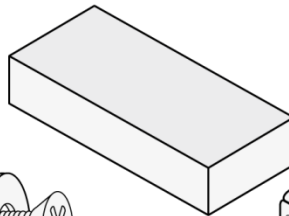


180 cm

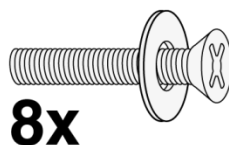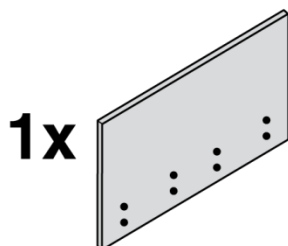

2x

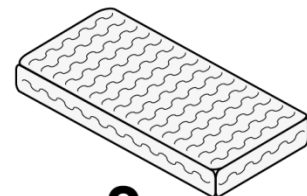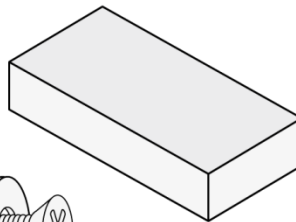

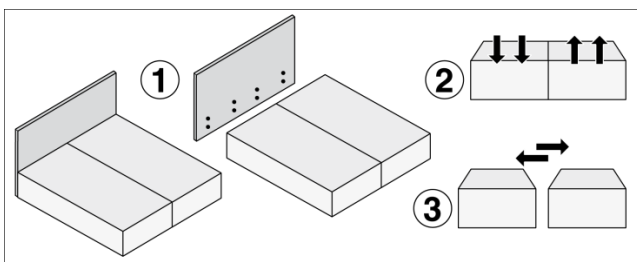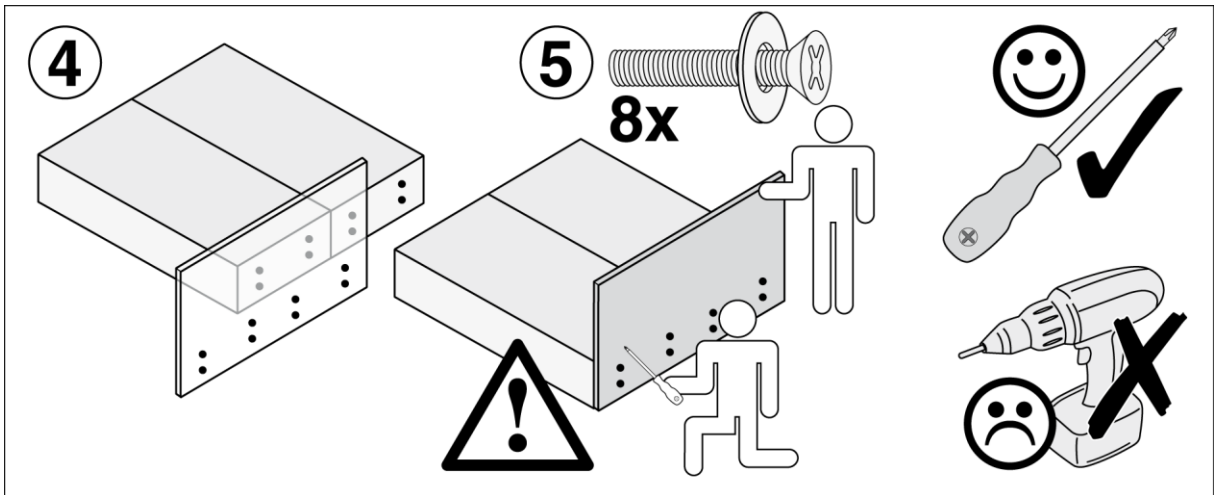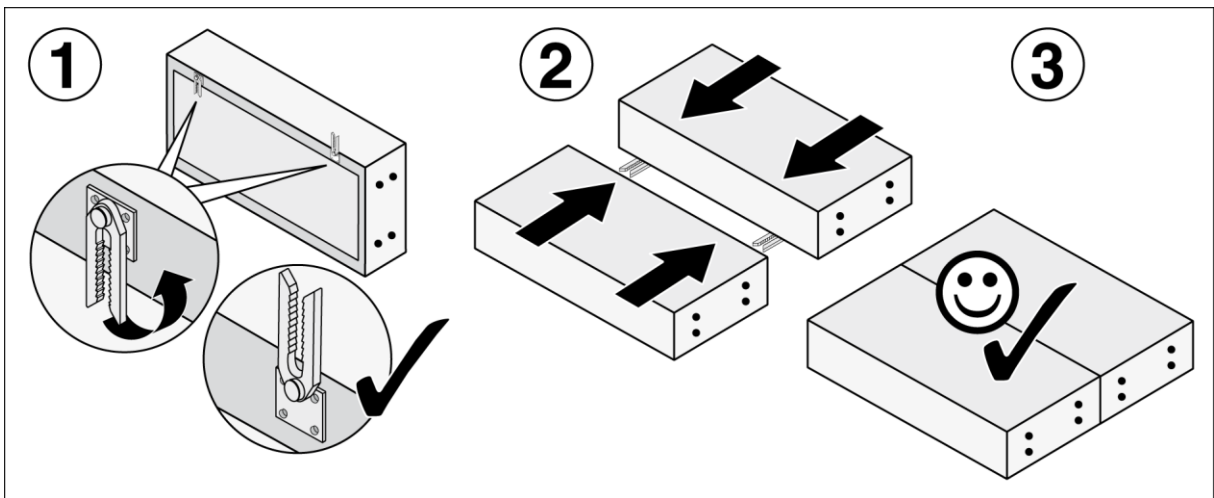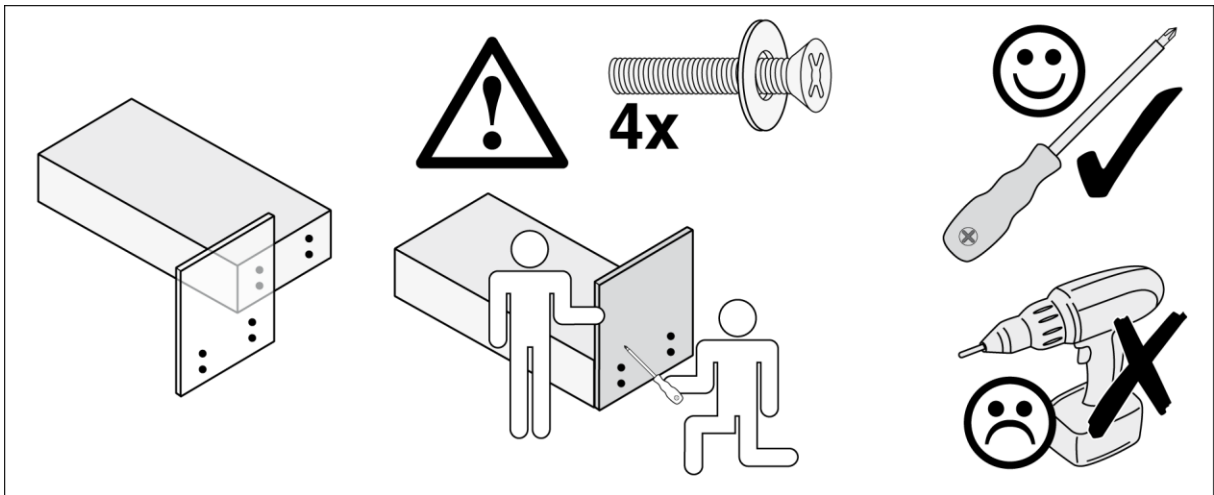

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Str. 123
32584 Löhne / Germany