


1 → 2 → 3 ...


8x Nr. 98 UL 806-3 / UL 906-3 / SPL 806-3 / SPL 906-3 / SP 106-3	4x Nr. 371	2x Nr. 121	2x WS-8 Nr. 523	2x WS-8 6.3x13 Nr. 274	5x UL 806-3 / UL 906-3 / SPL 806-3 / SPL 906-3 / SP 106-3
--	---------------	---------------	-----------------------	---------------------------------	---

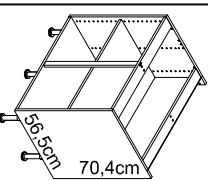

80cm KU806-8
90cm KU906-8
100cm KU106-8

Service-Hotline
01805-678101
0,14€ pro Minute
Auslandstarif pro Minute
service@jaka-bkl.de
voor Nederland en België
00800-40119350
benelux@jaka-bkl.de


Montageanleitung

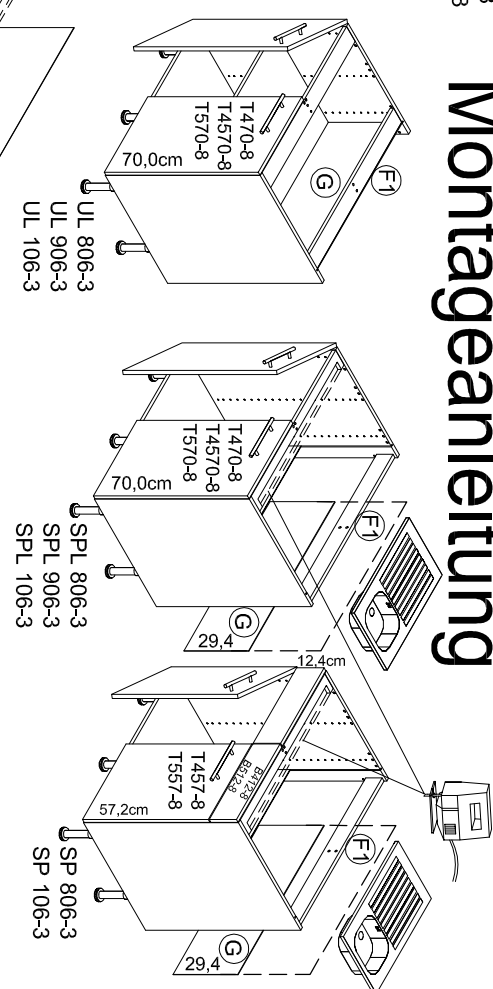


UL 806-3
UL 906-3
UL 106-3

SPL 806-3
SPL 906-3
SPL 106-3



SP 806-3
SP 106-3

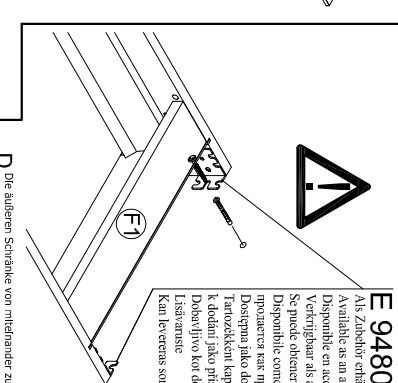


E 948031
Als Zubehör erhältlich
Available as an accessory
Disponibile en accessorio
Verkrijgbaar als accessorio
Se puede obtener como accesorio
Disponibile come accessorio
ipparcarea este necesara
Disponibile jako dodatekove vypraveni
k dodání jako příslušenství
Dobro je ako dodatna oprema
Lisárname
Kant leverters som tilbehør

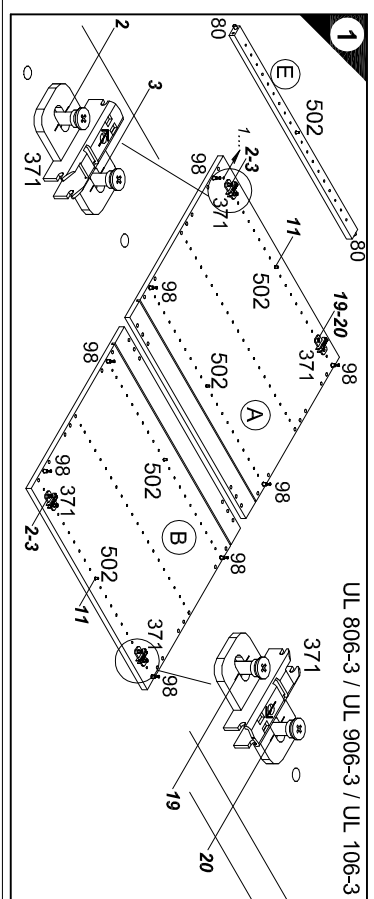

UL 806-3 / UL 906-3 / UL 106-3

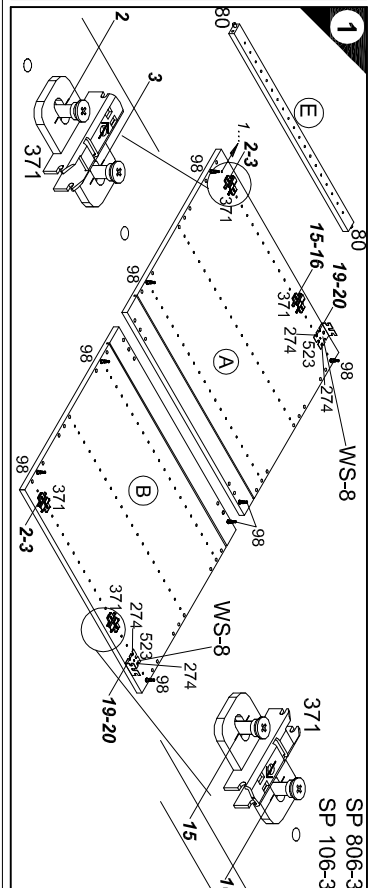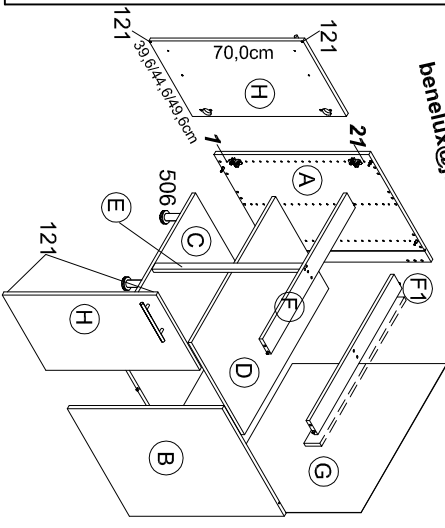

SP 806-3
SPL 906-3
SPL 106-3

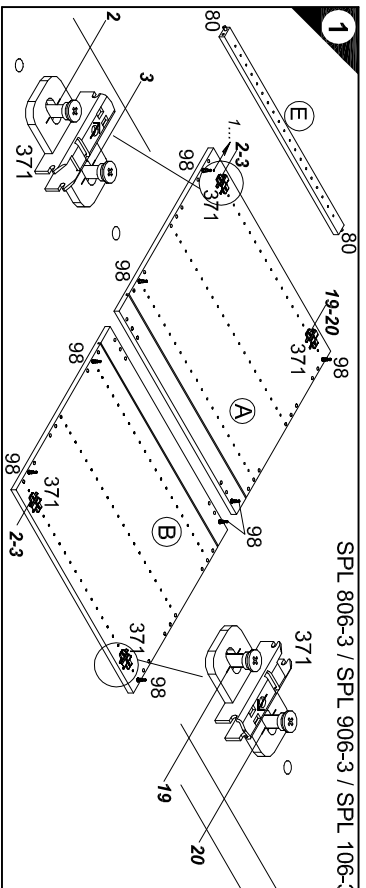

SPL 806-3 / SPL 906-3 / SPL 106-3










Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienne/pótkalkatrészek/Náhradní části/Nadomesini deli/Varaosaj/resservdelar	A	B	C	D	E	F	G	H
80cm UL 806-3	(A) E941021	(B) E941021	(C) E951212	(D) E950302	(E) E940099	(F) E942972	(G) E970005	(H) E940623
90cm UL 806-3	(A) E941021	(B) E941021	(C) E951218	(D) E950312	(E) E940099	(F) E942978	(G) E970072	(H) E940620
100cm UL 806-3	(A) E941021	(B) E941021	(C) E951211	(D) E950301	(E) E940099	(F) E942971	(G) E970115	(H) E940622
80cm SPL 806-3	(A) E941021	(B) E941021	(C) E951212	(D) E940099	(E) E942972	(F) E940099	(G) E970005	(H) E940623
90cm SPL 906-3	(A) E941021	(B) E941021	(C) E951218	(D) E940099	(E) E942978	(F) E942978	(G) E970072	(H) E940620
100cm SPL 106-3	(A) E941021	(B) E941021	(C) E951211	(D) E940099	(E) E942971	(F) E962971	(G) E970115	(H) E940622
80cm SP 806-3	(A) E941021	(B) E941021	(C) E951212	(D) E940099	(E) E942972	(F) E940099	(G) E970005	(H) E940623
100cm SP 106-3	(A) E941021	(B) E941021	(C) E951211	(D) E940099	(E) E942971	(F) E962971	(G) E970115	(H) E940622

Montageanleitung






1 → 2 → 3 ...

- 4x Nr. 76
- 2,5x Nr. 506
- 7x4,2 Nr. 78
- 1x Ø8/Ø13 Nr. 104
- 4x Nr. 76
- 1x 7x4,2 Nr. 78
- 1x 10x Nr. 204
- 4x Nr. 370
- 2x WS-8 4x15 Nr. 182
- 2x E445223 4x30 Nr. 164
- 10x Ø8x30 Nr. 80
- 4x 4,5x30 Nr. 417
- 2x 4x30 Nr. 111
- 1x Nr. 505

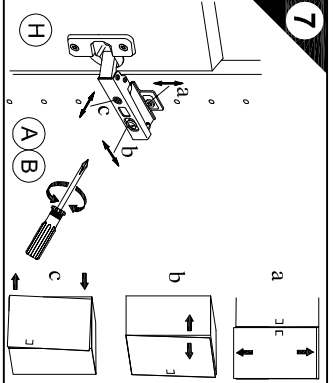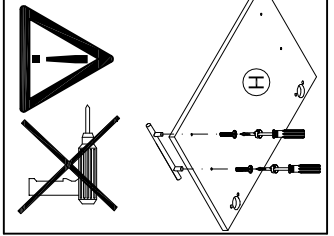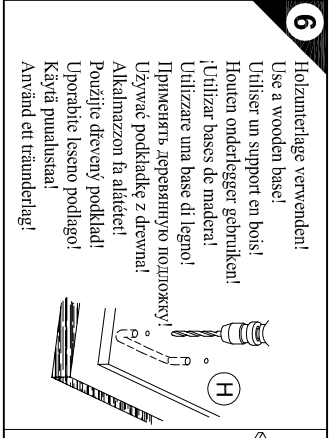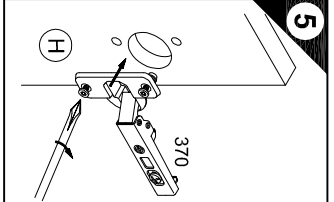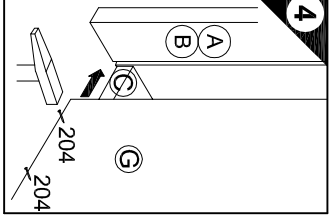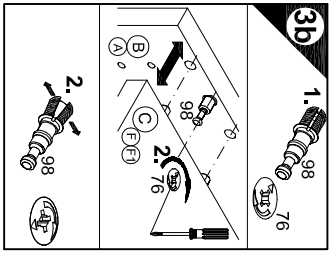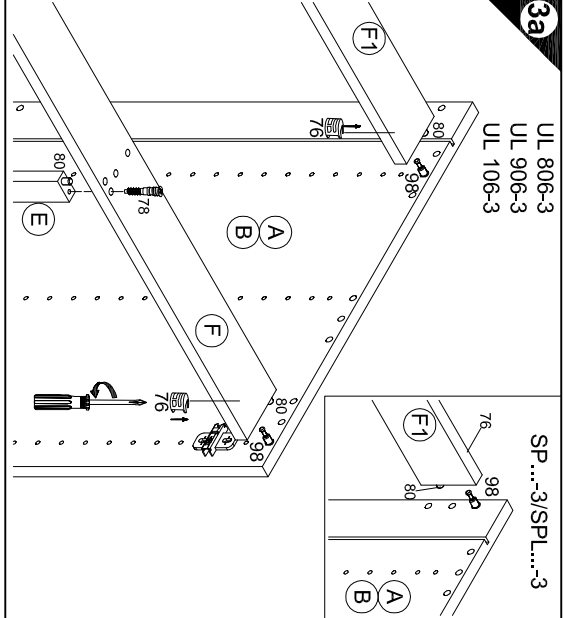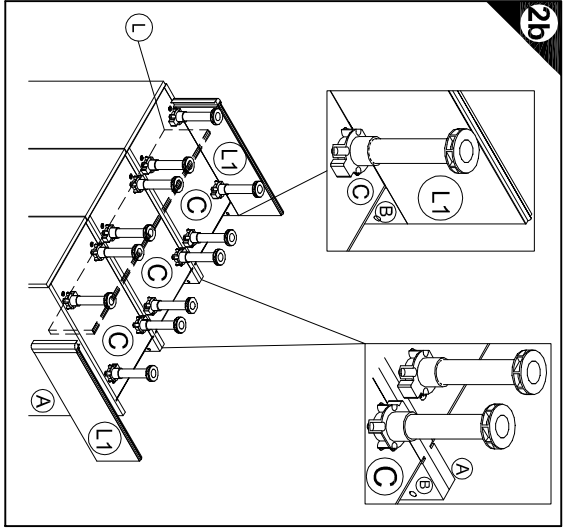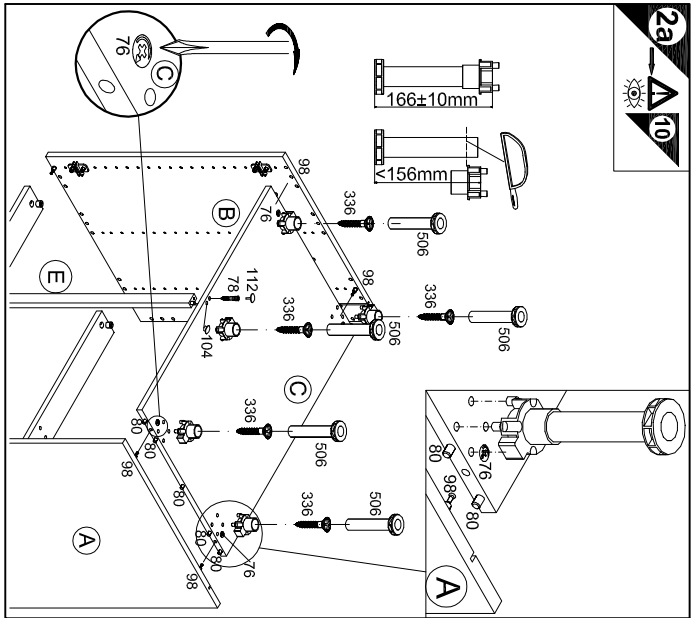

SP 806-3 / SP 106-3

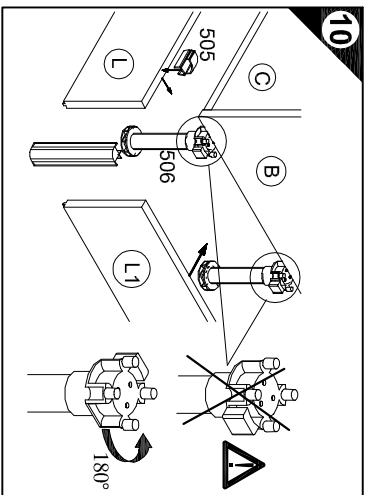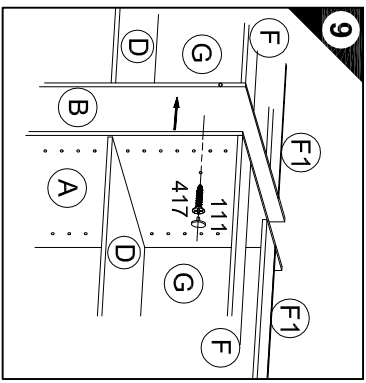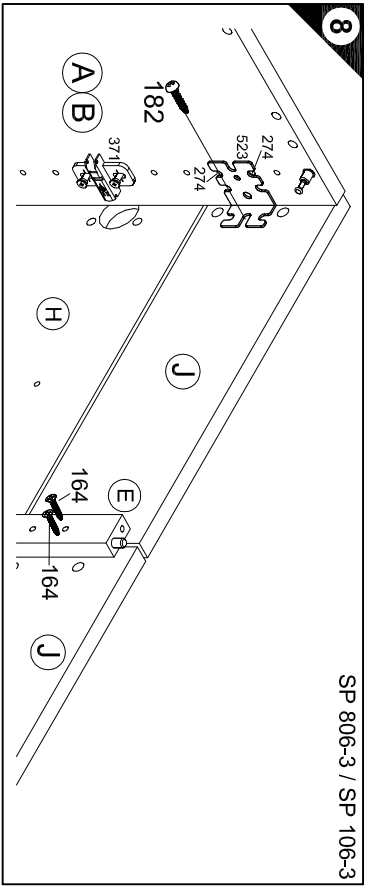

Holzunterlage verwenden!
 Use a wooden base!
 Utiliser un support en bois!
 Houten onderlegger gebruiken!
 Utilizar bases de madera!
 Utilizzare una base di legno!
 Применять деревянную подложку!
 Уżywac podkładkę z drewna!
 Alkalmazzon fa alátételt!
 Pouzítte dřevěný podklad!
 Uprorabite leseno podlago!
 Käytä puupalustaa!
 Använd ett träunderlag!

