



ASSEMBLY INSTRUCTIONS













1580mm

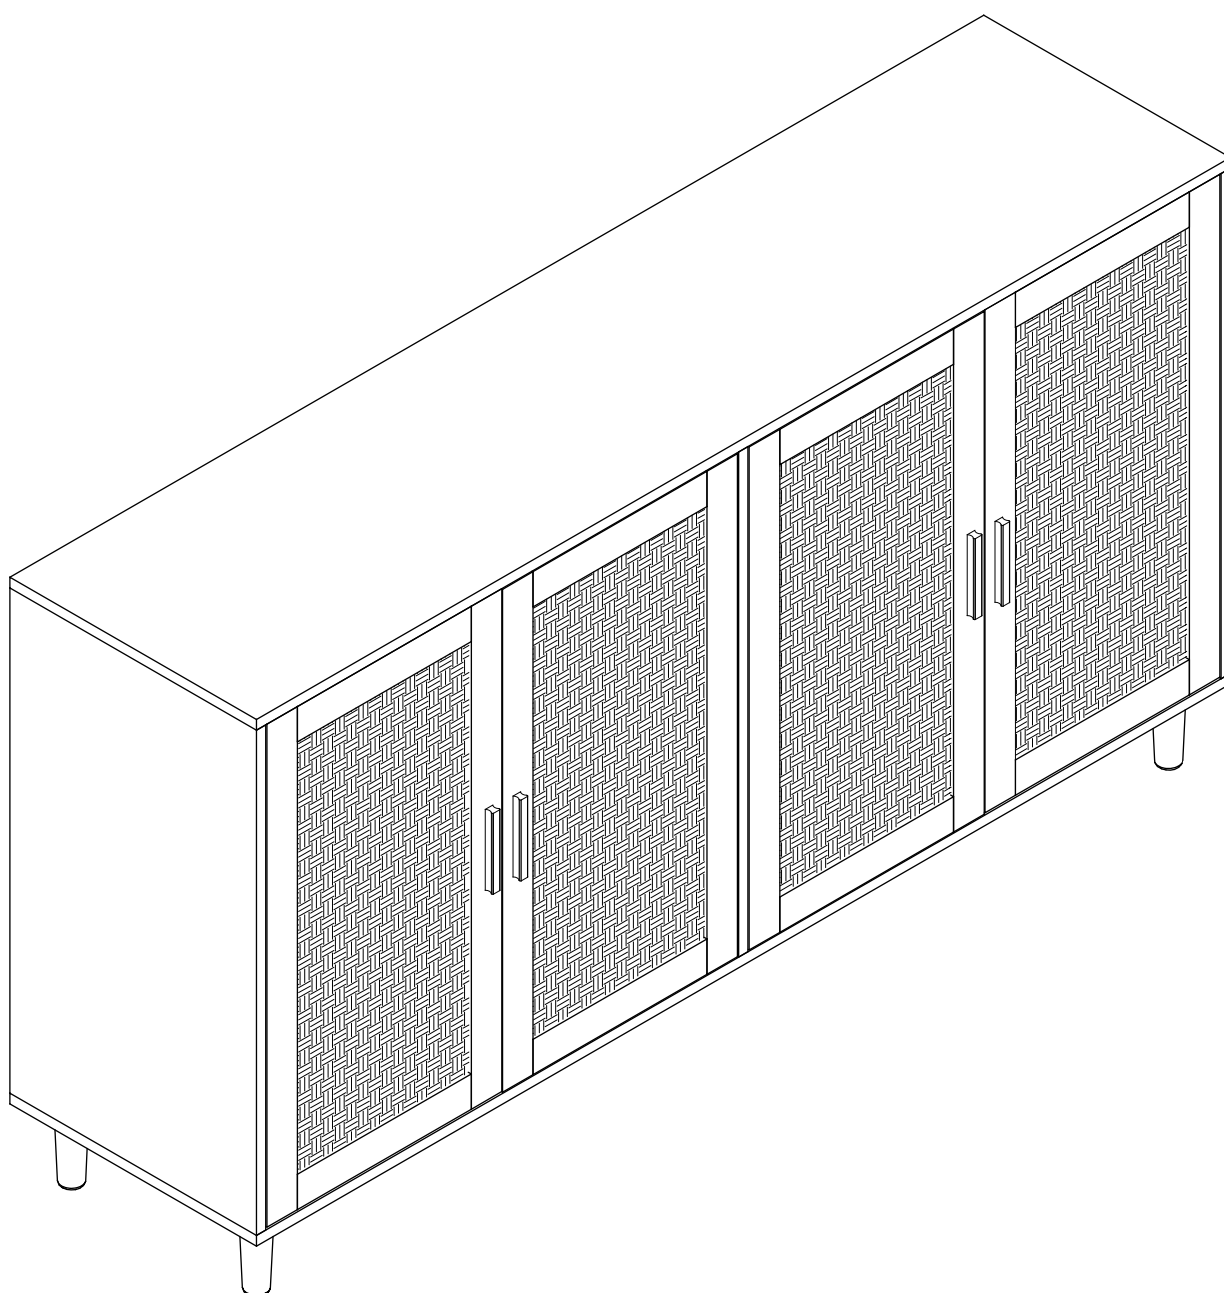










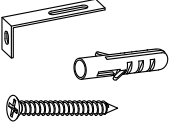



PANEL LAYOUT

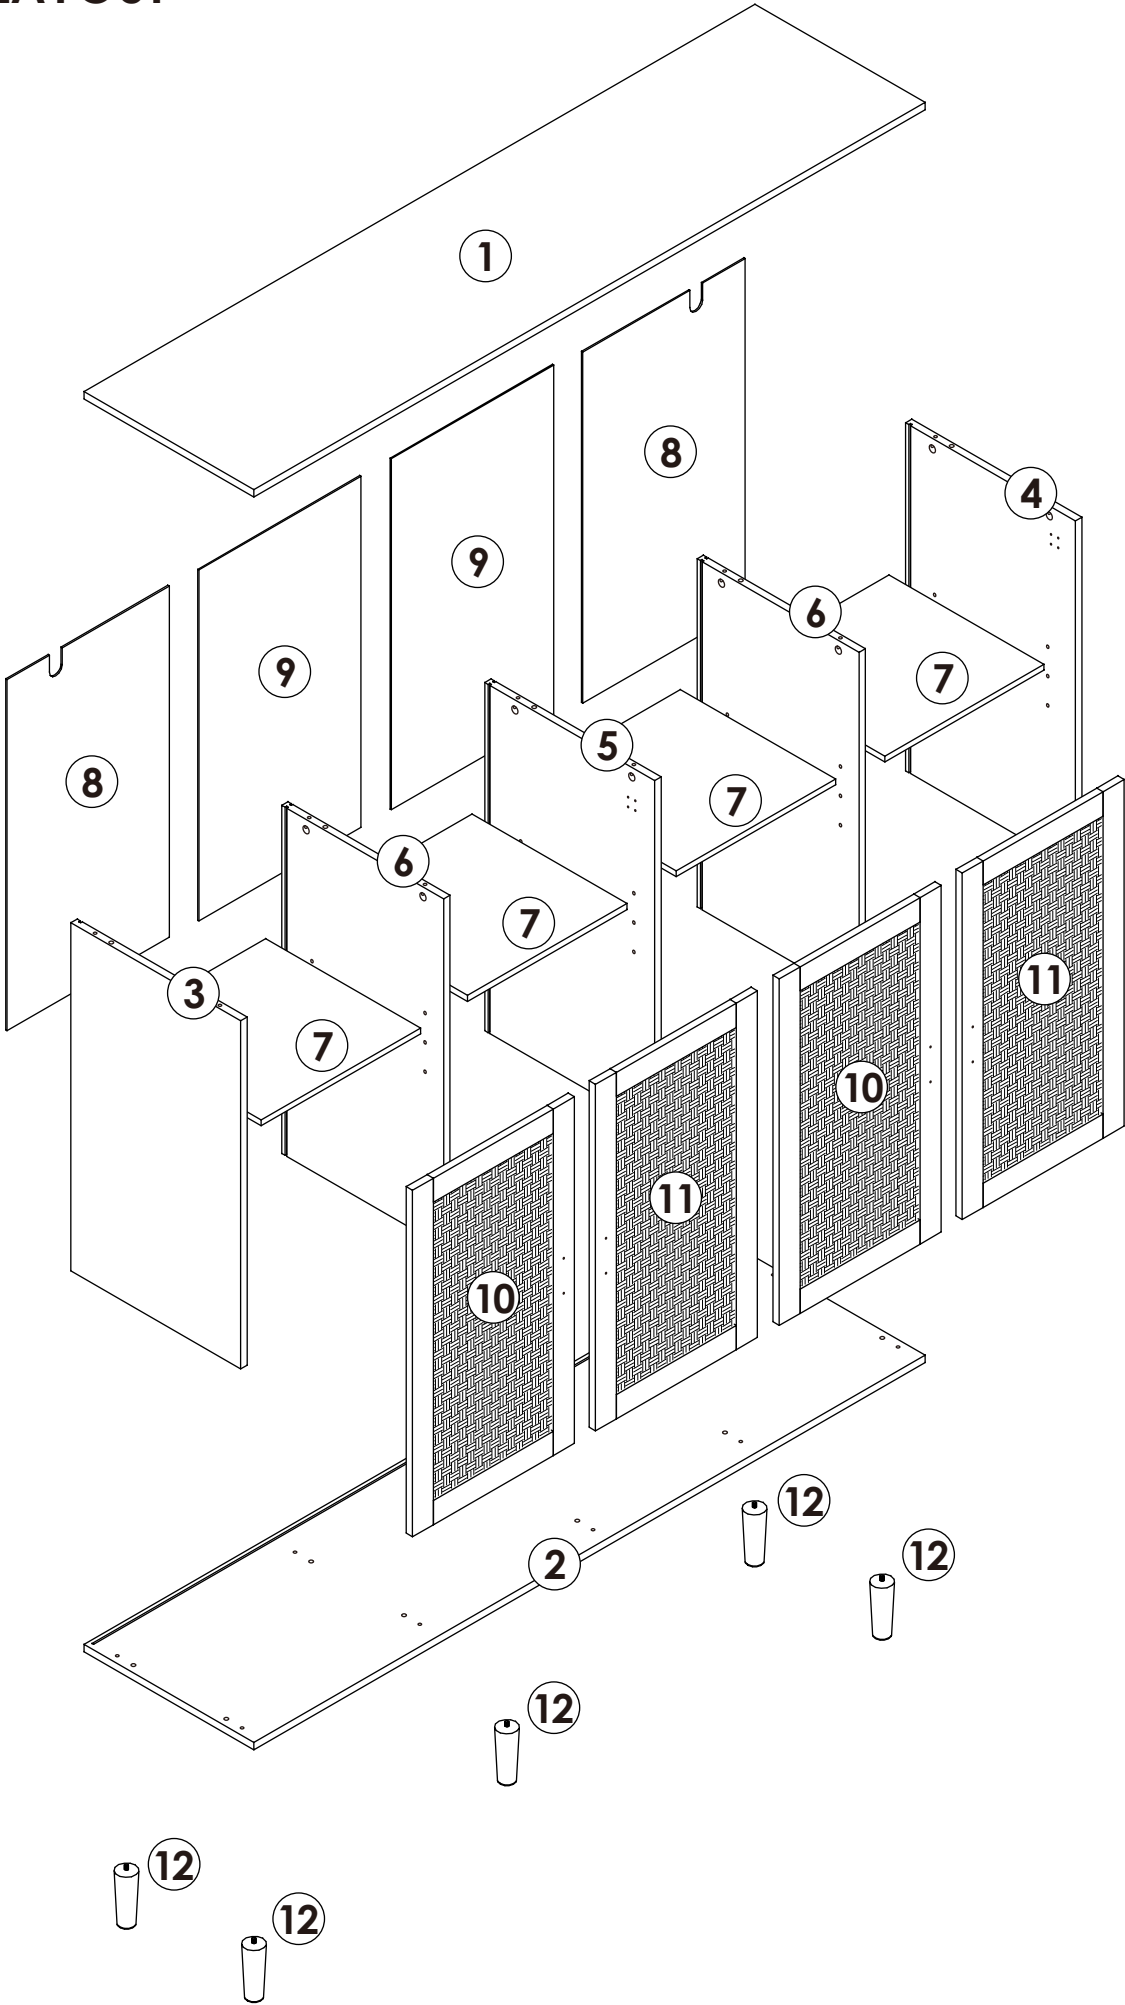


LIST OF PANELS

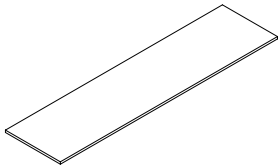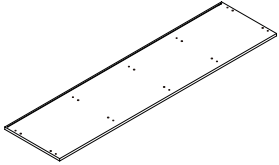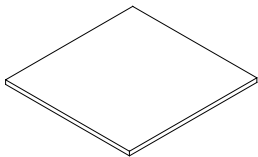1  x1	2  x1	3  x1	4  x1
5  x1	6  x2	7  x4	8  x2
9  x2	10  x2	11  x2	12  x5

HARDWARES LIST


A  x10	B  x10	C  x20	D 4x35mm  x10	E  x8	F 4x14mm  x48
G 4x20mm  x4	H  x16	I 3x16mm  x8	J 4x40mm  x2	K  x5	L 4x14mm  x22
M  x5					

C x 10
D x 10

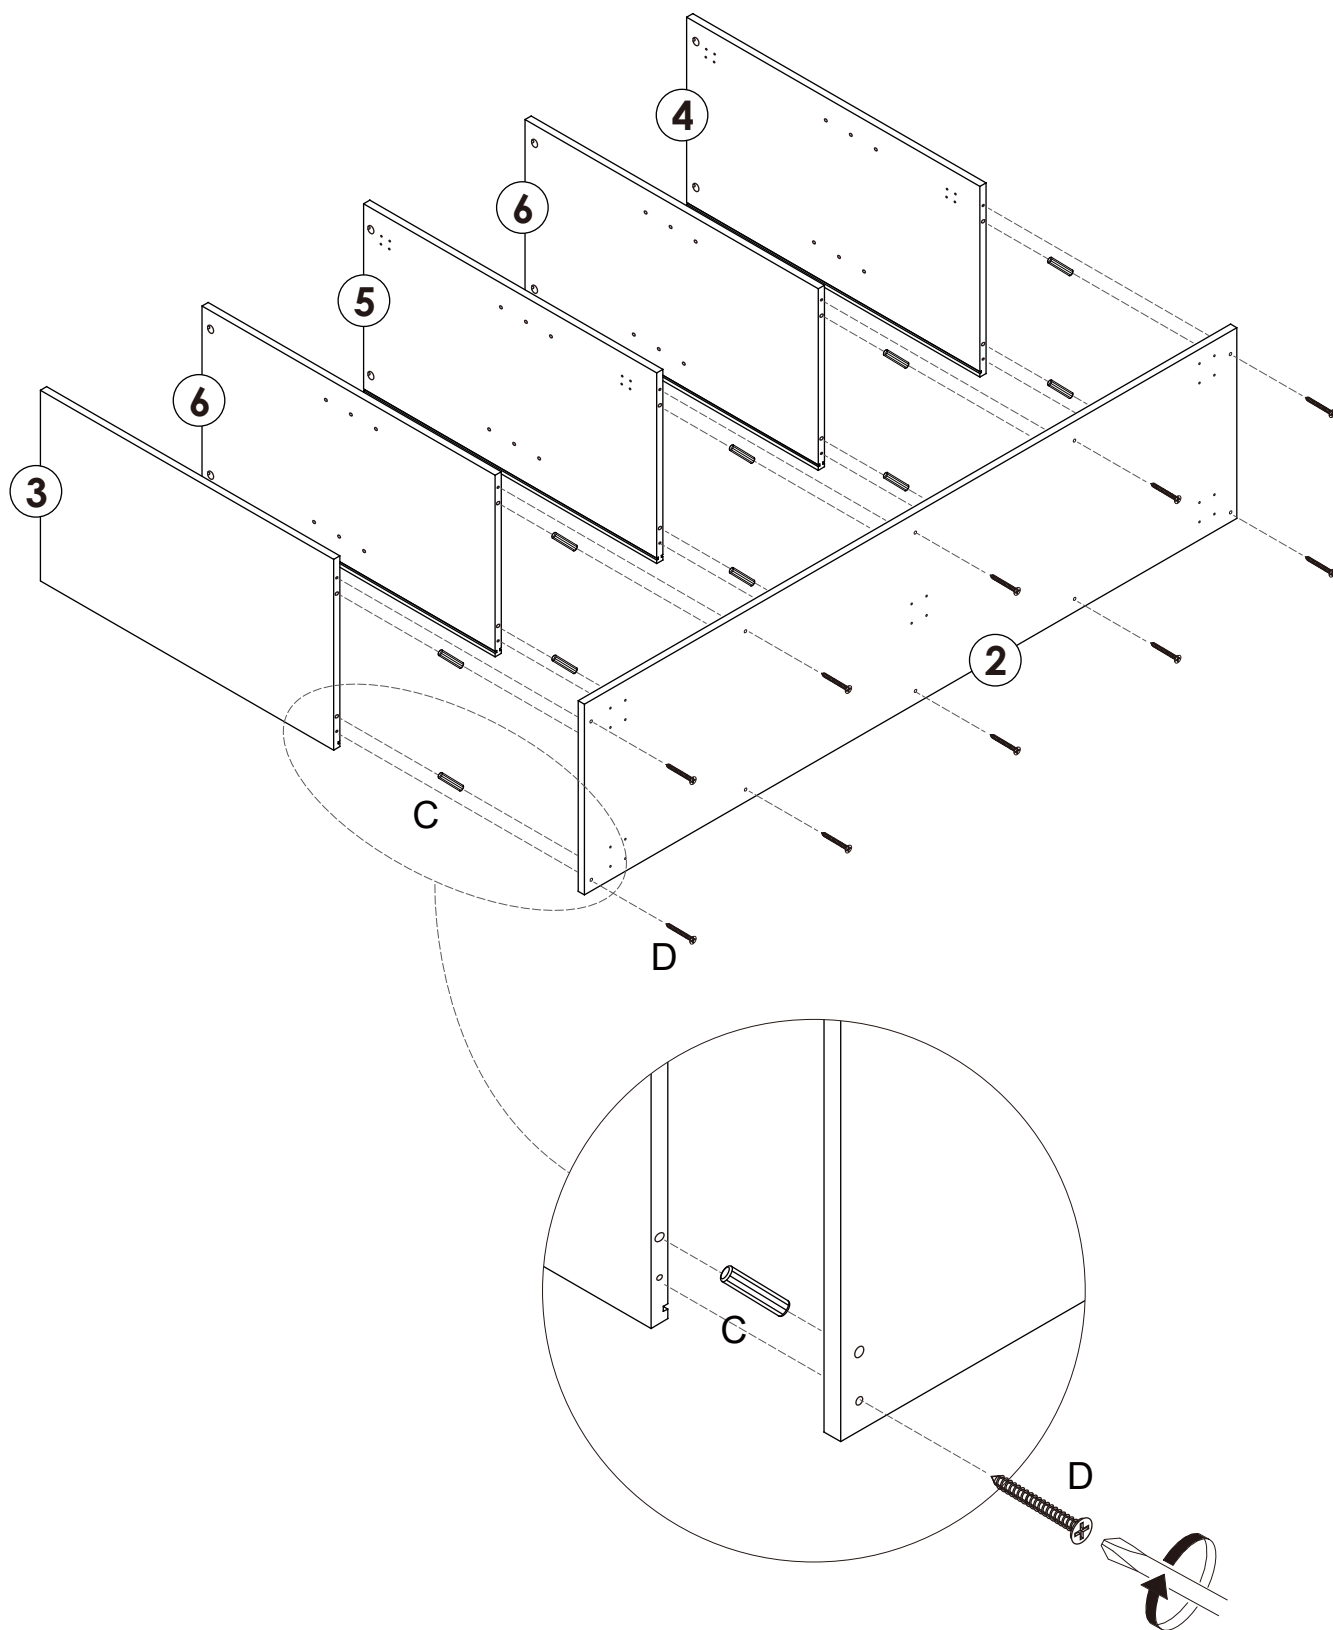


Connect panel 2 to panel 3&4&5&6 with hardware C and screw D.

K x 5
L x 20

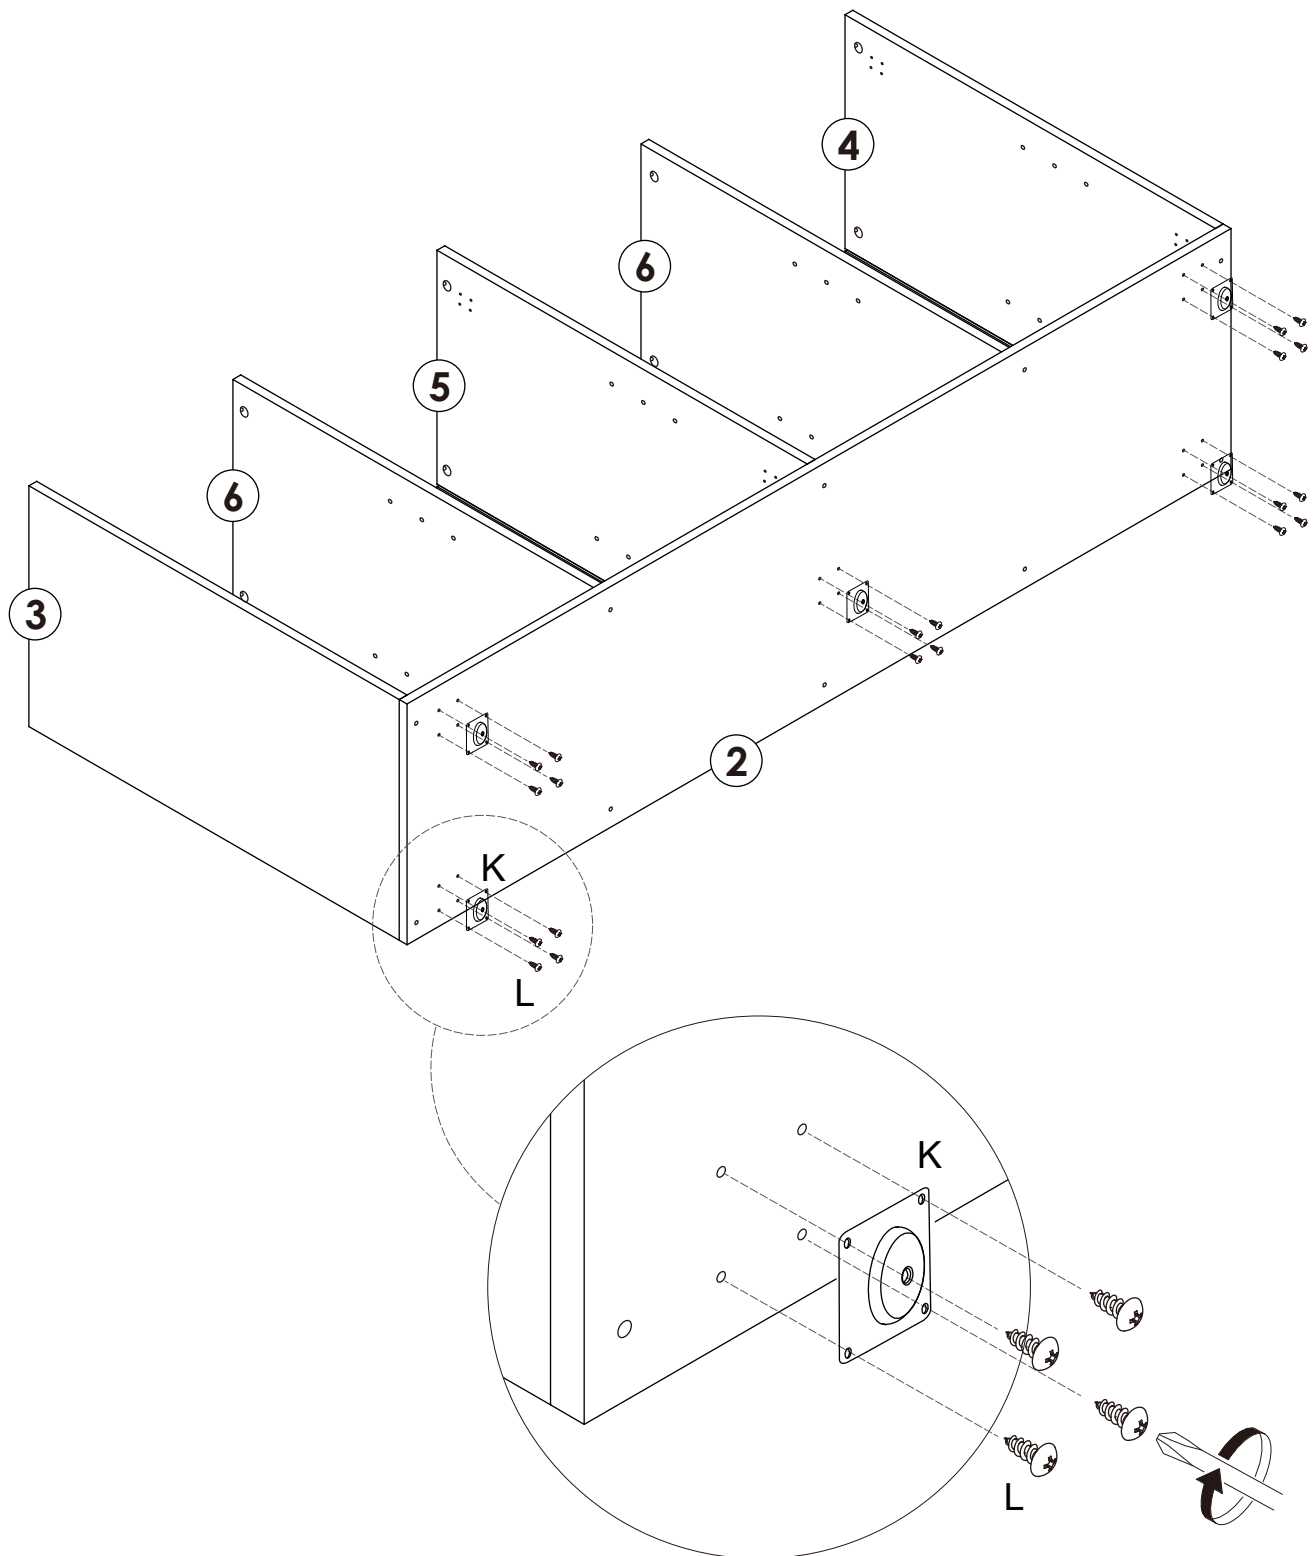


Connect hardware K to panel 2 with screw L.

M x 5

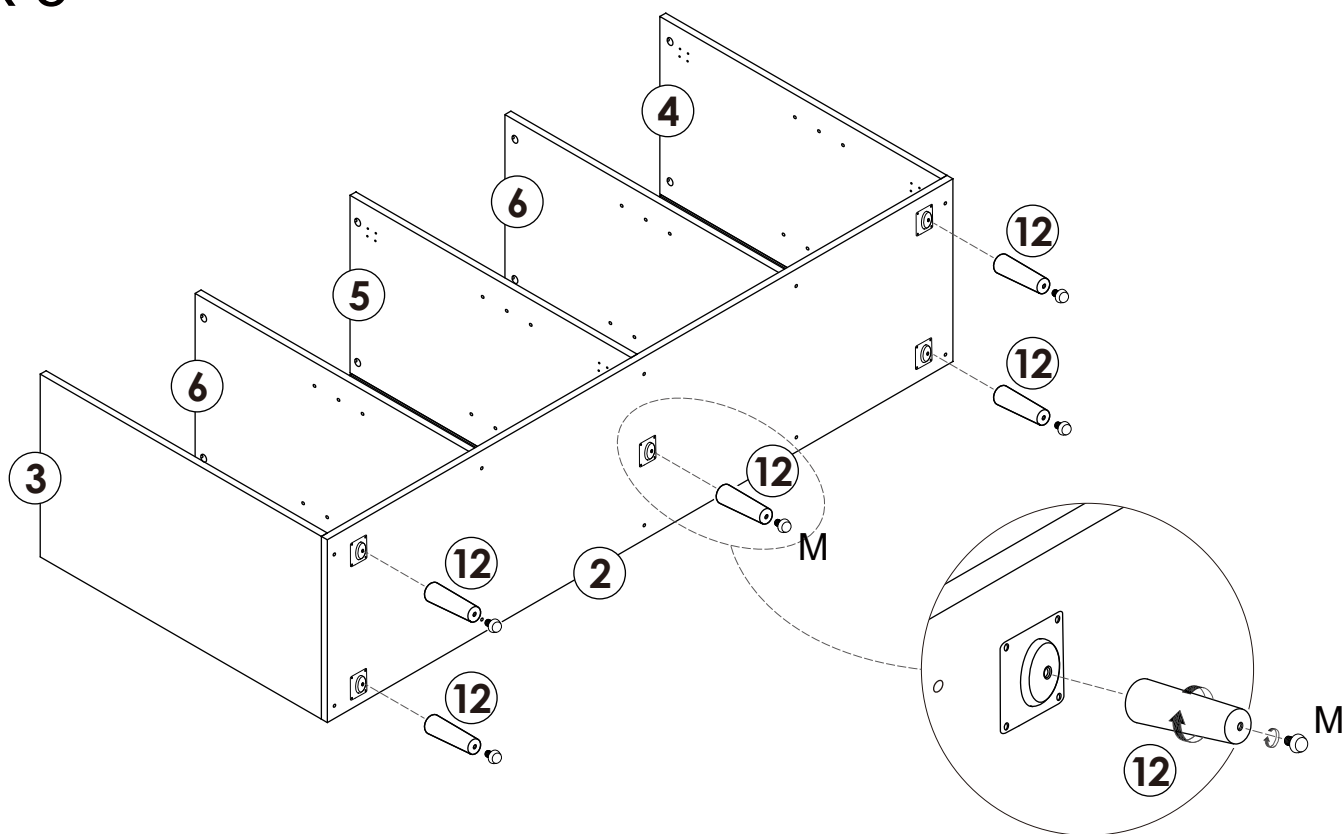


Screw hardware accessory M onto plate 12.
Screw plate 12 onto accessory K again.

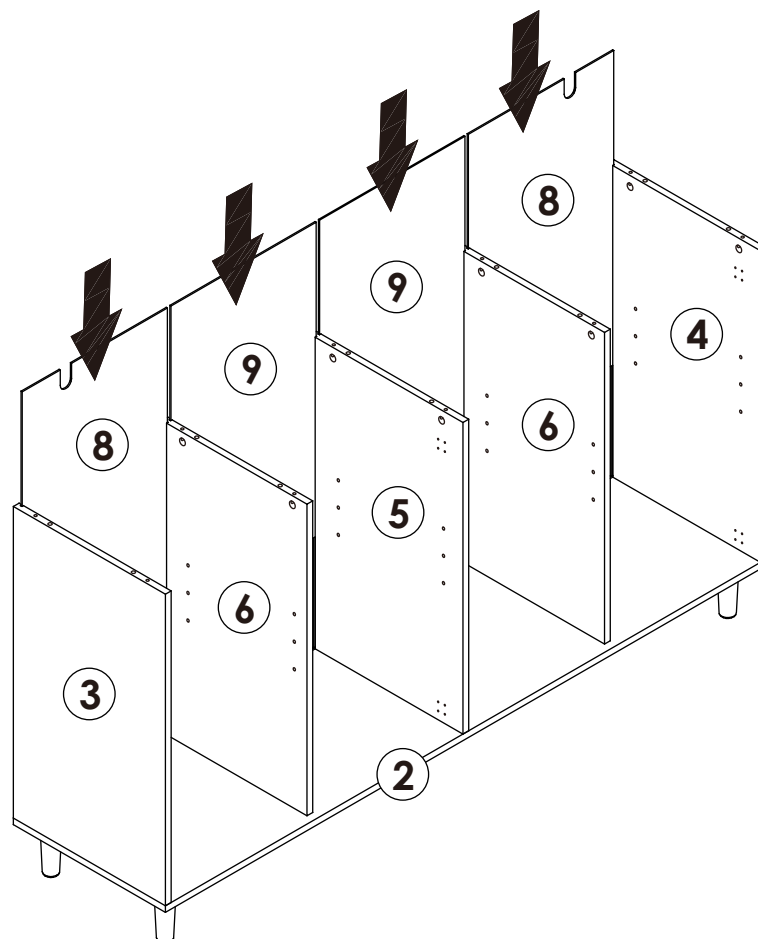



Insert panels 8&9 downwards along the pull groove

A x 10
J x 2
L x 2

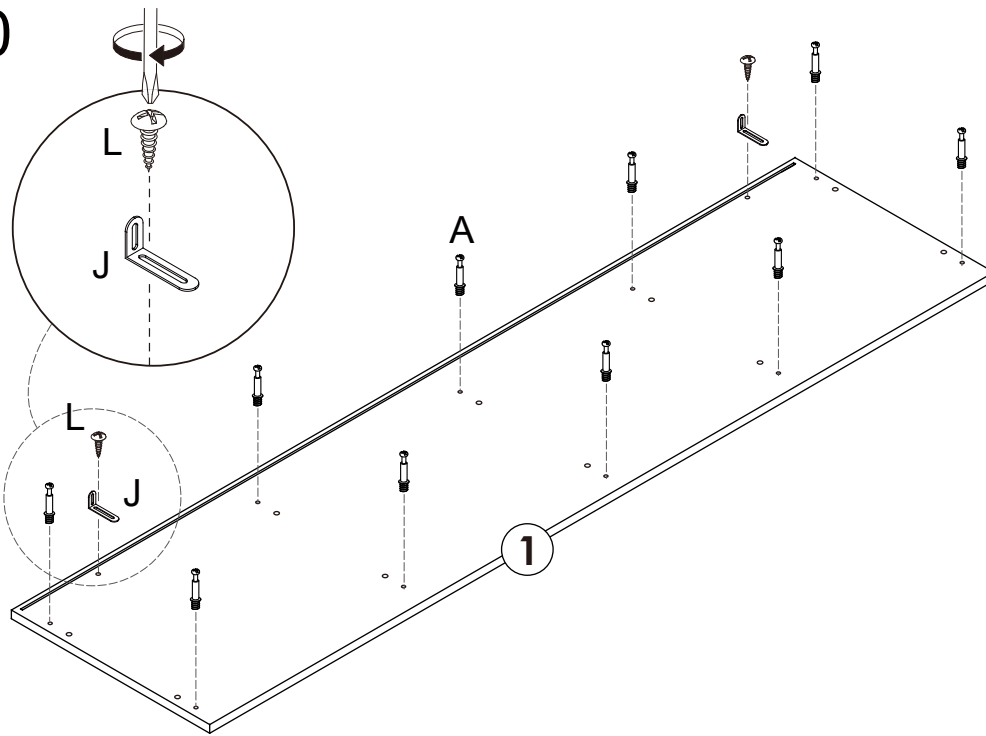


screw A to panel 1, connect hardware J to panel 1 with screw L.
Screwdrivers are not included in the accessories.

B x 10
C x 10

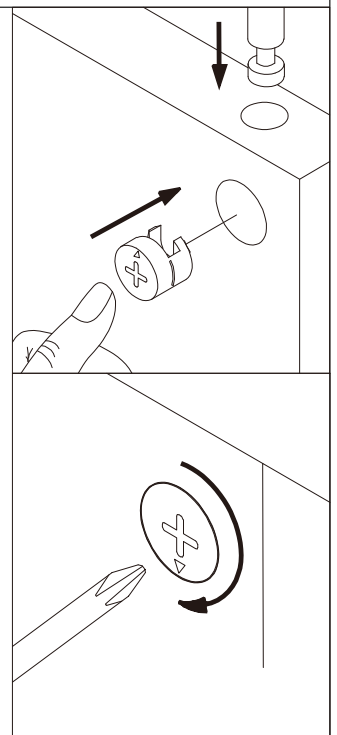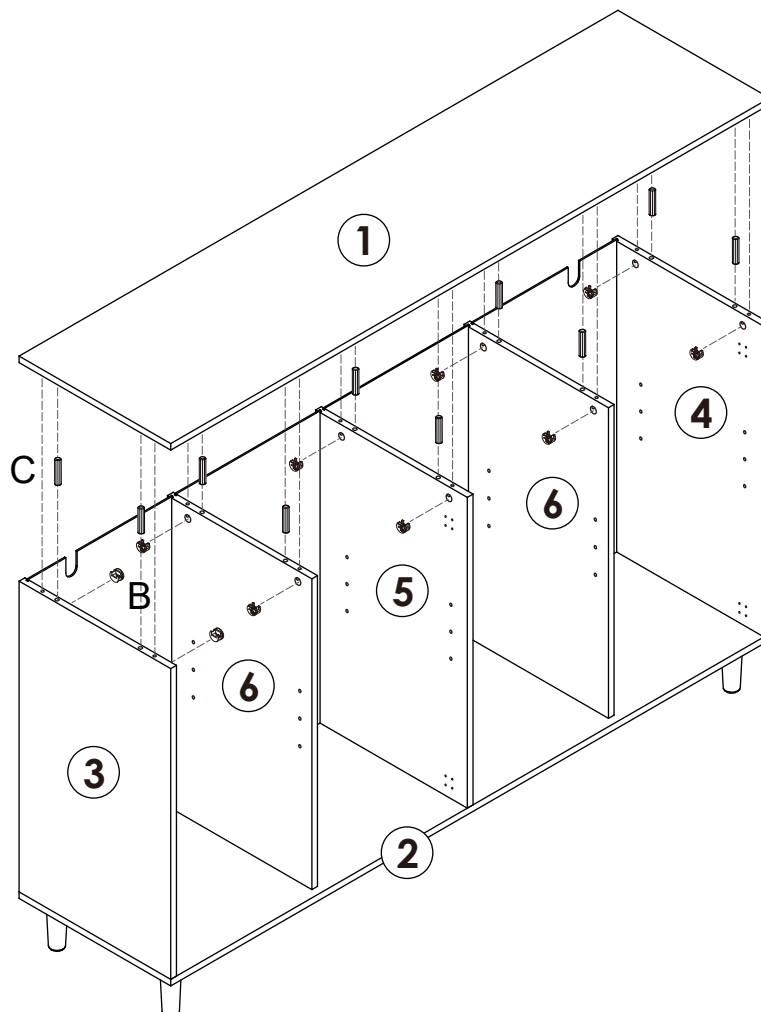


the slot of panels are downward.
connect panel 1 to panel 3&4&5&6 with hardware B and C.

H x 16

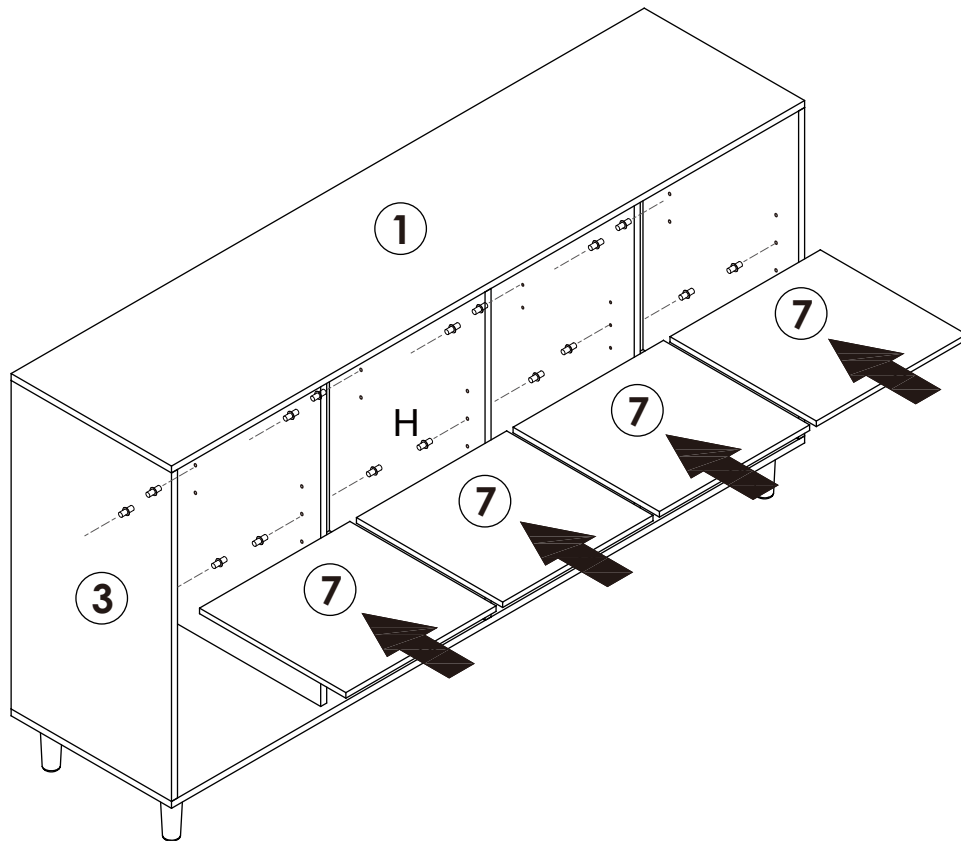


Insert hardware accessory H into the holes of partitions 3&4&5&6.

E x 8
F x 16

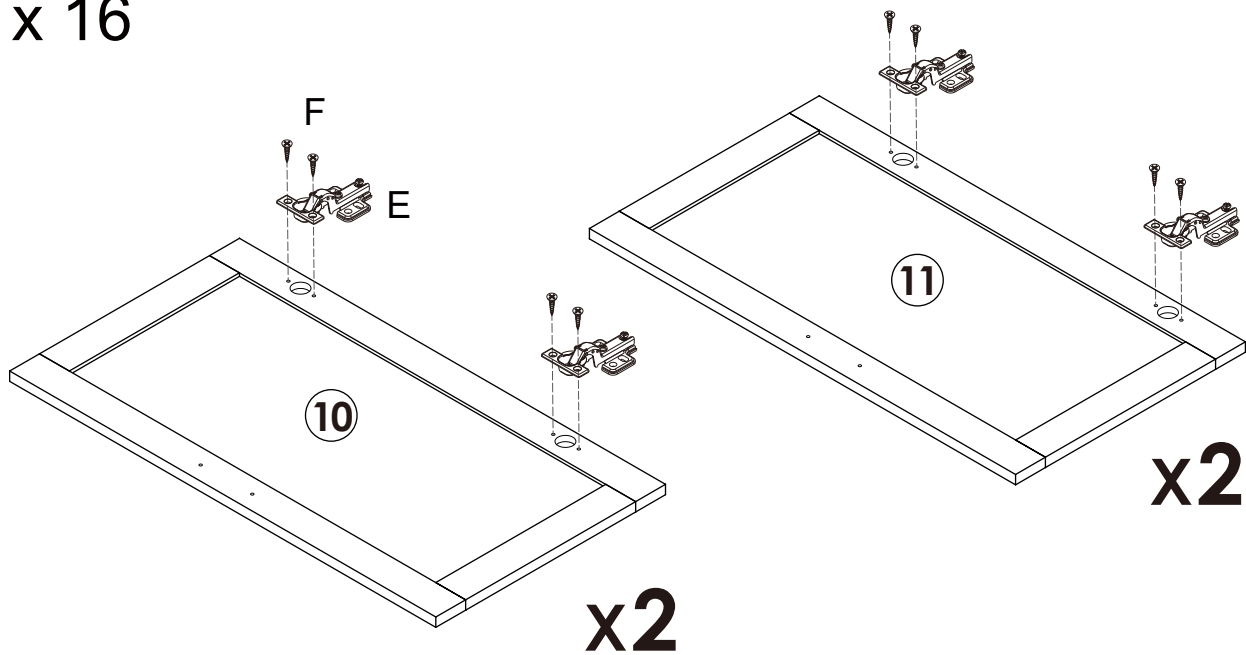


Lock hardware accessory E onto panels 10&11 with screws F.

F x 16
G x 2

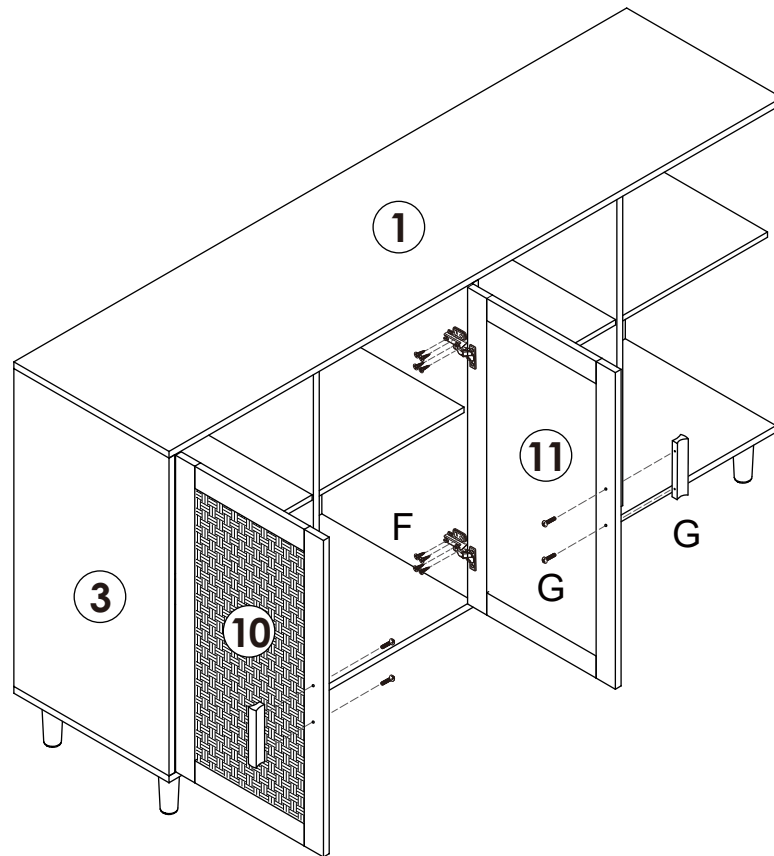


Lock hardware accessory G onto door panels 10&11.
Lock door panels 10&11 onto panel 3&5 using screws F.

F x 16
G x 2

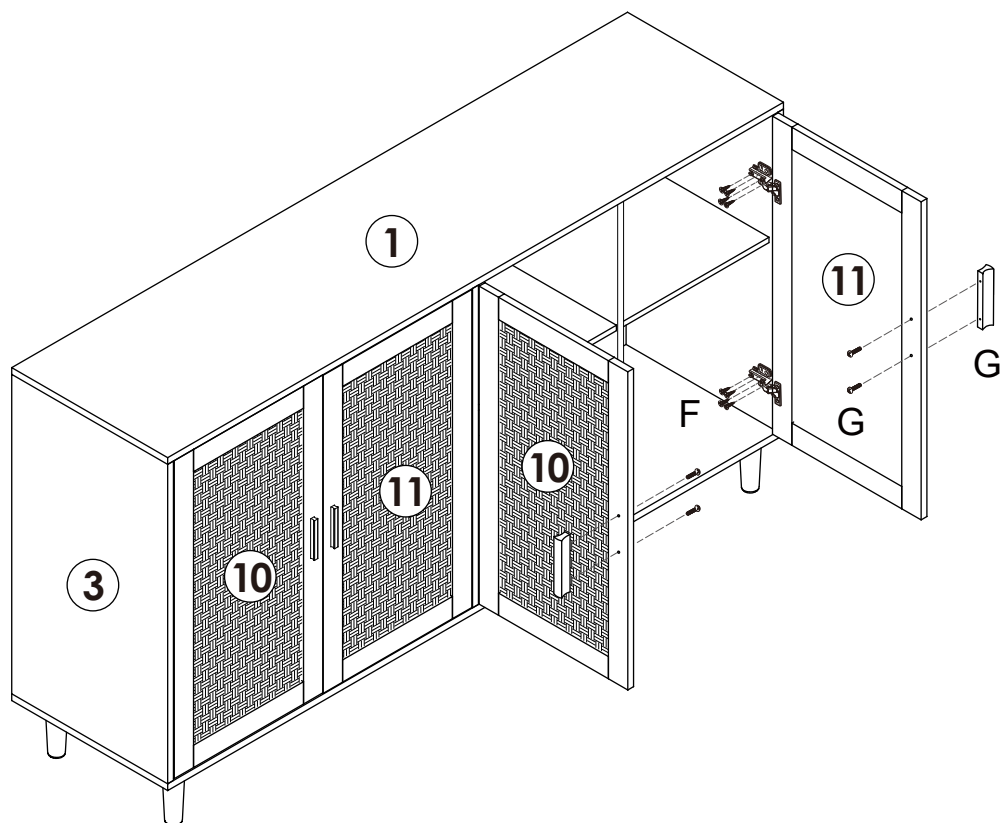

Lock hardware accessory G onto door panels 10&11.
Lock door panels 10&11 onto panel 4&5 using screws F.

1 x 8

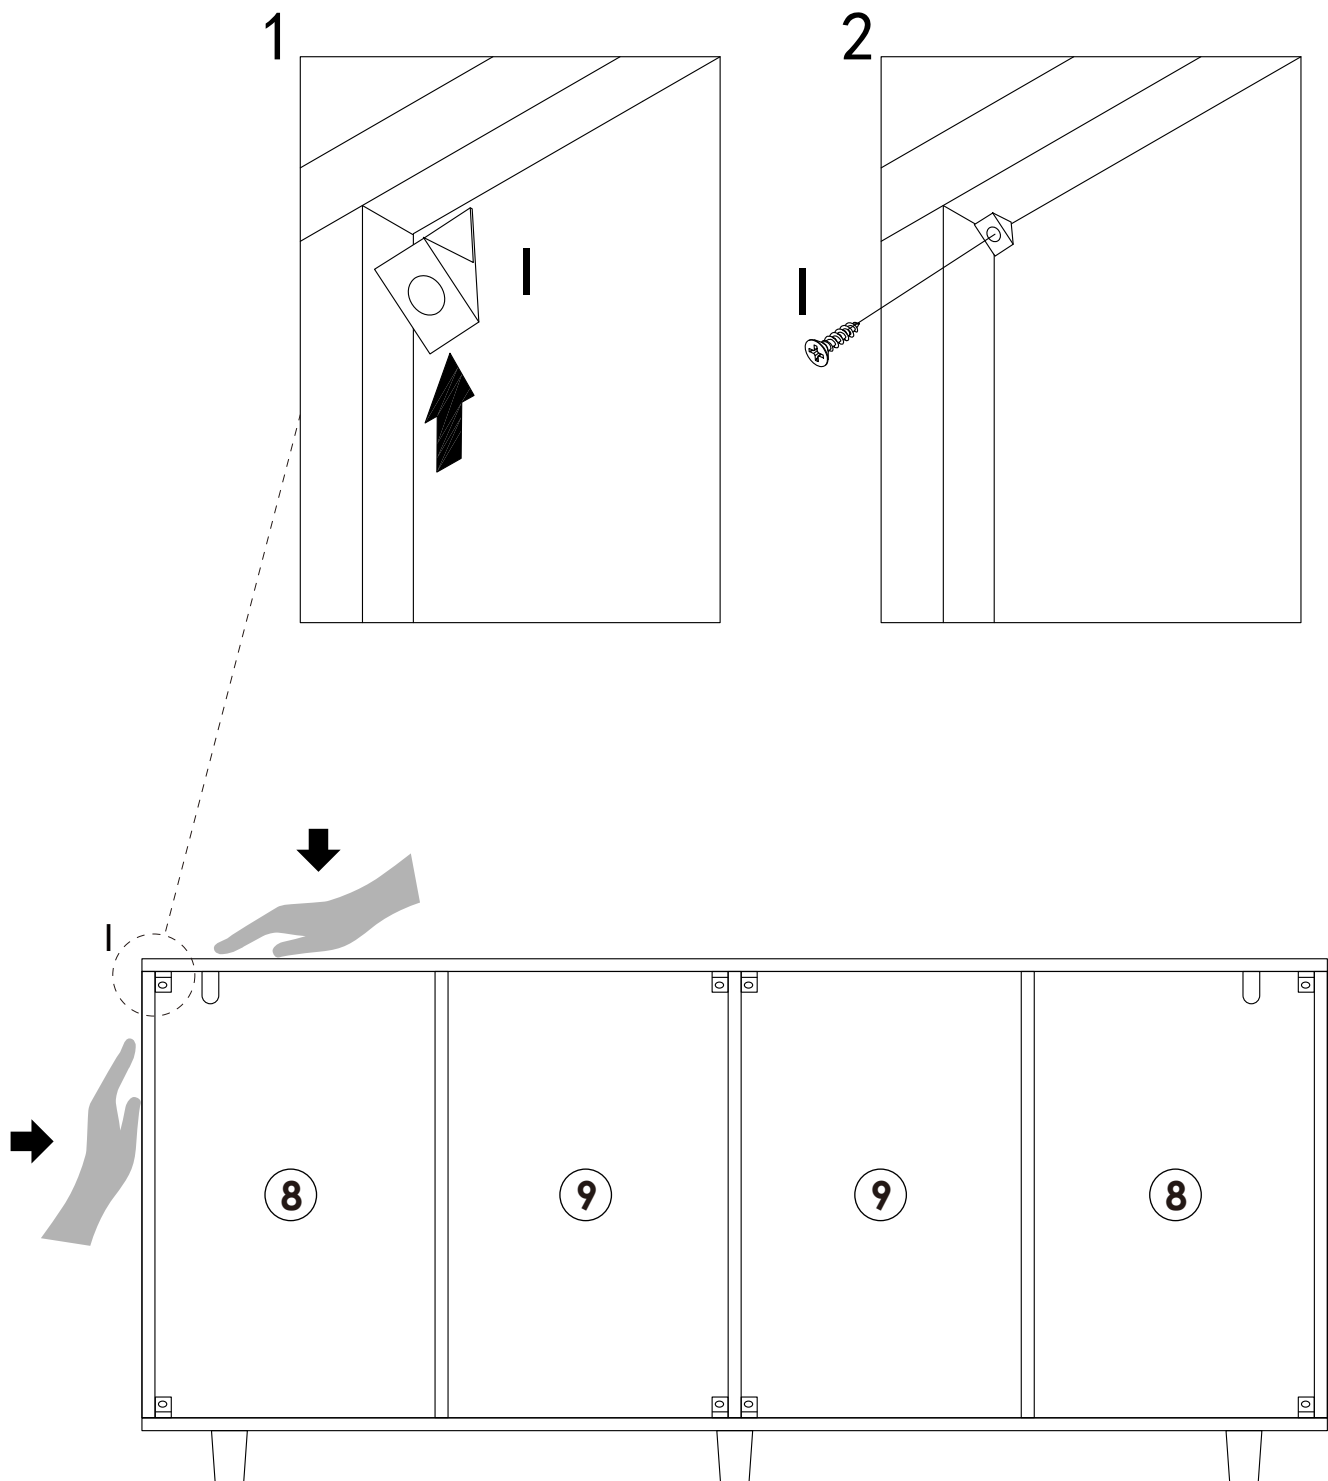


Lock hardware 1 at the corners of backboard.
Hold the door panels down by hand before installing it.

step 1. Mark the position on the wall.

step 2. Drill and insert the expandable screw J by hammer.

step 3. Use screw J to attach it and tighten by screwdriver.

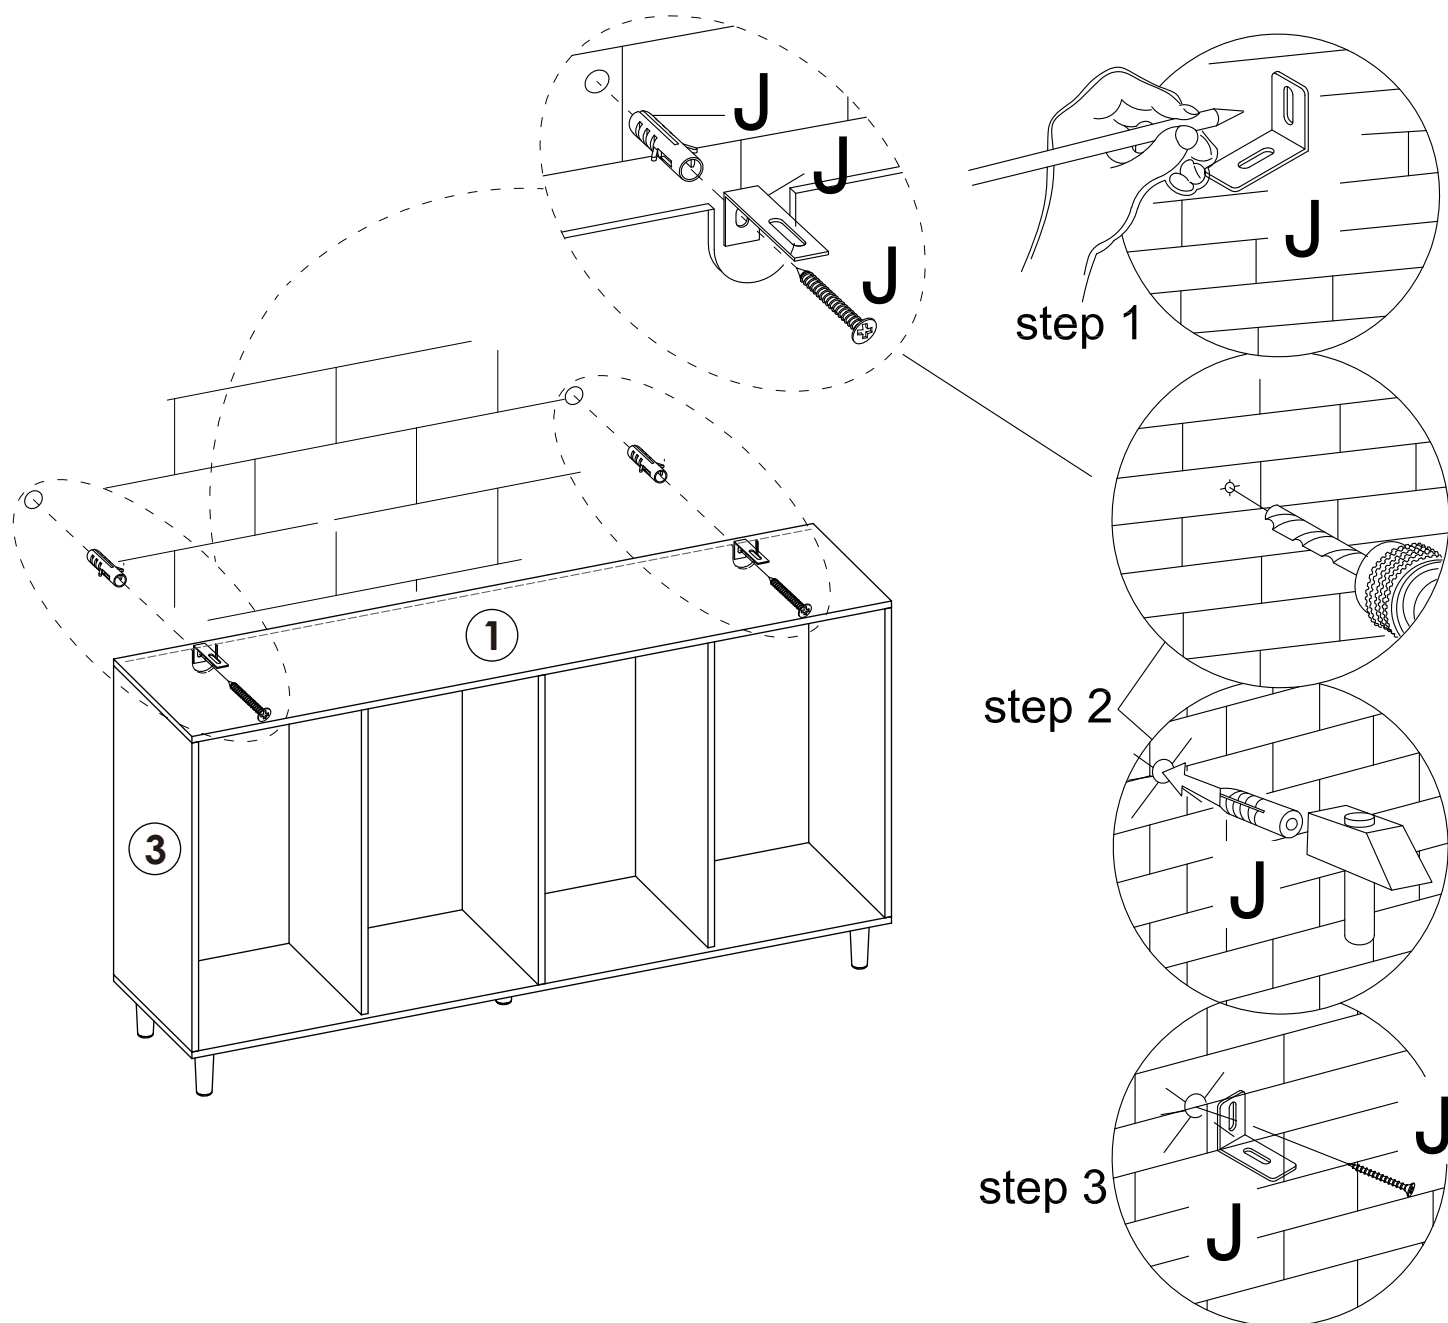

If it is a solid wall, please use expansion and self-tapping screws to secure the cabinet to the wall, if it is a wooden wall, only use self-tapping screws. Please don't overtighten screws.

