

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromazďování instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу


H Gennyesevés utasítások

Boxspringbett Wacken

Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapizata pat-Upholstered bed-Мягкая кровать-ятак kapitone-Letto imbottito-Lit rembourré
Čalunené posteľ Čalunené posteľ kápiťozott ágy

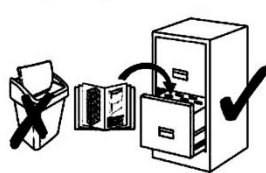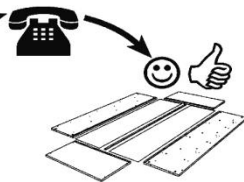


90cm, 100cm, 120cm




4 X


1 X

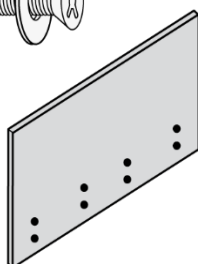


1 X

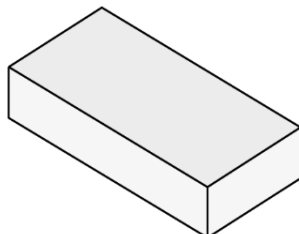


4 X




1 X

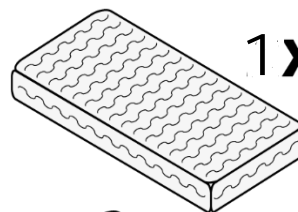

1 X

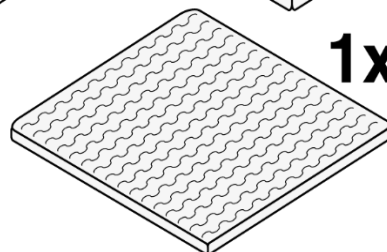


140 cm




8 X

1 X

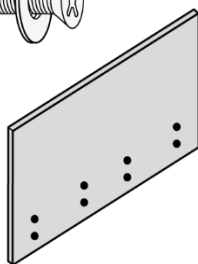


2 X

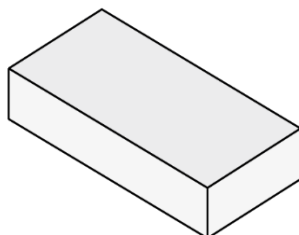


8 X




1 X

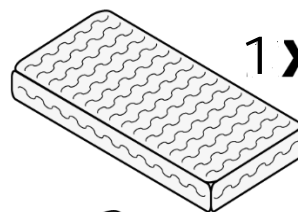

1 X

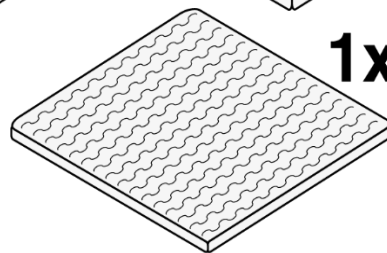


160cm, 180cm, 200cm




8 X


1 X

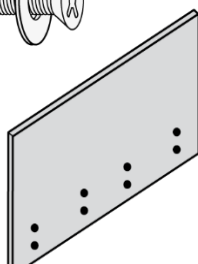


2 X

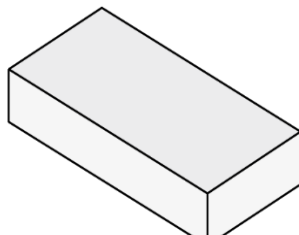


8 X







2 X

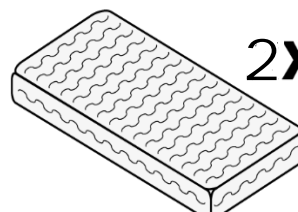

1 X

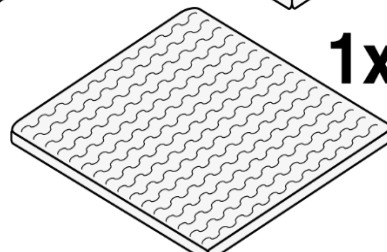

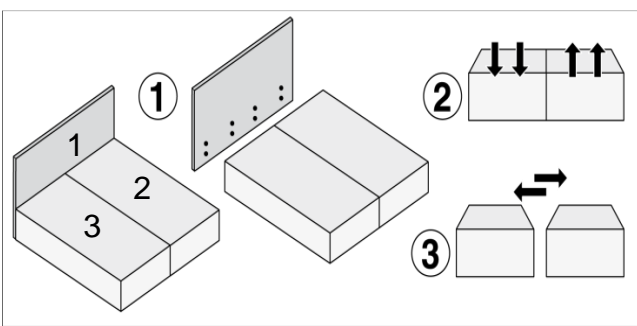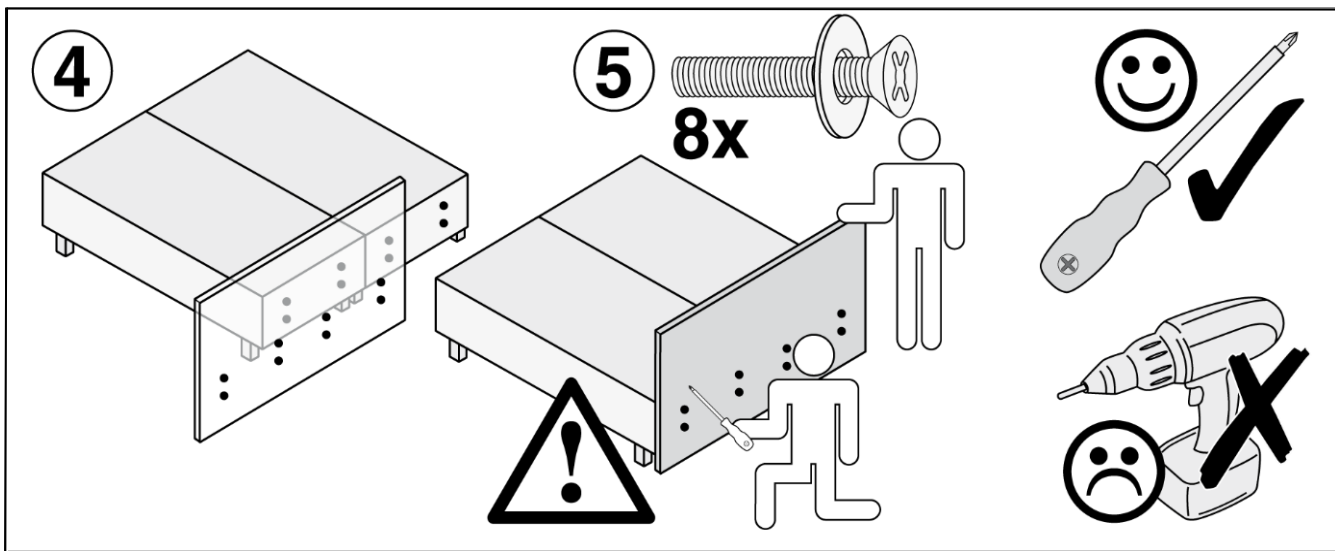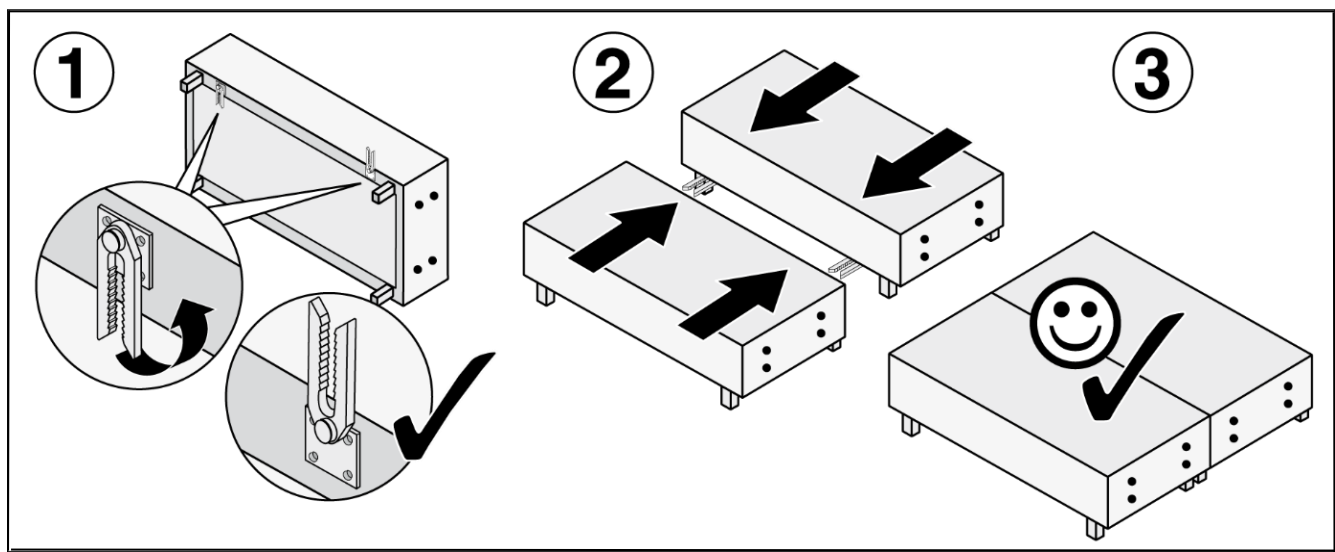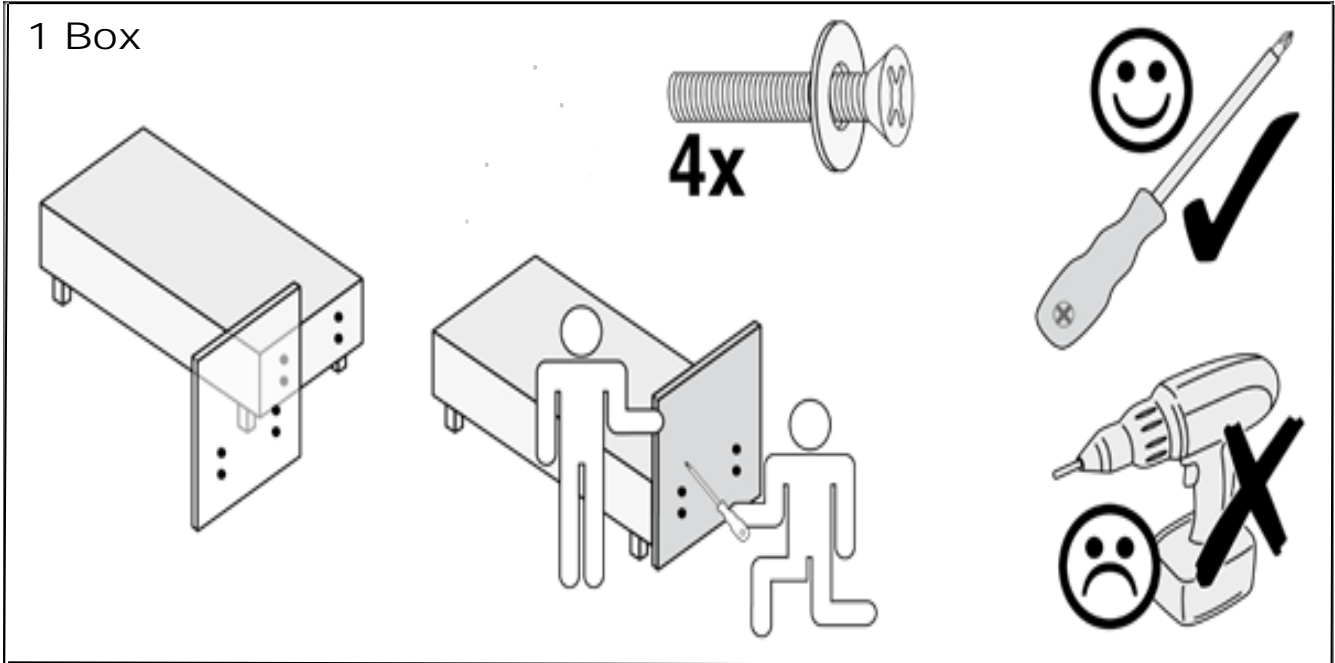

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Straße 123
32584 Löhne