

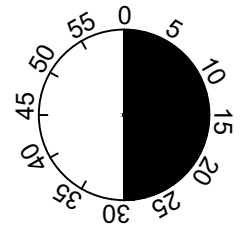
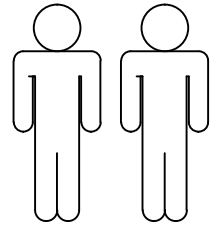


Marina

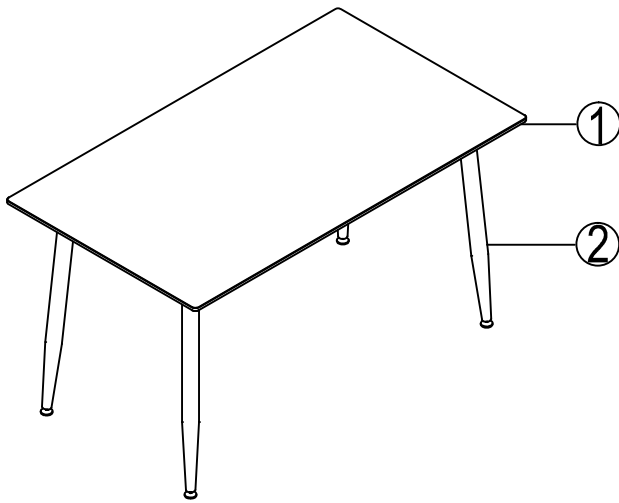


1

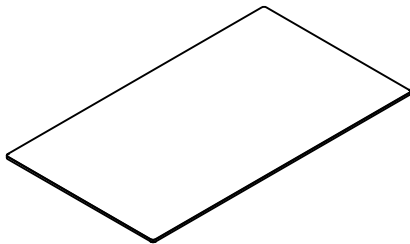



2




3

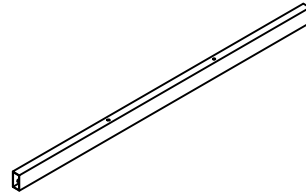

4




1	1 x	1/2
2	4 x	2/2
3	2 x	2/2
4	2 x	2/2



2/2

A

M8x10



24x

B


Ø30



8x

C



6MM





1x

I.

1

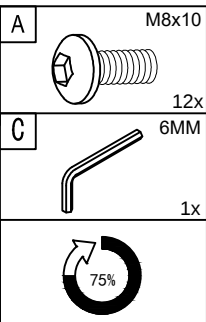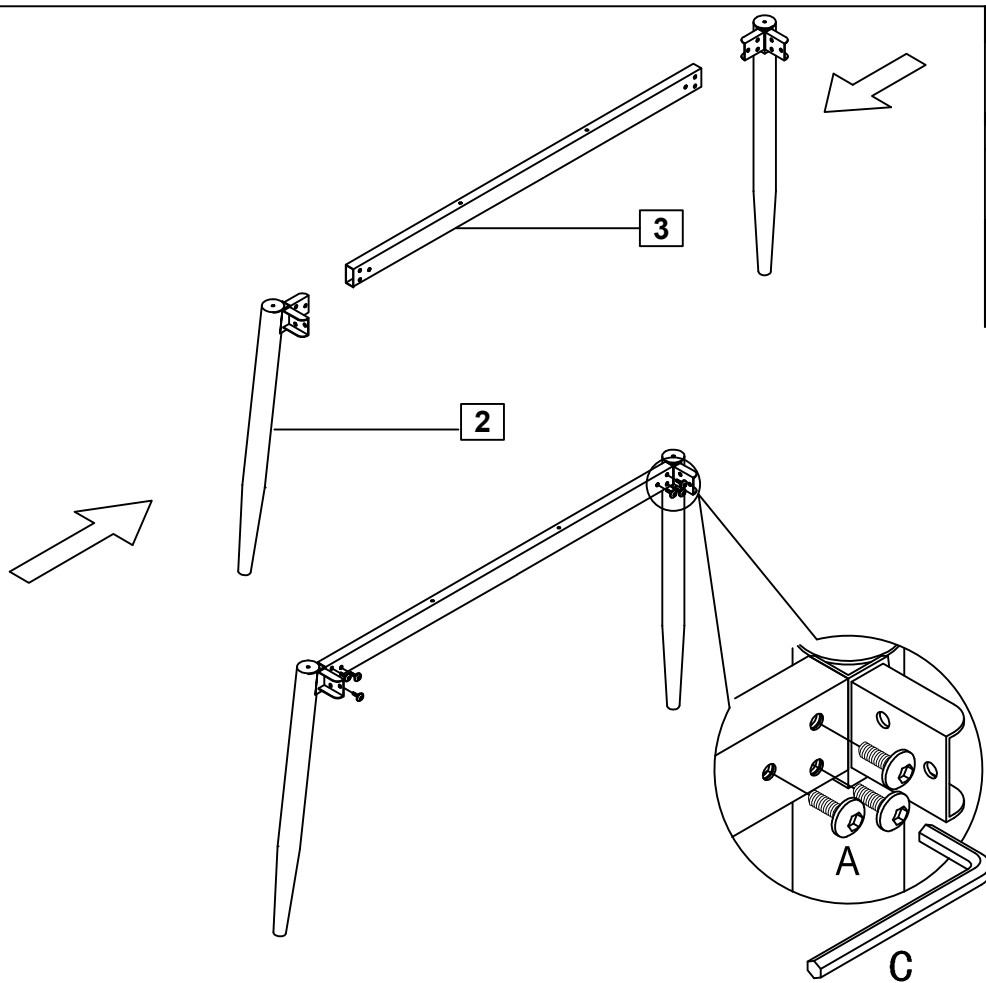


2

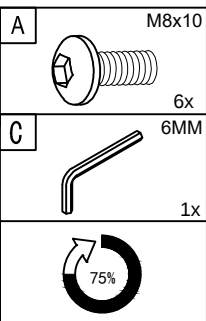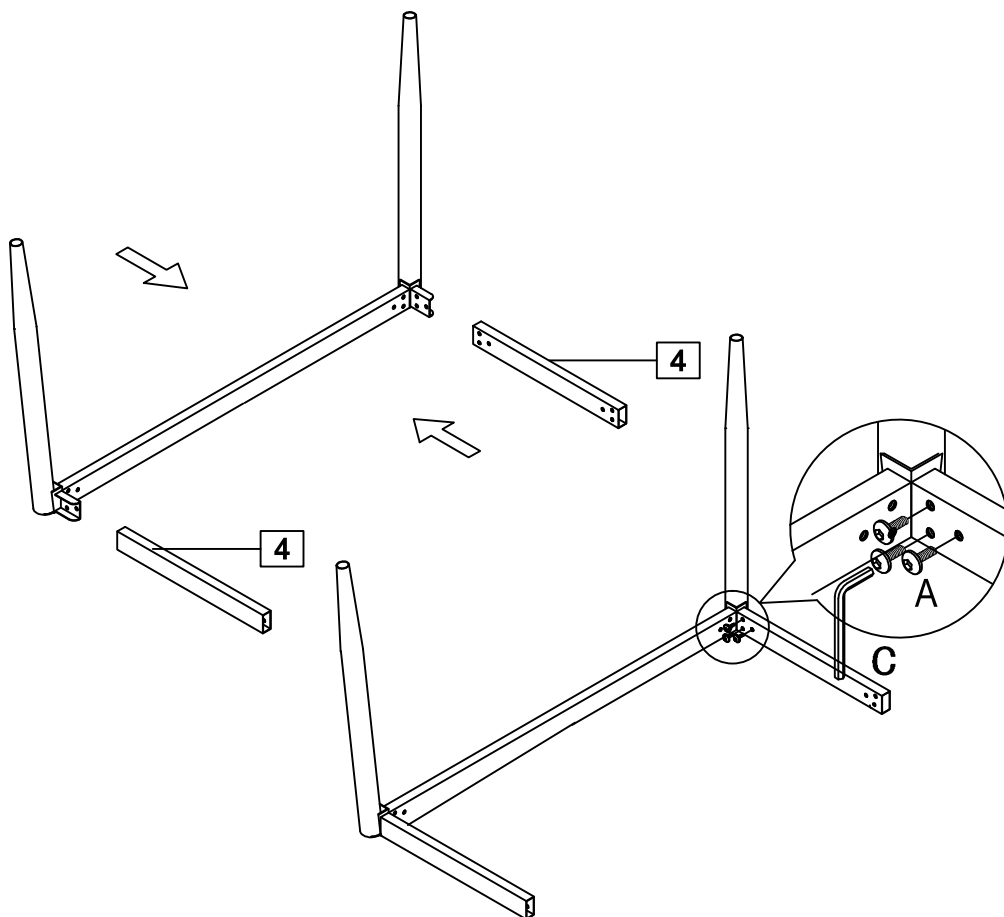


II.

3

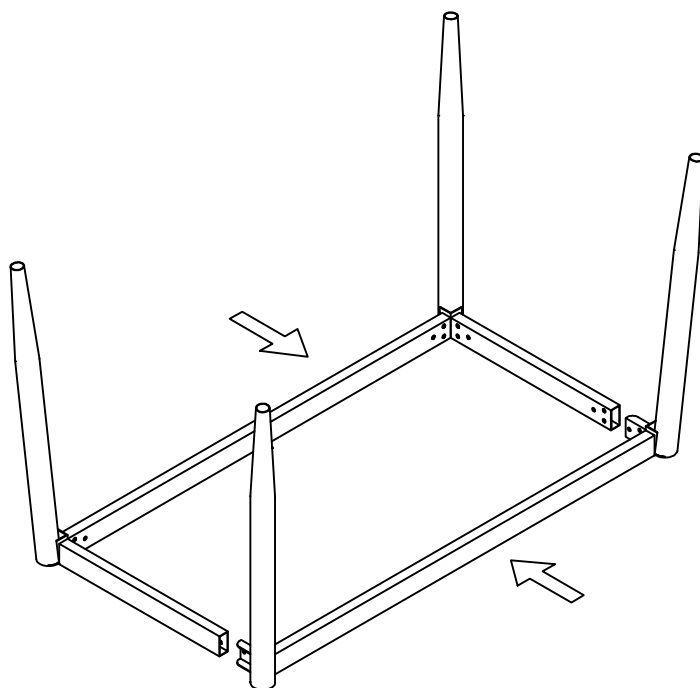


4

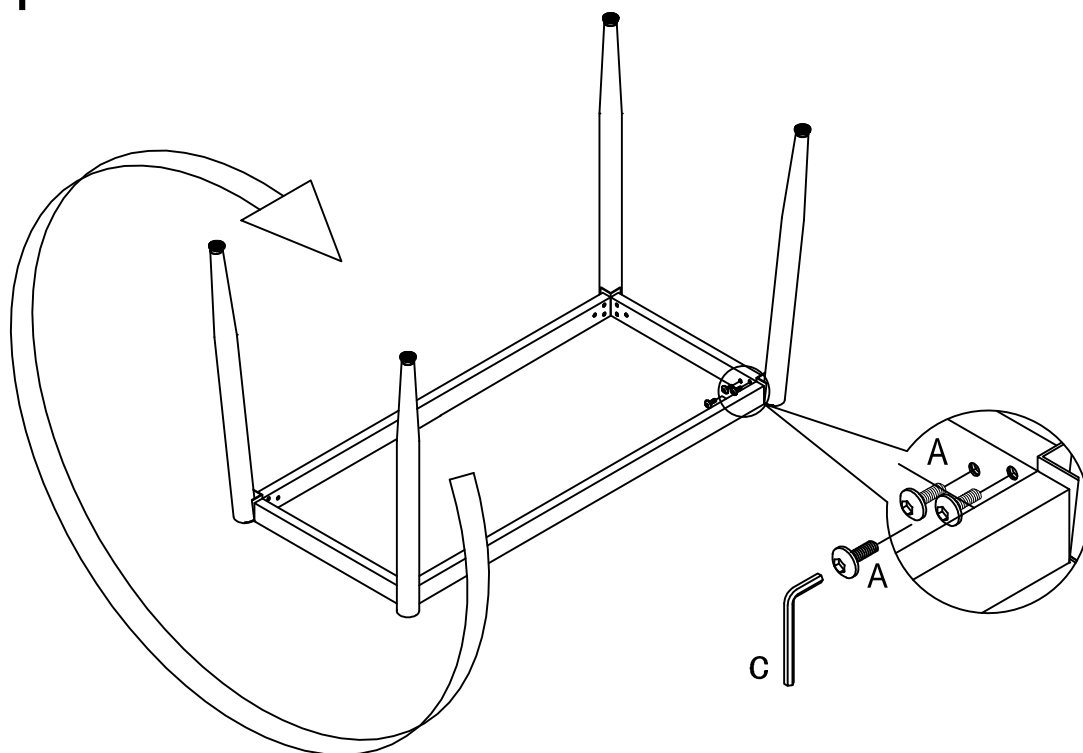

A	M8x10
	6x
C	6MM
	1x
	75%


III.

5




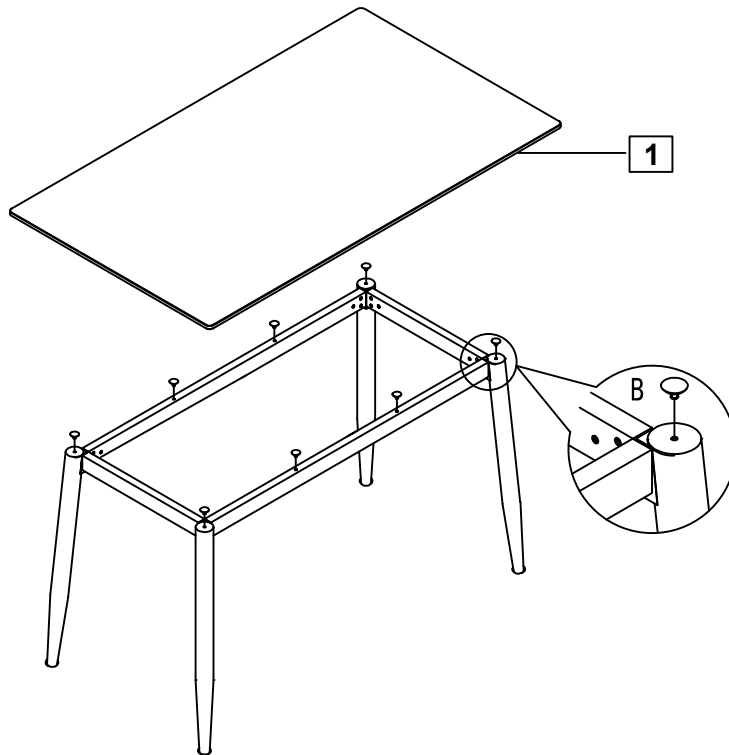


B		Ø30
		8x
		

6

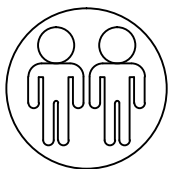

!

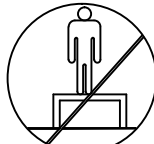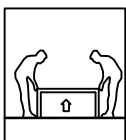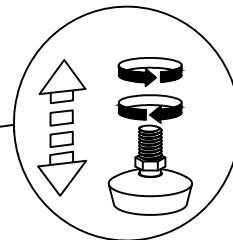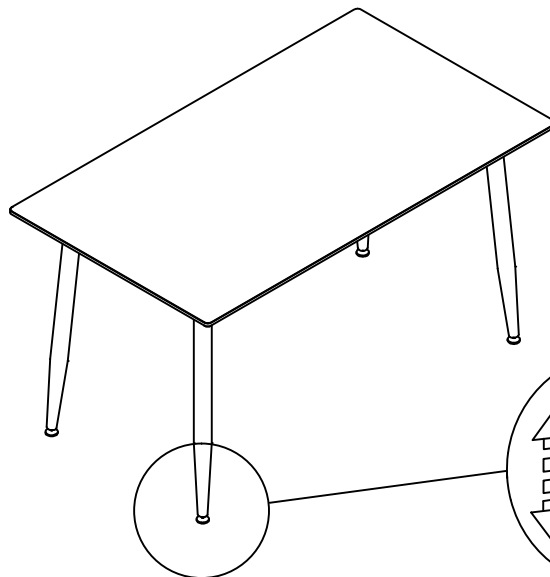

LE TRI + FACILE

Séparez les éléments avant de trier