


SANAYI – komoda

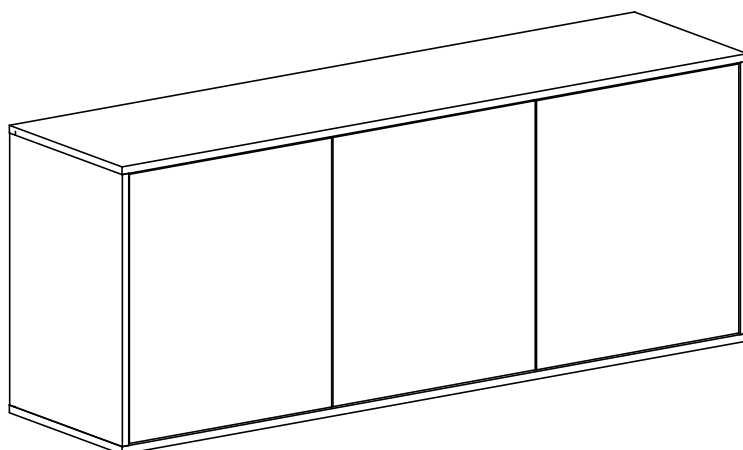

(D) **Montageanleitung**

(NL) **Handleiding voor de montage**

(TR) **Montaj talimatı**

(F) **Notice de montage**

(CZ) **Montážní návod**

(HU) **Szerelési útmutató**

(GB) **Assembly instructions**









(PL) **Instrukcja montażu**

(RU) **Инструкция по монтажу**




(IT) **Istruzioni di montaggio**

(SK) **Návod na montáž**

(RO) **Instrucțiuni de montaj**

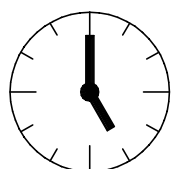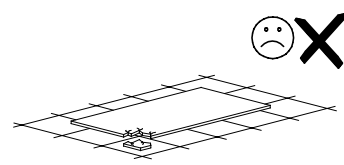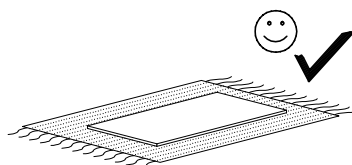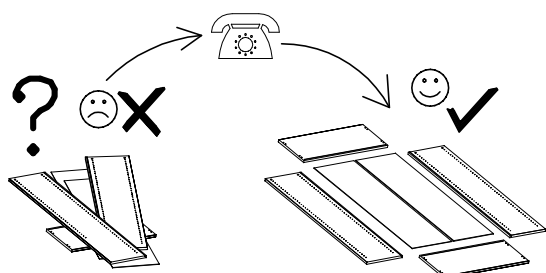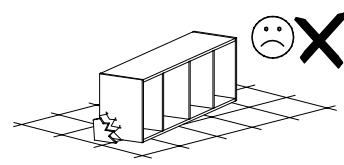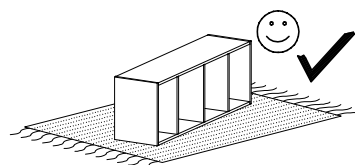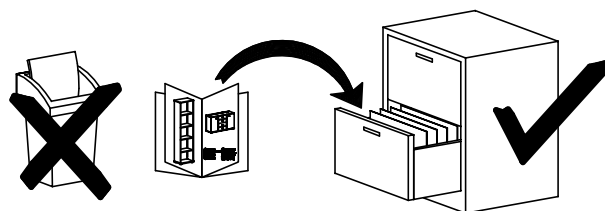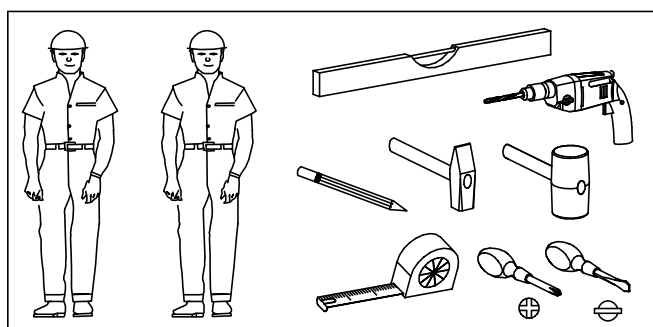

1,5h

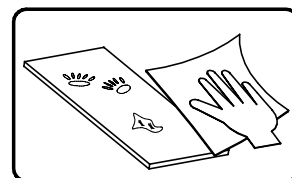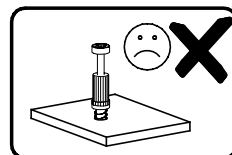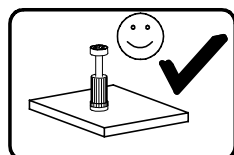

Name • Nom • Nome • Naam • Nazwa • Jméno
• Názov • Név • Denumire • Isim • Имя





Nr • No • N° • Номер • Č • Sz

Typ • Type • Tip • Típus • Tipo • Tun

SANAYI

— —

komoda

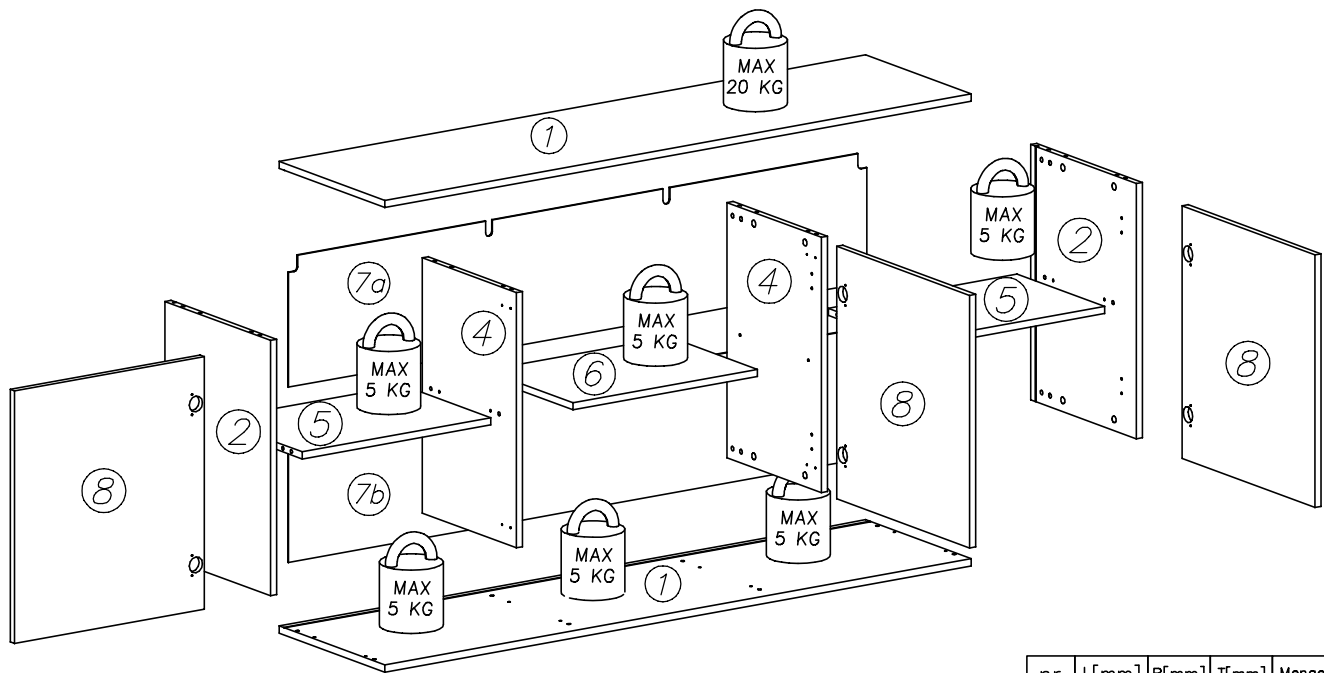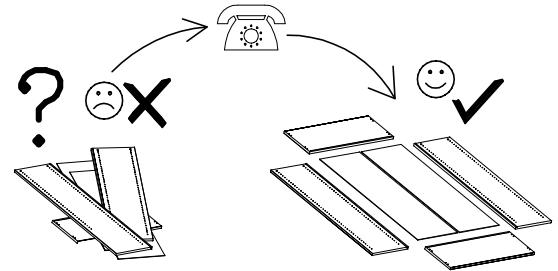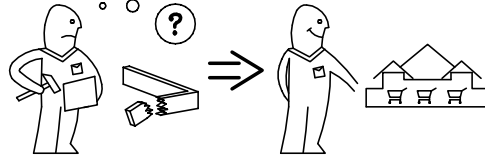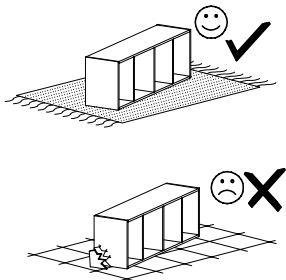

nr	L[mm]	B[mm]	T[mm]	Menge	Colli
1	1539	396	16	2	1/1
2	568	395	16	2	1/1
4	568	353	16	2	1/1
5	495	328	16	2	1/1
6	484	328	16	1	1/1
7	1518	290	3	2	1/1
8	562	498	16	3	1/1

S1
483mm x...(1)

G2
3x20 x...(22)

F2
x...(4)

L13
x...(3)

G57
3,5x16 x...(6)

C10
Z35PL x...(2)

D10
PZ35PL x...(2)

G4
4x16 x...(12)

U7
x...(4)

U8
ø10x60 x...(4)

U9R
x...(2)

U10L
x...(2)

B1
ø8x35 x...(24)

I10
ø10 x...(8)

S2
x...(8)

U9L
x...(2)

U10R
x...(2)


C4
Z350D x...(4)


K10
x...(24)

I7
x...(24)










K1
ø15x12 x...(24)


I1
x...(16)

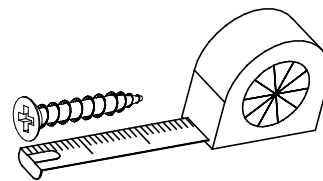D4
PZ350D x...(4)


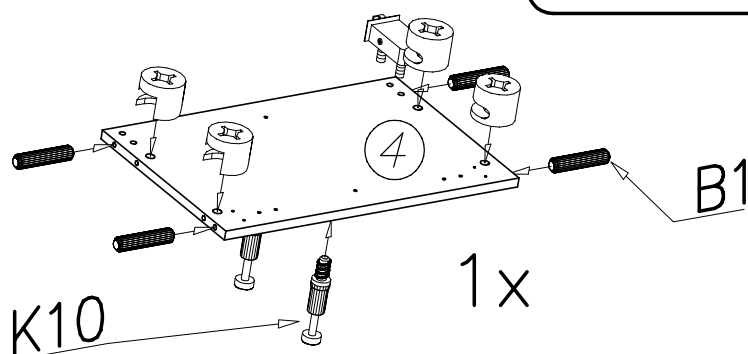
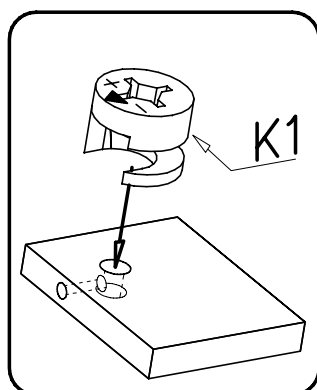
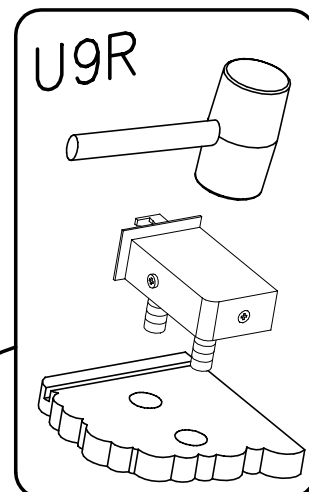
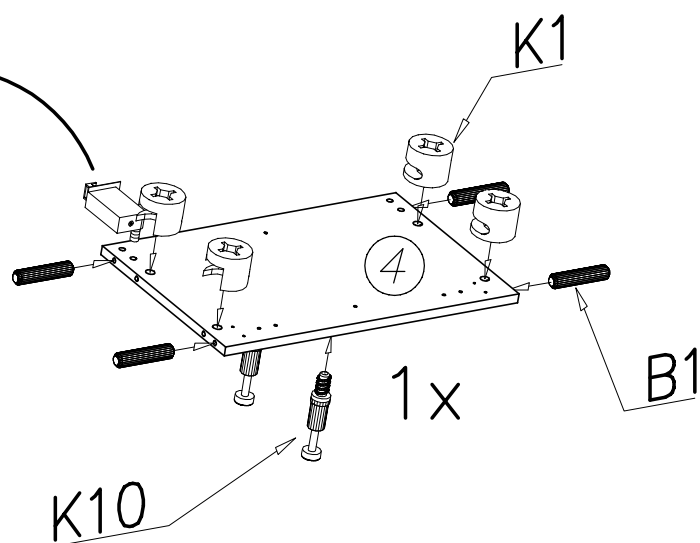
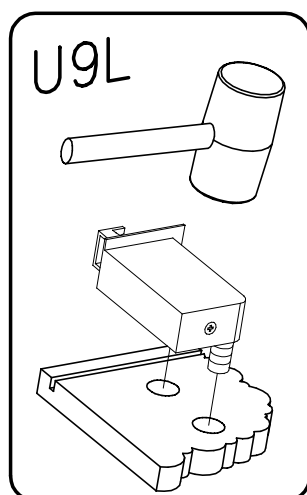
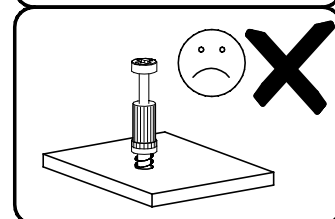
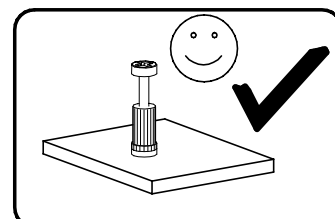
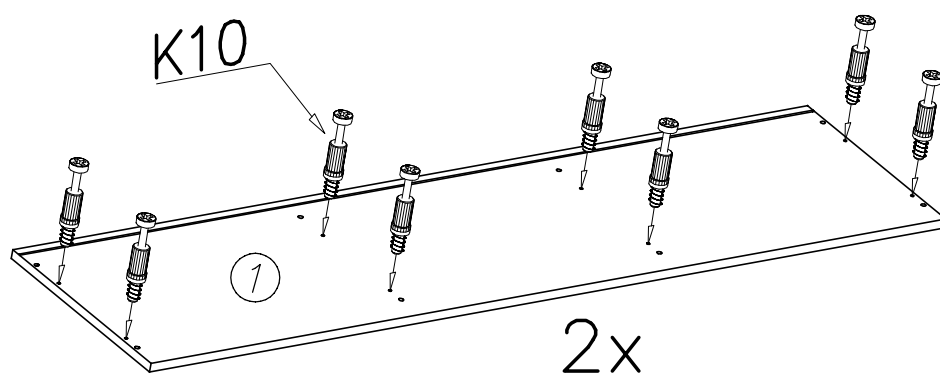



I

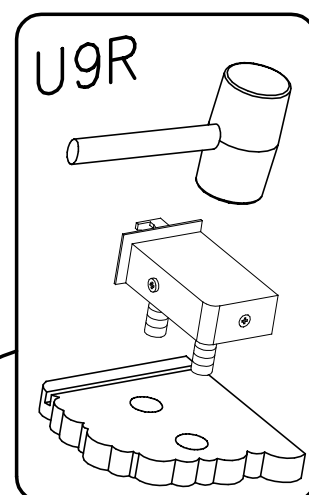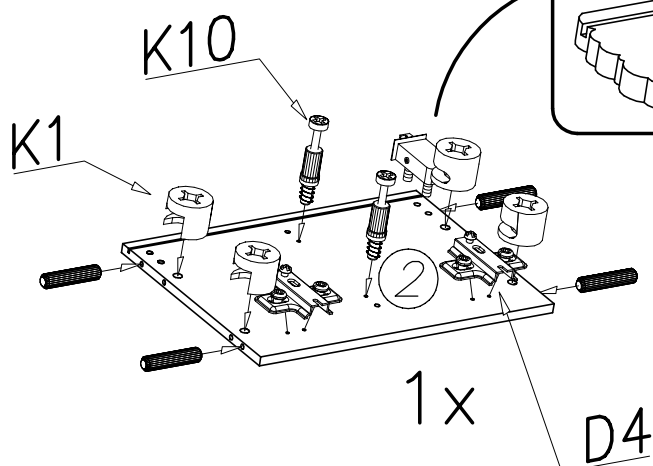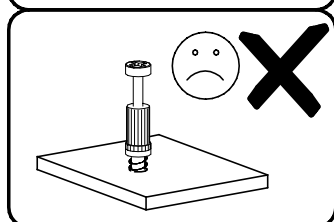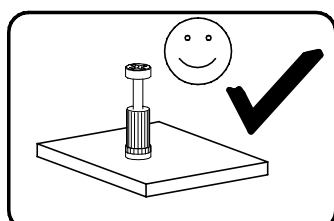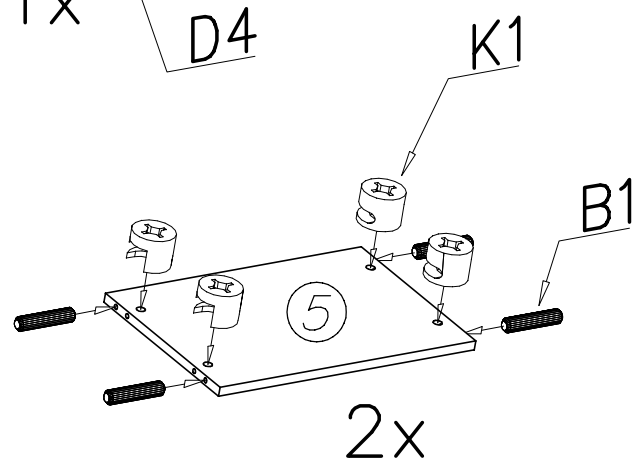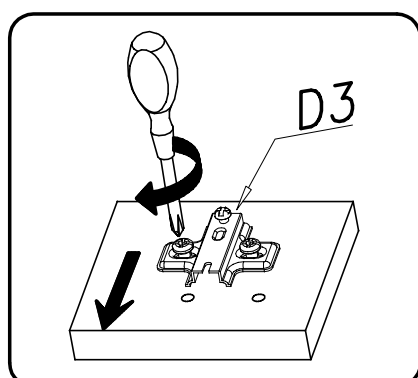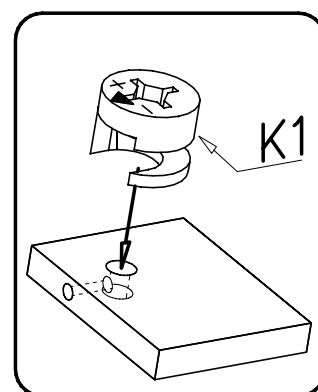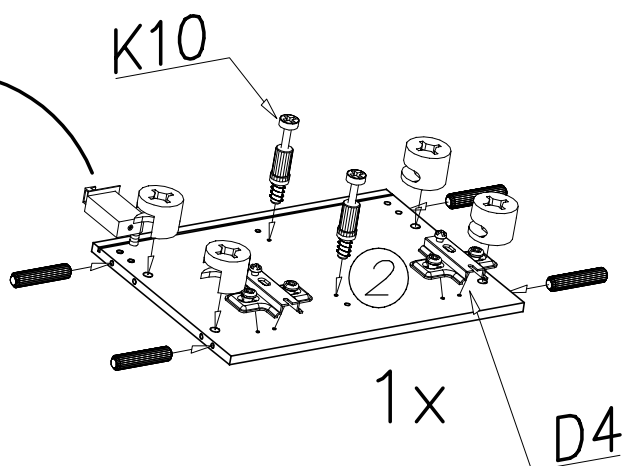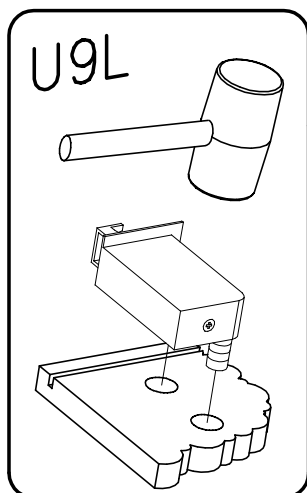




II







III

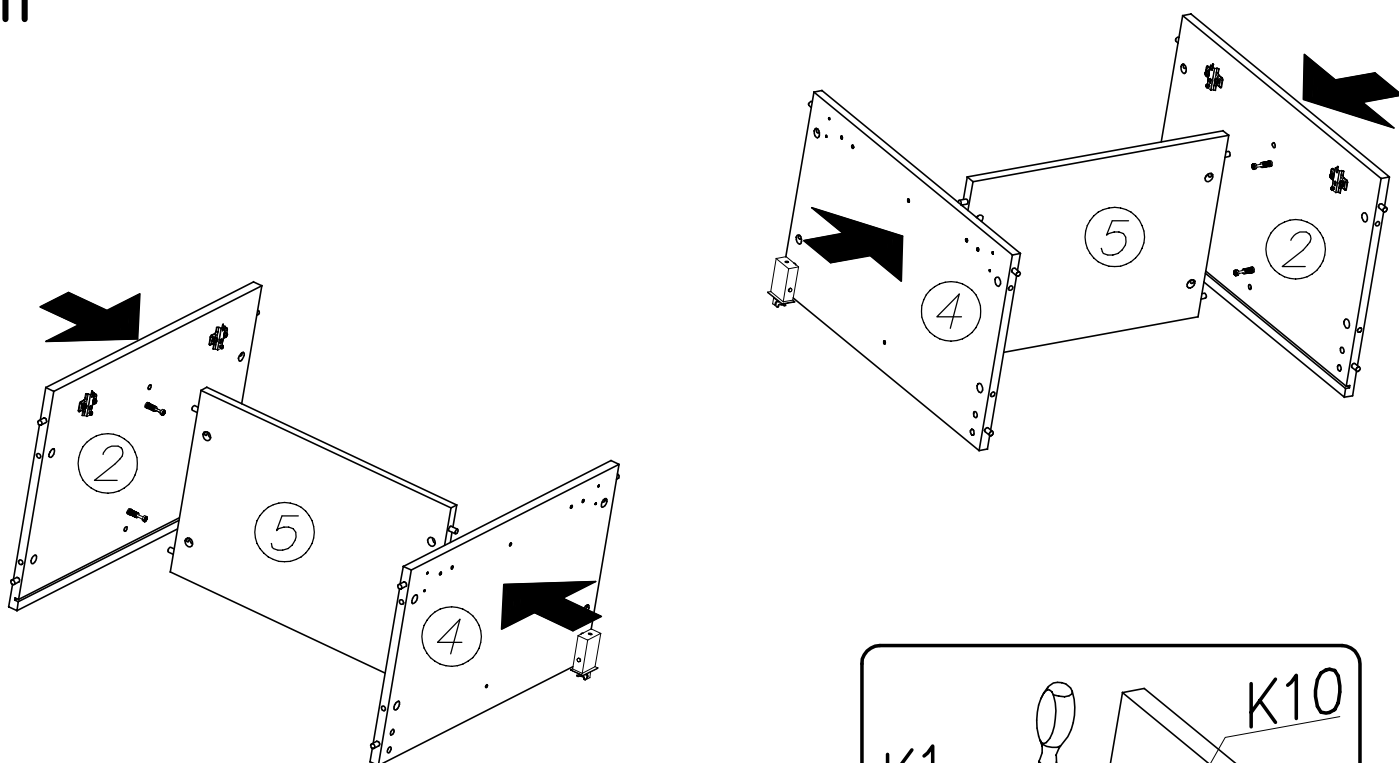


IV


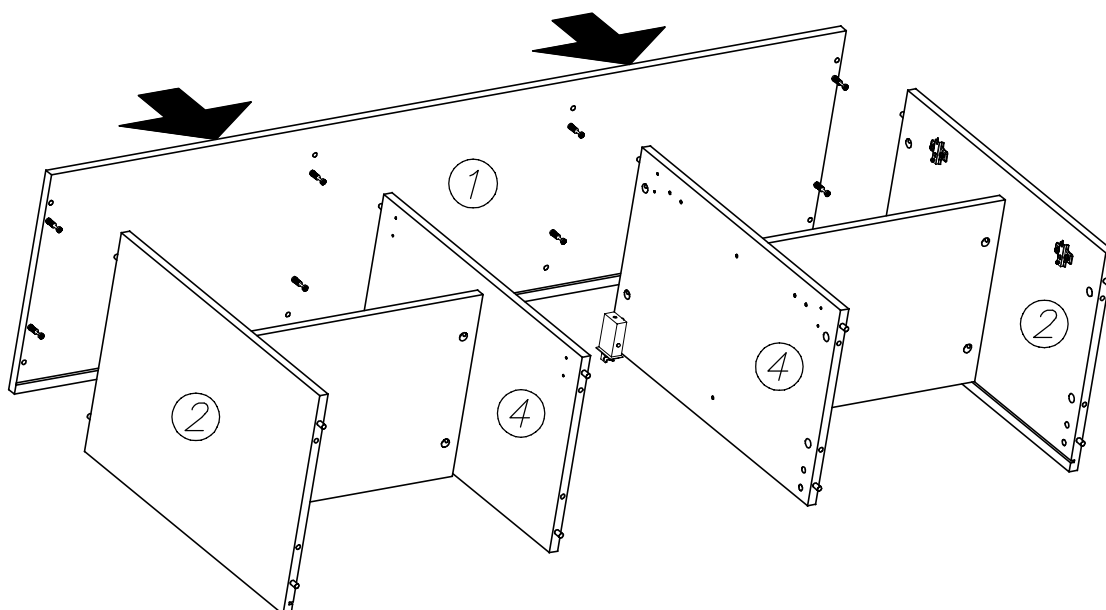





V

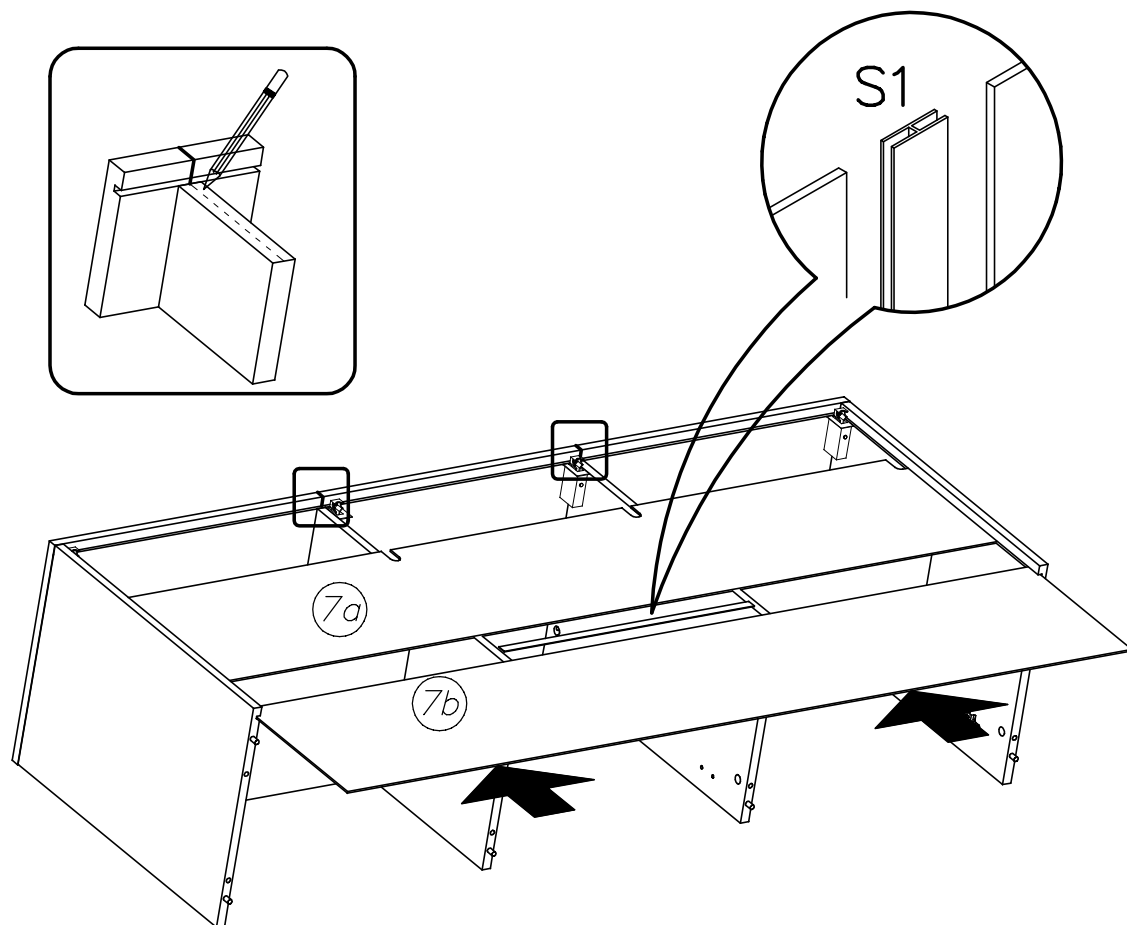


VI




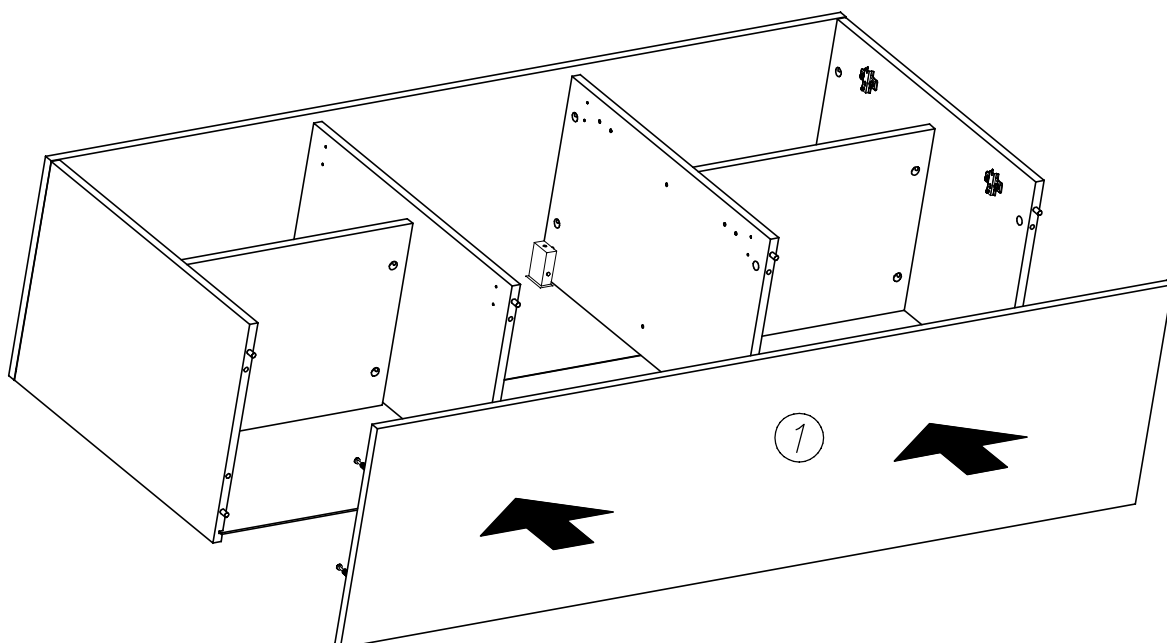
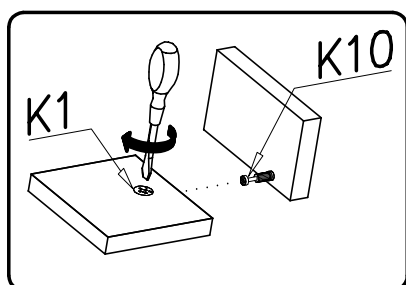





VII




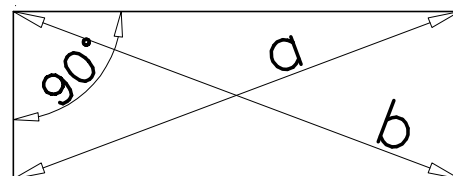



$$a=b$$

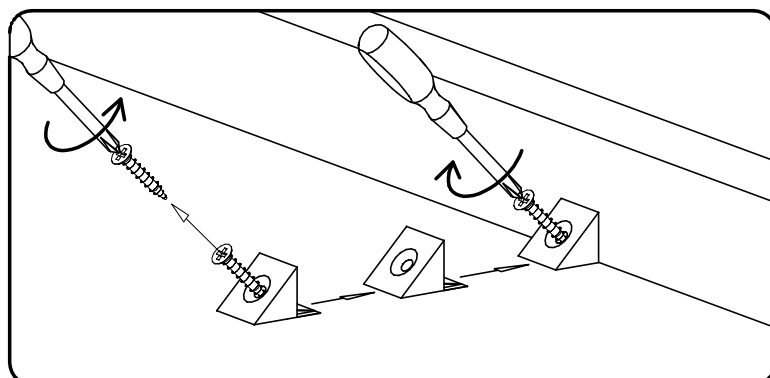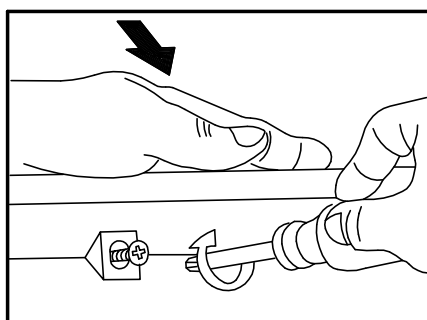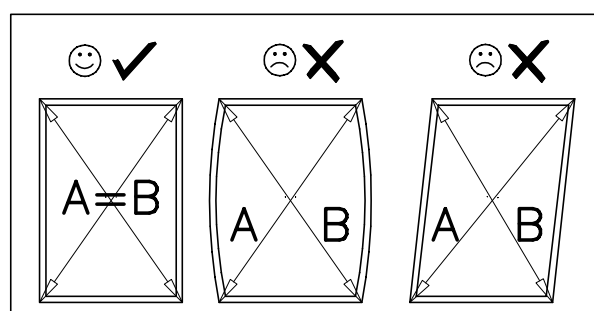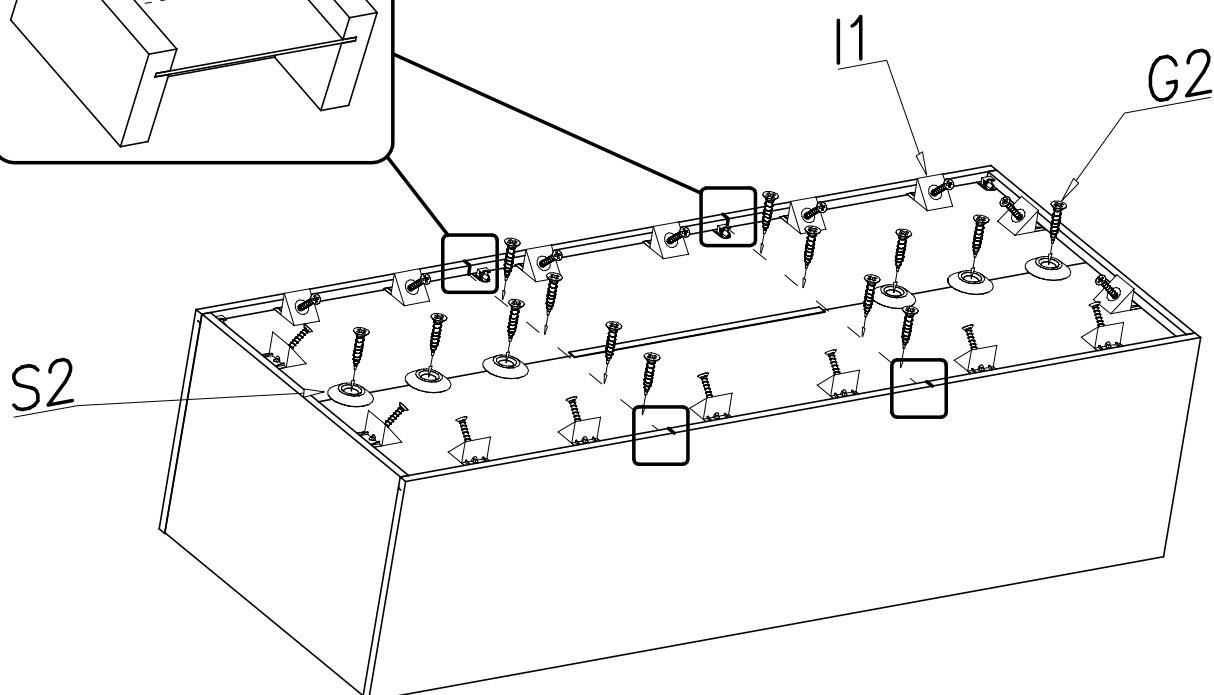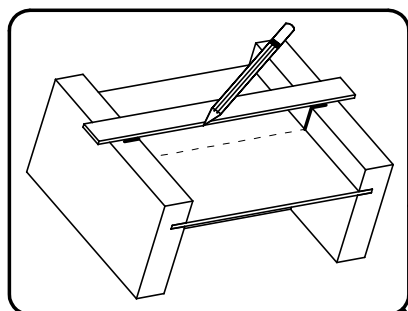










VIII

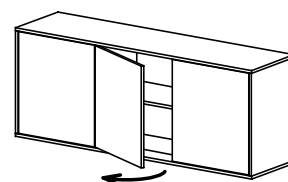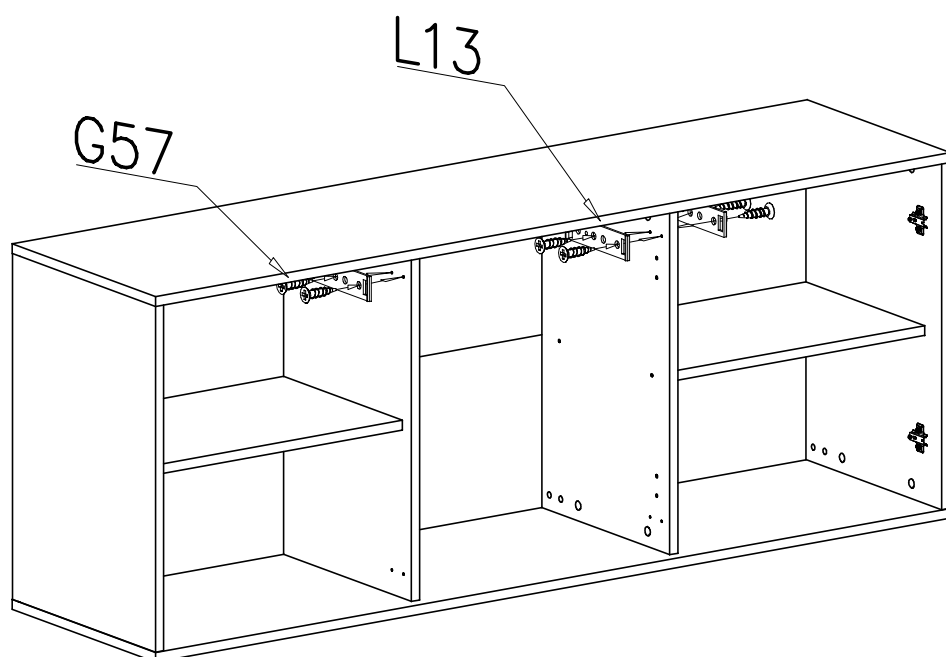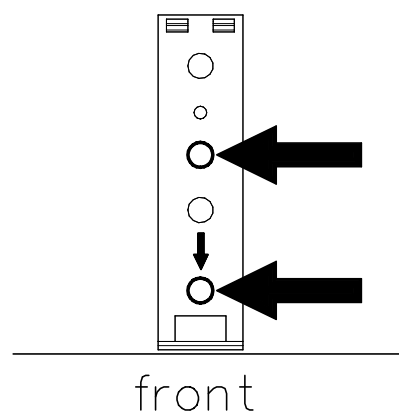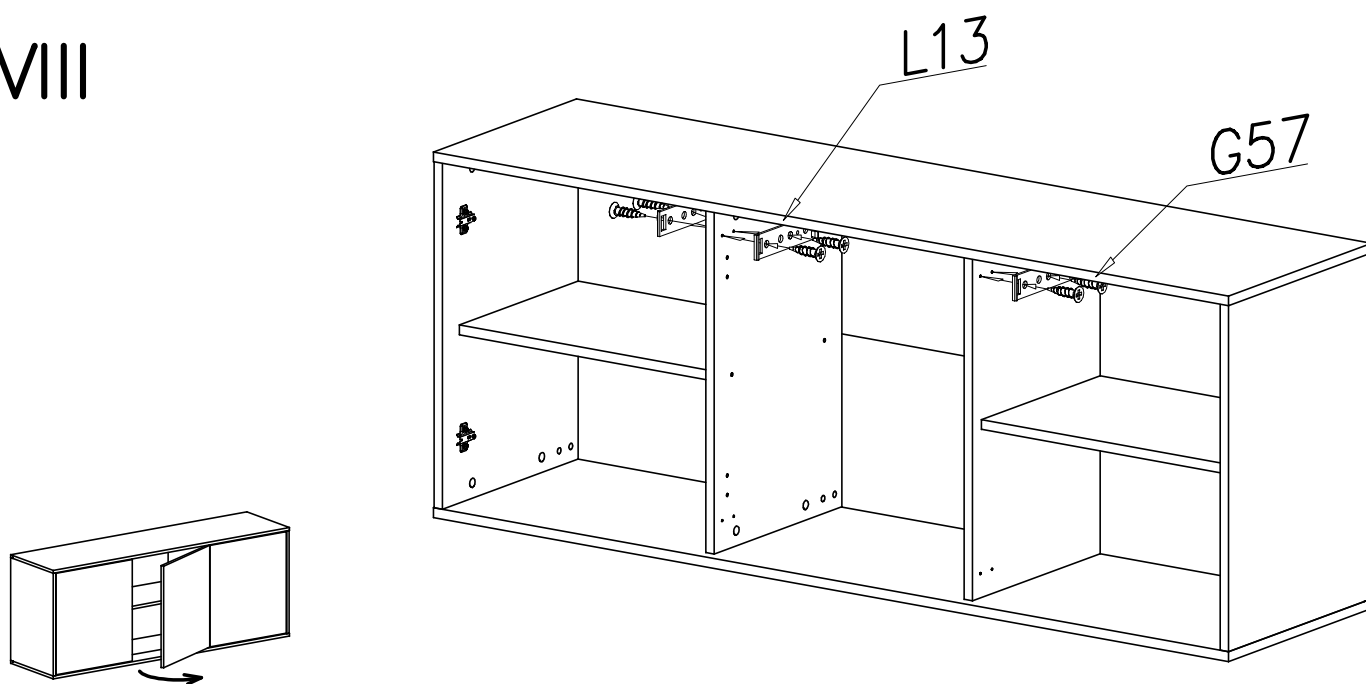





IX

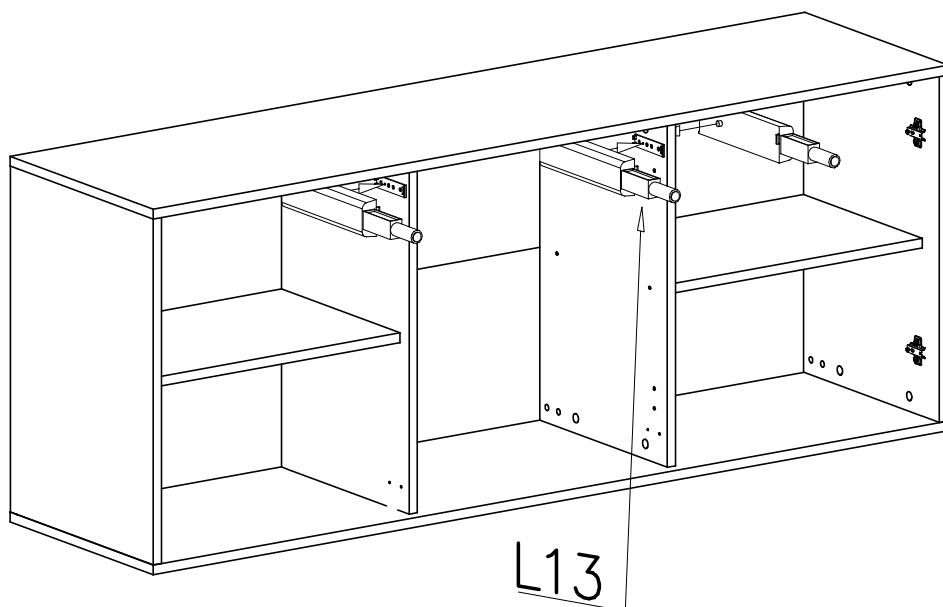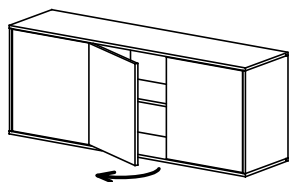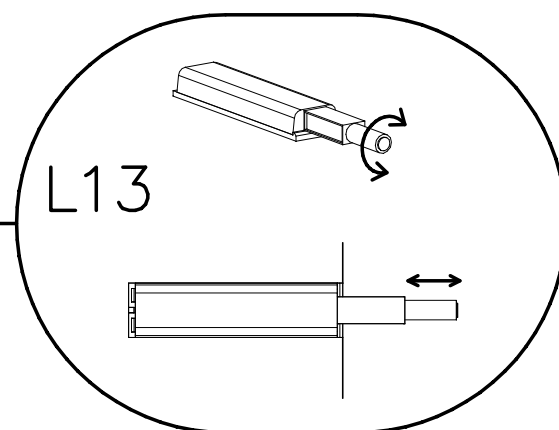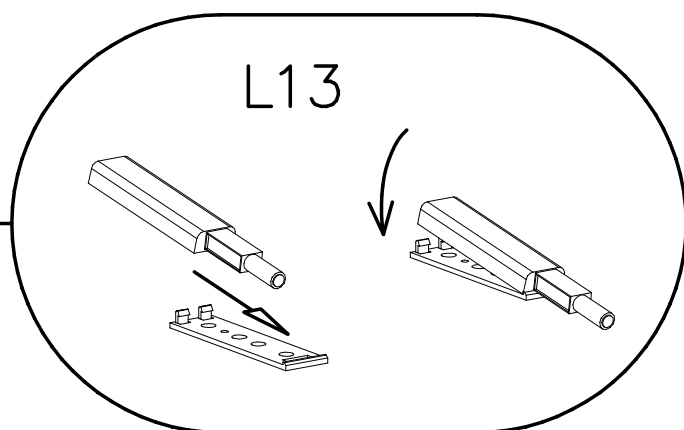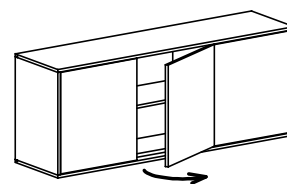
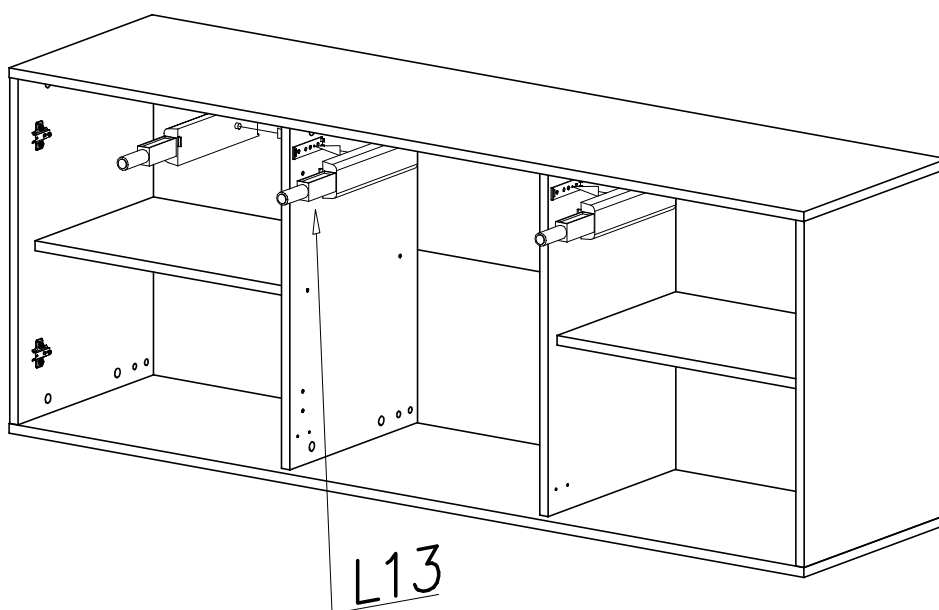






X

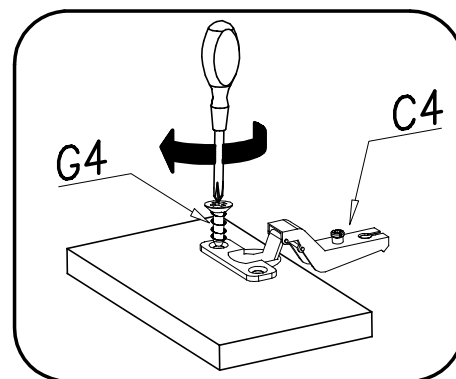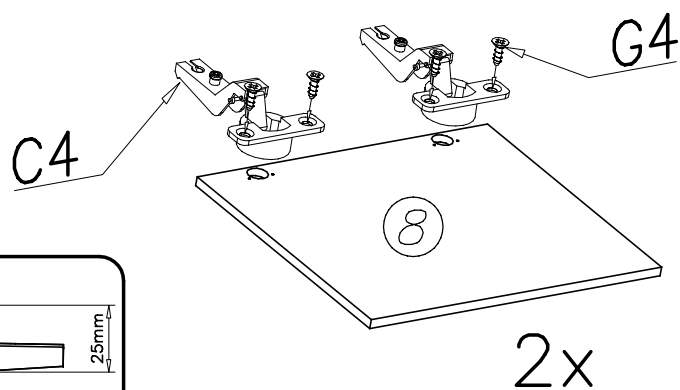


XI




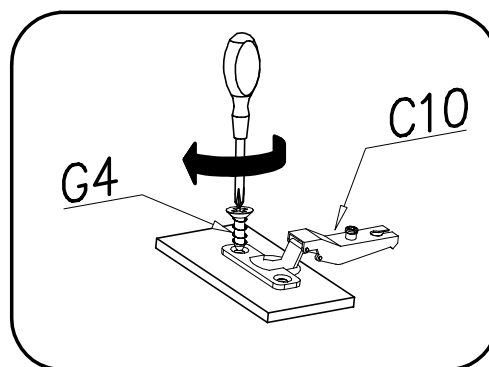
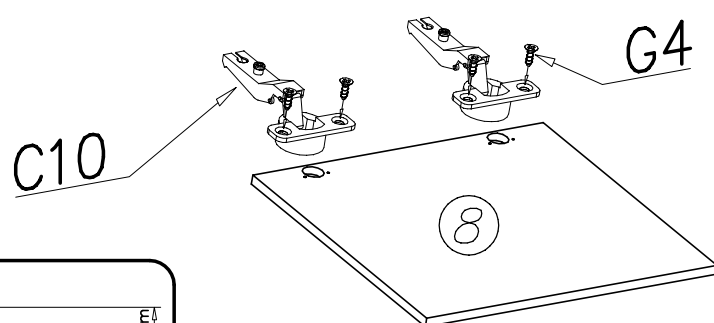


XII

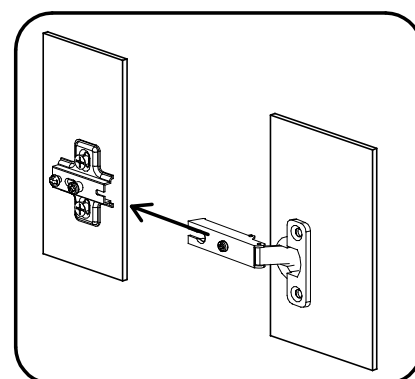
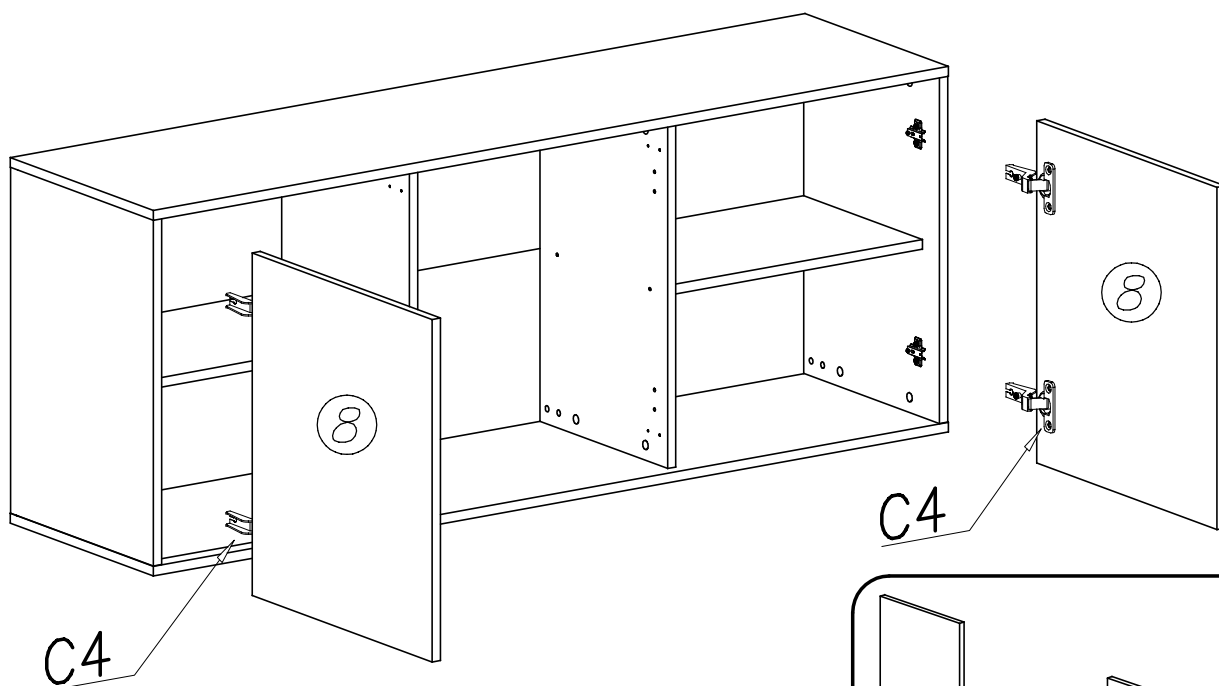











XIII

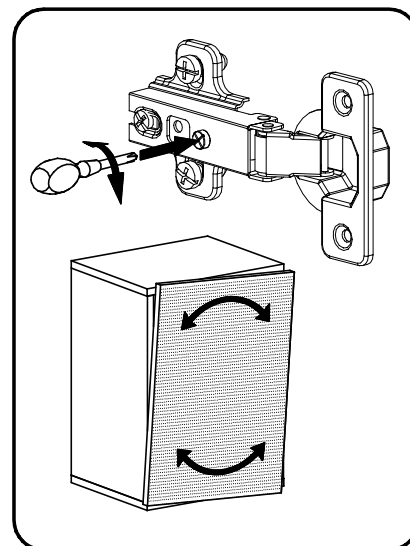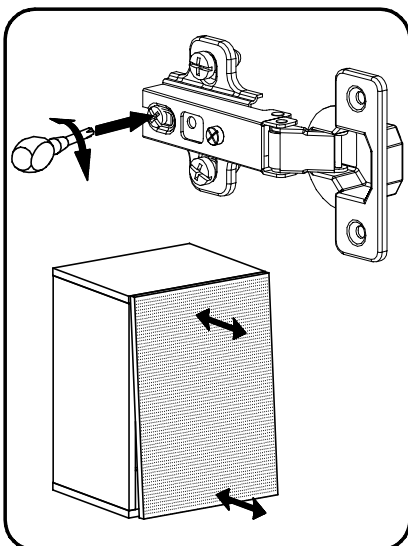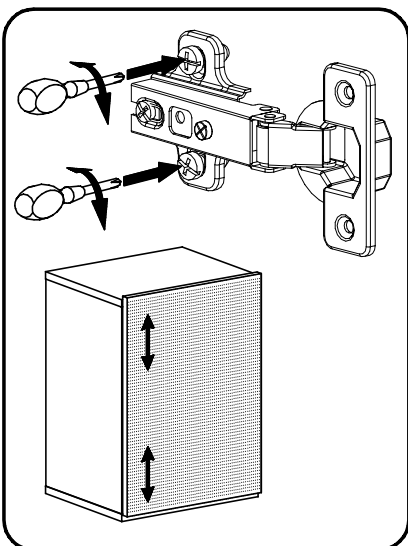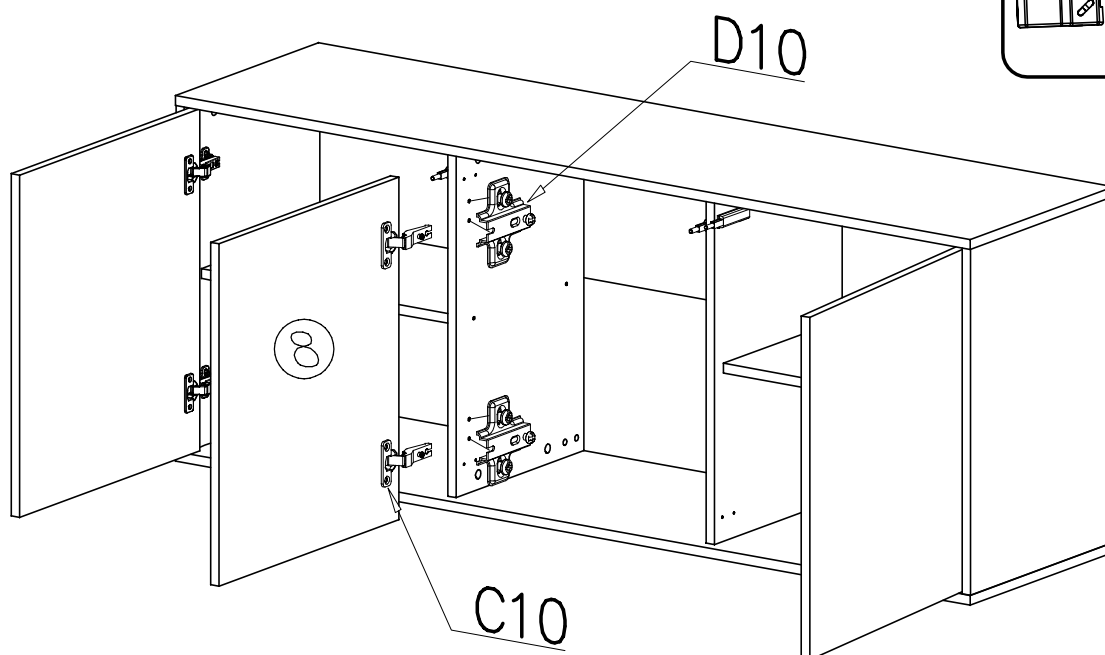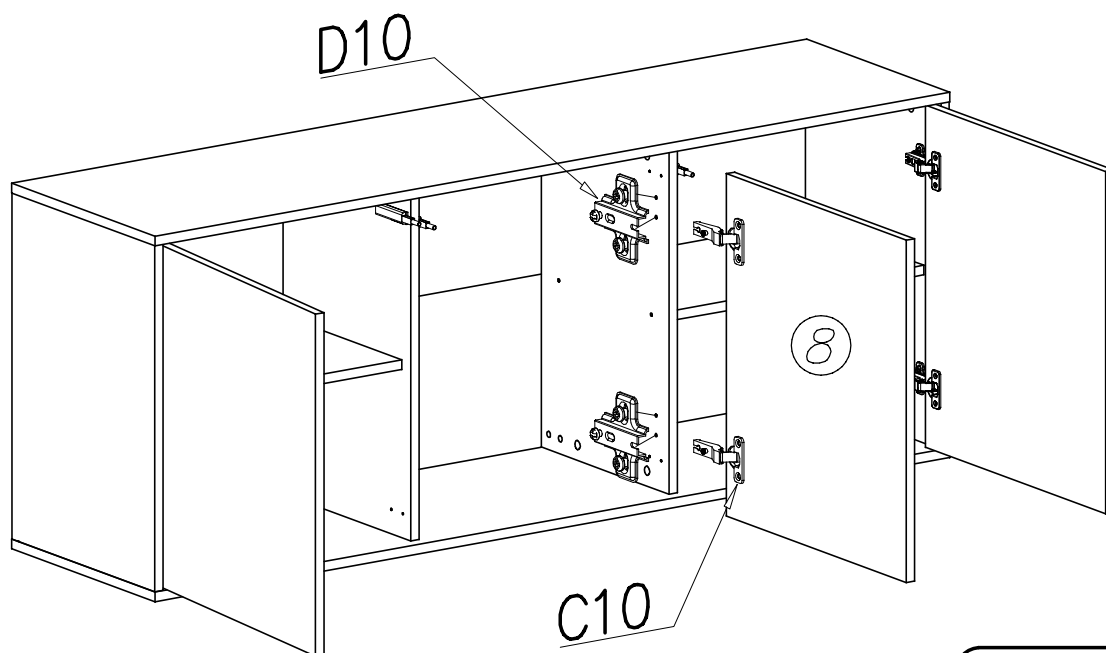


XIV

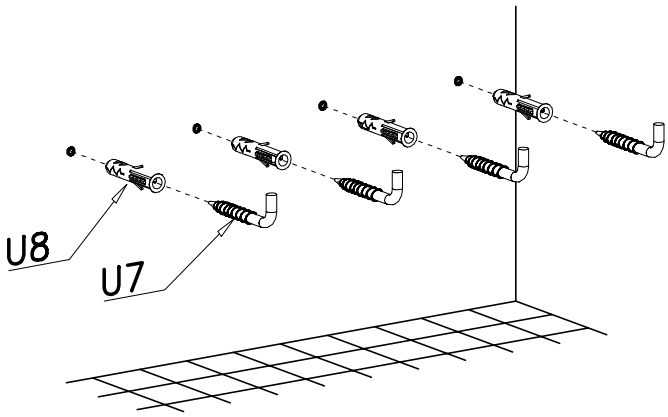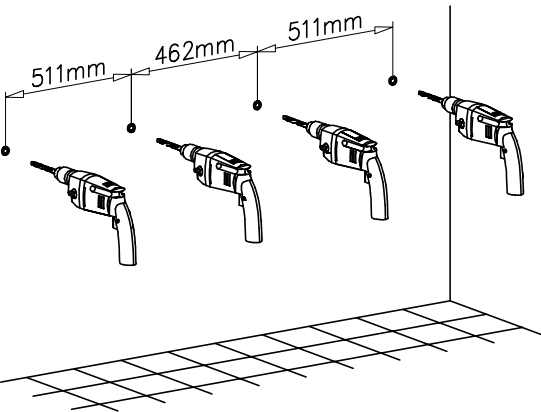

XV

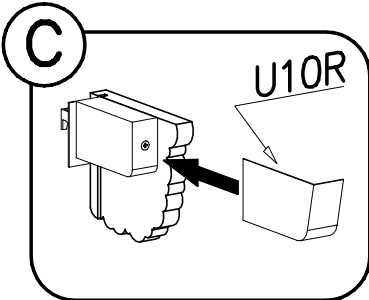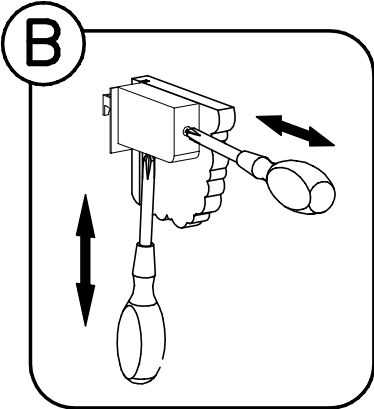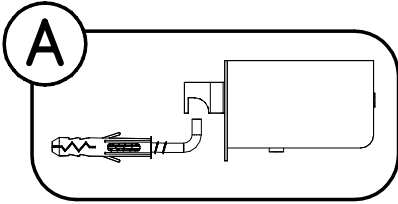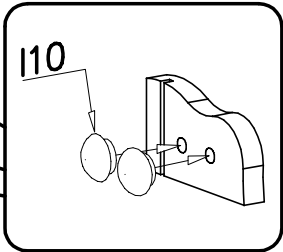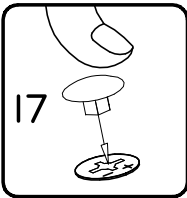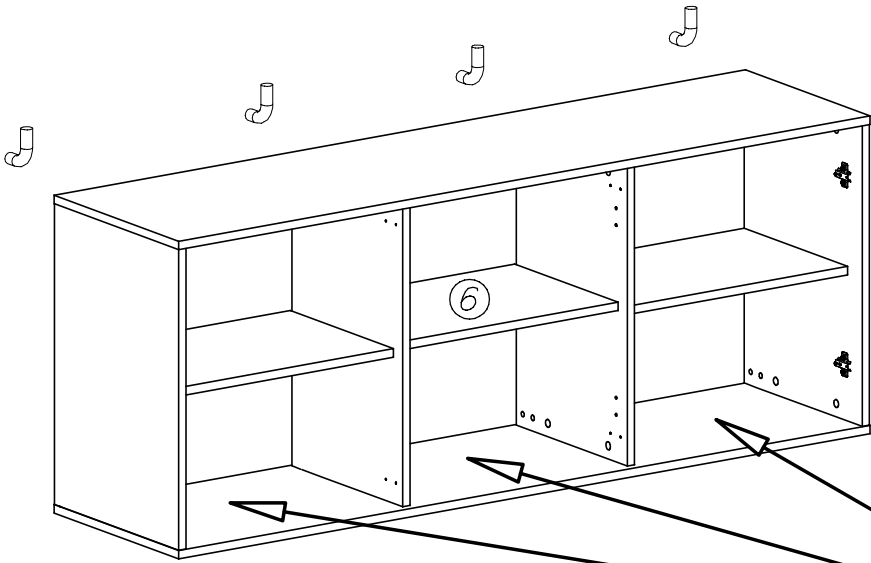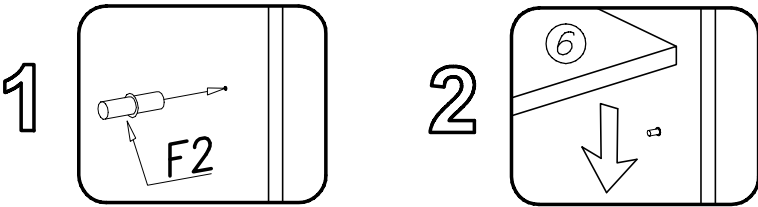

SOTO With Legs

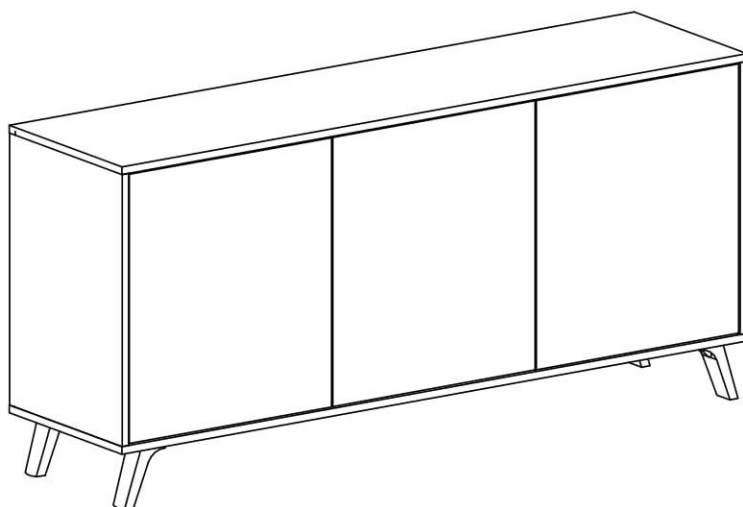

(D) **Montageanleitung**

(NL) **Handleiding voor de montage**

(TR) **Montaj talimatı**

(F) **Notice de montage**

(CZ) **Montážní návod**

(HU) **Szerelési útmutató**

(GB) **Assembly instructions**









(PL) **Instrukcja montażu**

(RU) **Инструкция по монтажу**




(IT) **Istruzioni di montaggio**

(SK) **Návod na montáž**

(RO) **Instrucțiuni de montaj**

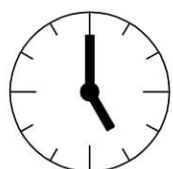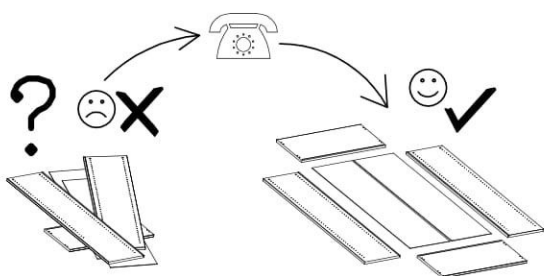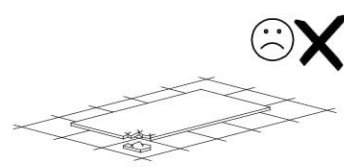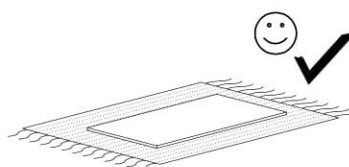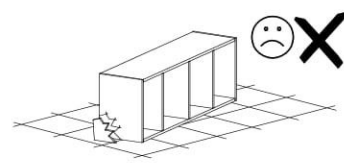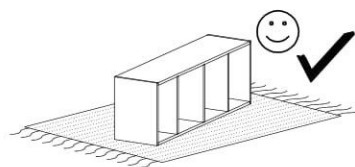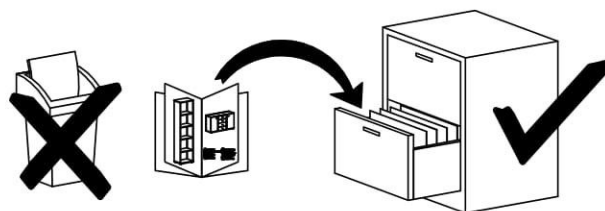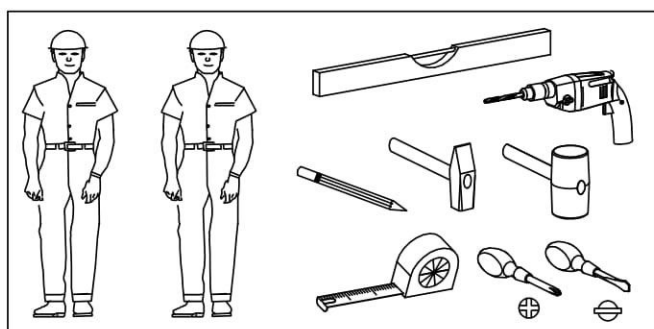


1,5h

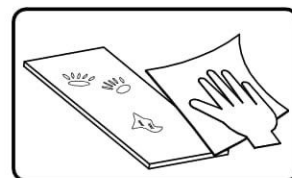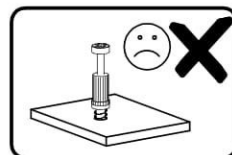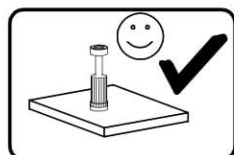




Vla

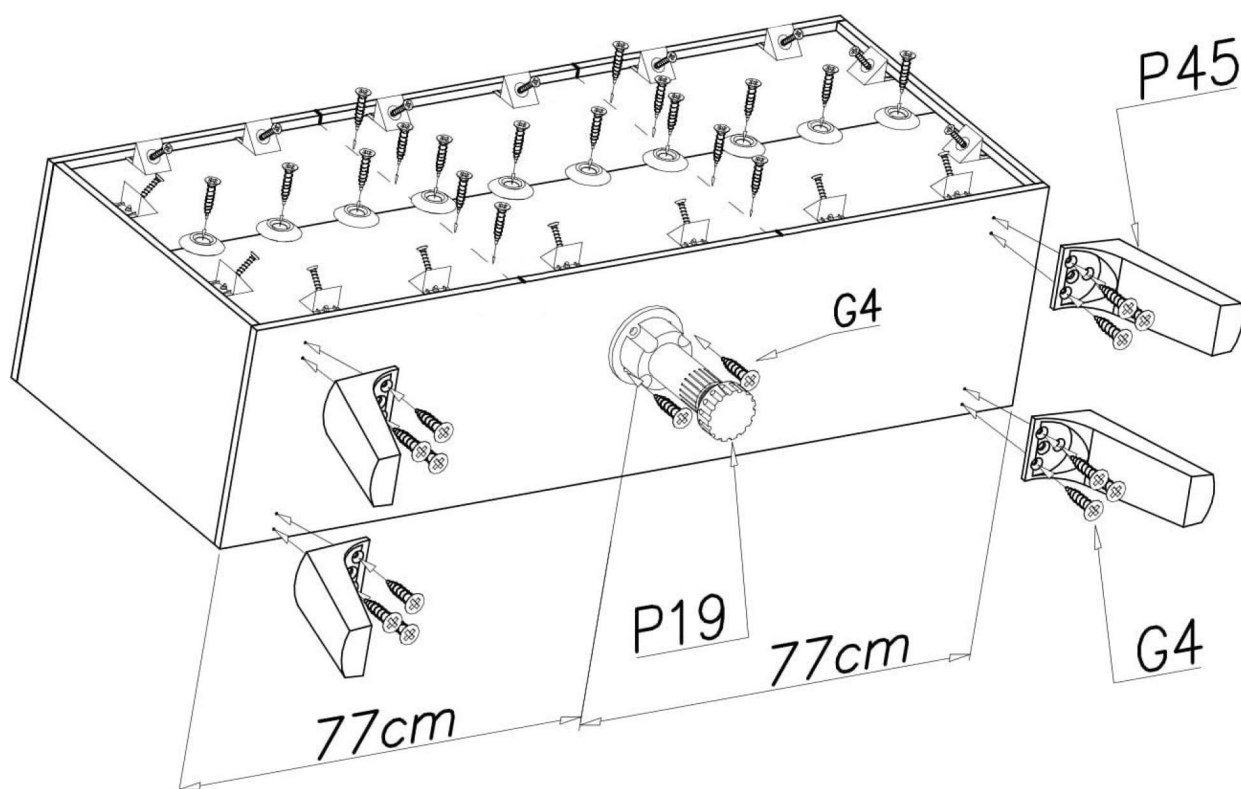


P19



x...(1)

P45

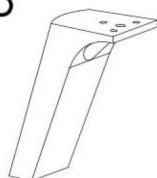

x...(4)


G4



4x16

x...(32)

P19

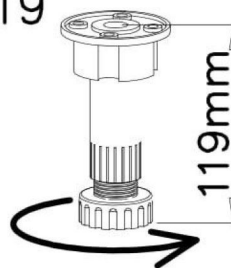

119mm