




1. Turn off the general switch

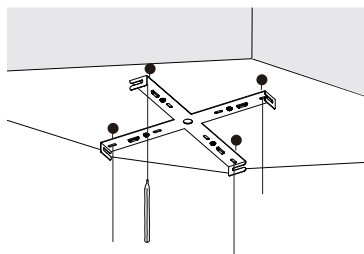


2. Mark where to drill holes

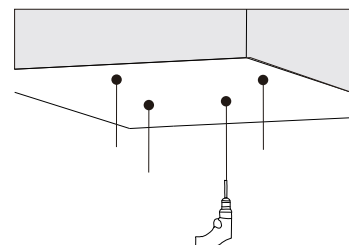


3. Drill on the marked areas

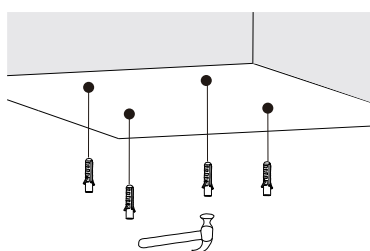


4. Apply plastic anchors

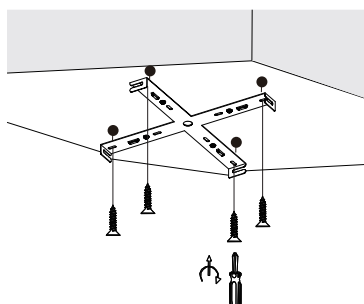

5. Apply screws

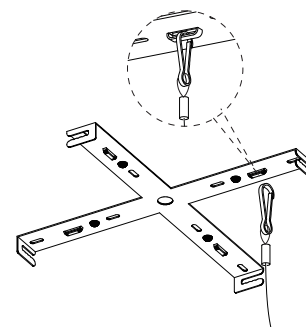


6. Make it stable

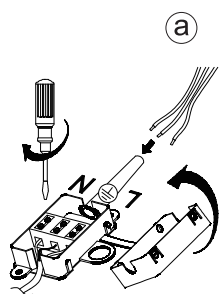


(b) CCT SWITCH
Color temperature switch

Warning:
Please not to change
color when power on.

7. Connect the wires

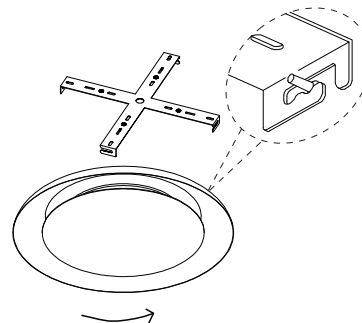

8. Apply the product by rotating

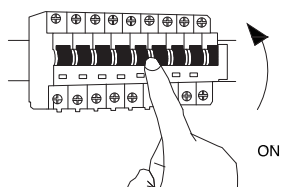

9. Turn on the general switch

