


User Manual

Specifications

Charging input: 5V = 1A
Battery capacity: 1200 mAh lithium battery
Charging time: 3h
Product size: 105x75x113mm
Product weight: 146g

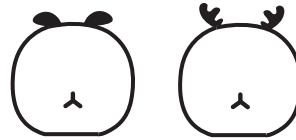


Safety Warning

1. Do not use this product in humid environment (such as bathroom). Contact with water may lead to Product failure or damage.
2. If the product accidentally enters water or other liquids, immediately turn off the power switch and let it pass. It's completely dry and then used.
3. Do not knock or smash this product. Repeated knocking may cause internal damage.
4. Do not store in high temperature and humidity or expose to the sun. If it lasts a long time No use of this product, please charge this product every 2 months.
5. Do not charge the product at a voltage exceeding the specified voltage.
6. When the product is charged, please ensure that the charging line is pulled out in time.
7. Do not throw this product into the fire to avoid the risk of explosion.
8. Do not use this product when your hands are wet.
9. Keep the product out of reach of children.
10. Please use this product at room temperature (0-40 C).
11. Do not charge the product on the surface of flammable articles such as carpets and quilts.
12. If the product cannot be charged, please replace the charging head or data line and try again.
13. If leakage occurs, do not continue to use this product, if the body accidentally connected. If you touch the liquid, please rinse it and consult your doctor.

14. If high temperature or deformation occurs during charging, please do so immediately. Stop charging.
15. This product has built-in non-replaceable lithium batteries. Do not disassemble, replace or replace them by yourself. Repair this product.

Product Structure

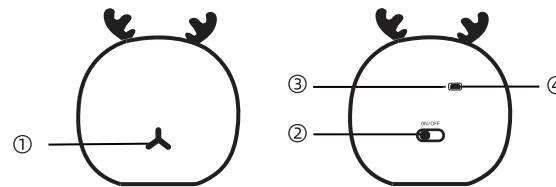

① Touch Switch (Long Press Polarless Dimming, Short Press Adjusting Color Temperature)

② Power switch

③ Charging indicator

④ USB charging port

Instructions

1. Product Charging: Insert the USB power cord into the device with the output port of the USB power supply, and the other end into the power input interface of the product. When charging, the red indicator lights up and goes out after charging.
2. Adjust the color temperature: the power switch dials to the "ON" position, and can turn on/off the light and change the color temperature according to the touch area of nose. The order is: turn on the light (positive white light) warm light natural light turn off the light, and cycle in turn.
3. Adjust brightness: press the touch area long, stop brightness adjustment immediately after loosening hands, brightness from large to small or small to large adjustment. The brightness of the lamp remains unchanged when the lamp is turned off but the power supply (the switch is not turned off) is turned on again.

How To Charge

1. Insert one end of USB charging line into mobile phone charger and the other end into micro.USB can be charged.
2. When charging, the indicator shows red light. When the battery is full, the red indicator lights out.