



Bedienungsanleitung

Kohlefilter- Matten



Instruction Manual

Charcoal filter- mats

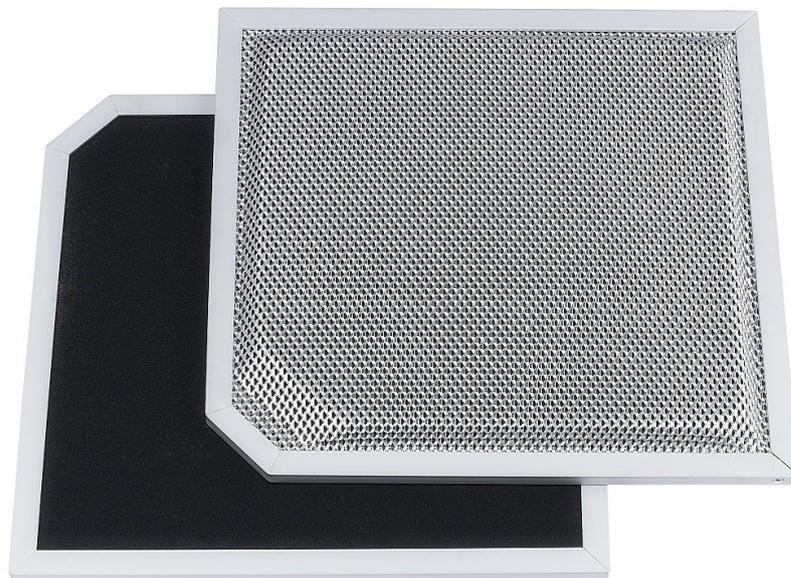


Abbildung zeigt CF120

Illustration shows CF120

Deutsch	Seite	1
Englisch	Page	6
www.pkm-online.de		

Inhalt / Index

1.Kohlefiltermatten	2
2.Geräteliste.....	5
1. Carbon filter mats.....	6
2.device list	10

Sehr geehrter Kunde! Sehr geehrte Kundin! Wir möchten Ihnen herzlich danken, dass Sie sich zum Erwerb eines Produkts aus unserem reichhaltigen Angebot entschieden haben. Lesen Sie die gesamte Bedienungsanleitung, bevor Sie das Gerät zum ersten Mal benutzen.

1.Kohlefiltermatten

Kohlefilter: **CF120**, **CF125**, **CF152**


HINWEIS:

Verwenden Sie Schutzhandschuhe!
Vor Montage Netzstecker ziehen!
Kohlefilter nur im Umluftbetrieb verwenden!



Der Kohlefilter enthält keine problematischen Schadstoffe und kann über die Restmülltonne entsorgt werden.

Schritt 1

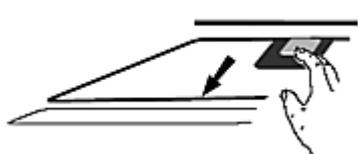


Entfernen Sie den/die Fettfilter. Die Matten werden auf dem Fettfilter befestigt, bzw. an den Seiten des Motors eingeschoben.


Schritt 2

Sollte sich die Netzanschlussdose innerhalb der Kaminverkleidung befinden, müssen Sie evtl. die Kaminverkleidung abbauen, um an die Anschlussdose heran zu kommen.

Schritt 3

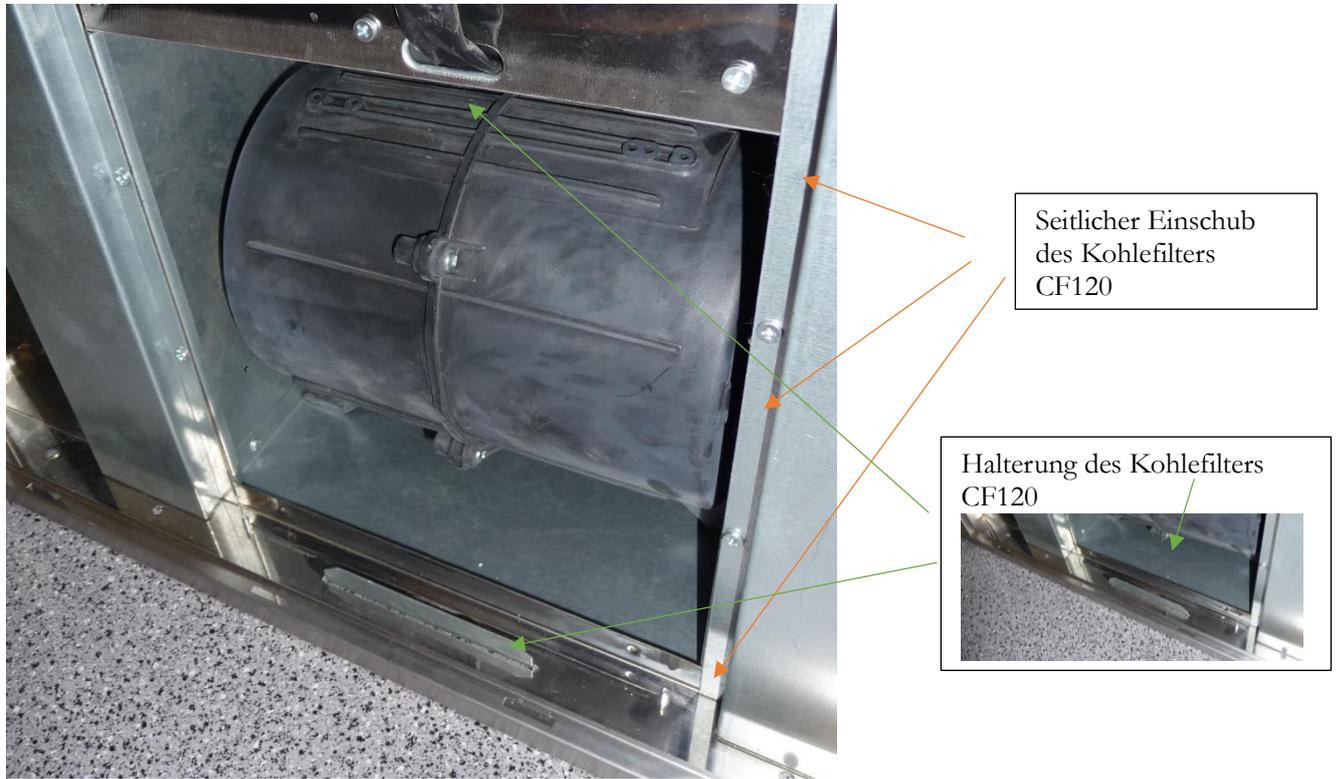


CF120

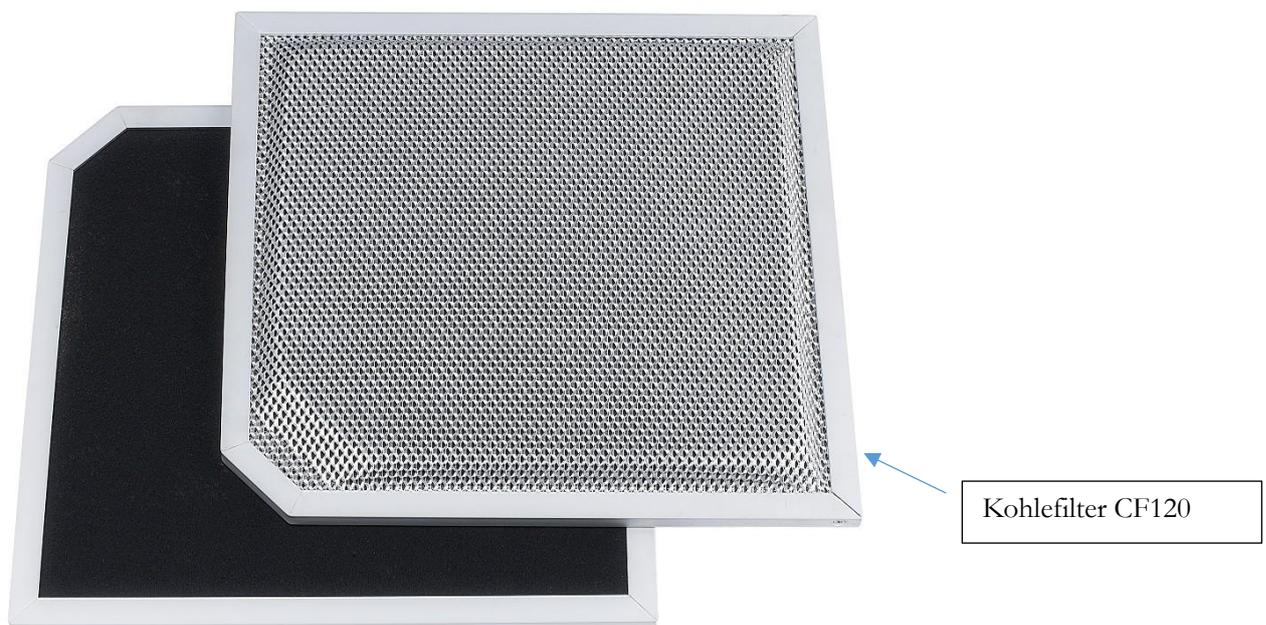


Dieser eckige Kohlefilter wird seitlich vor dem Motor eingeschoben. Sie sehen hier an beiden Innenseiten der Haube zwei Vorrichtungen, die zur Befestigung dienen.

CF152

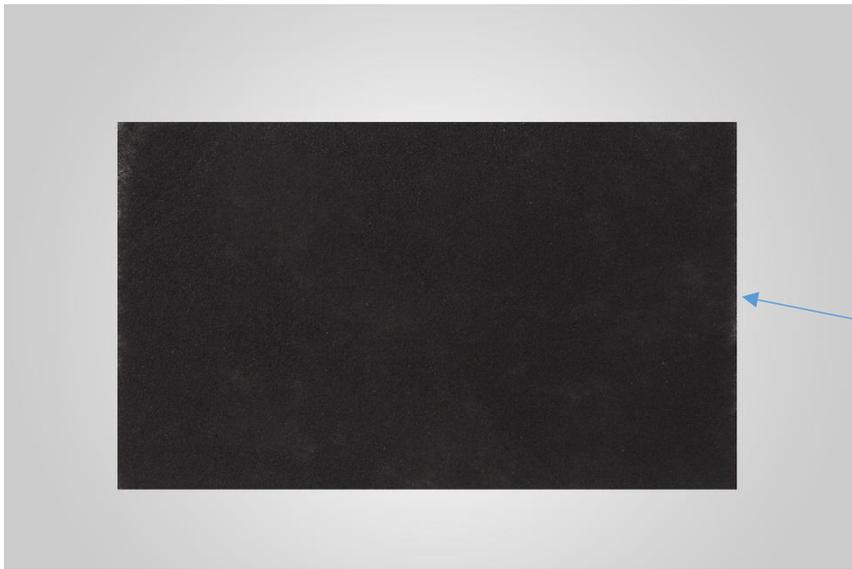

Kohlefiltermatte
CF152

CF125

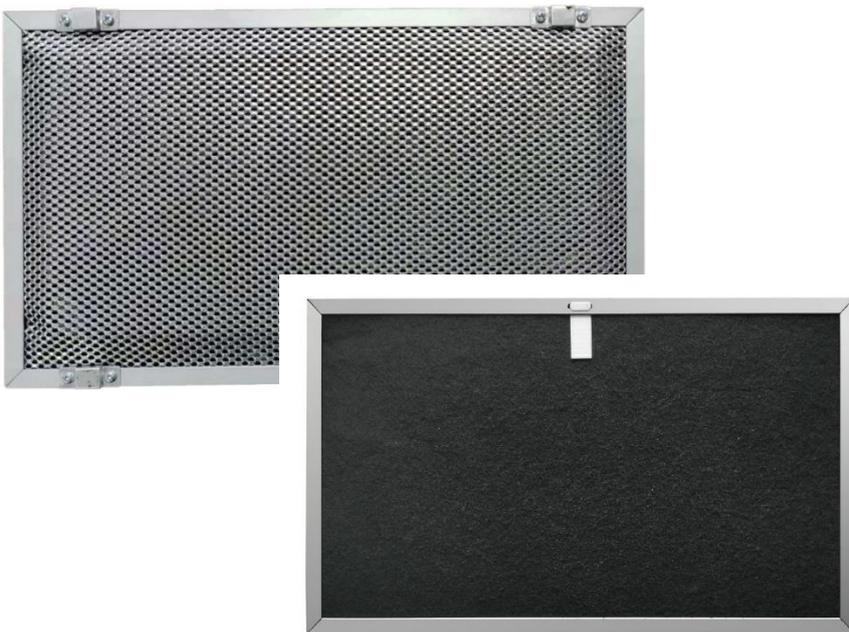

Kohlefiltermatte
CF125

Die Kohlefiltermatte wird auf den Fettfilter draufgelegt. Anschließend den Metallfettfilter wie gewohnt an die Dunstabzugshaube anbringen!



Schritt4

Befestigen Sie die Metall/Alu-Filter wieder.

Tipp: Wechseln Sie die Kohlefilter (je nach Benutzung der Haube) alle drei bis sechs Monate. Reinigen Sie die Fettfilter regelmäßig für einen einwandfreien Betrieb des Motors)



Bestellen Sie die Kohlefilter unter

www.pkm-online.de

⚠️ WARNUNG! Befestigen Sie den Kohlefilter sicher und ordnungsgemäß. Ansonsten kann sich der Kohlefilter lockern und somit Gefahren verursachen.

HINWEIS! Die Abzugsleistung verringert sich bei eingebauten Kohlefiltern. Kohlefilter sind nicht Teil des Lieferumfangs.

2. Geräteliste

P1-60BBTX	50711	1x CF125 (50761)	1x AH12 Alum-Schwarz pulverbesch
UBH5000H2	50608	1 x CF152 (50032)	1 x MF60 Acryl (50565)
KHU-602-H	50585	2 x CF152 (50032)	1 x MF60 Acryl (50565)

Dear Customer, Thank you for purchasing one of our many products. Please read the entire manual before using the device for the first time.

1. Carbon filter mats

Carbon filter: **CF120, , CF125, CF152**

HINWEIS:

Use protective gloves!


Disconnect the mains plug before installation!

Only use the charcoal filter in recirculation mode!



The carbon filter does not contain any problematic pollutants and can be disposed of in the residual waste garbage can.

Step 1

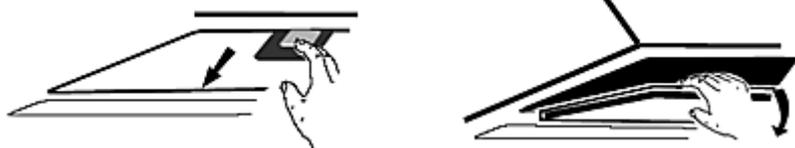


Remove the grease filter(s). The mats are attached to the grease filter or pushed into the sides of the motor.


Step 2

If the mains connection socket is located inside the fireplace cladding, you may have to remove the fireplace cladding to access the connection socket.

Step 3

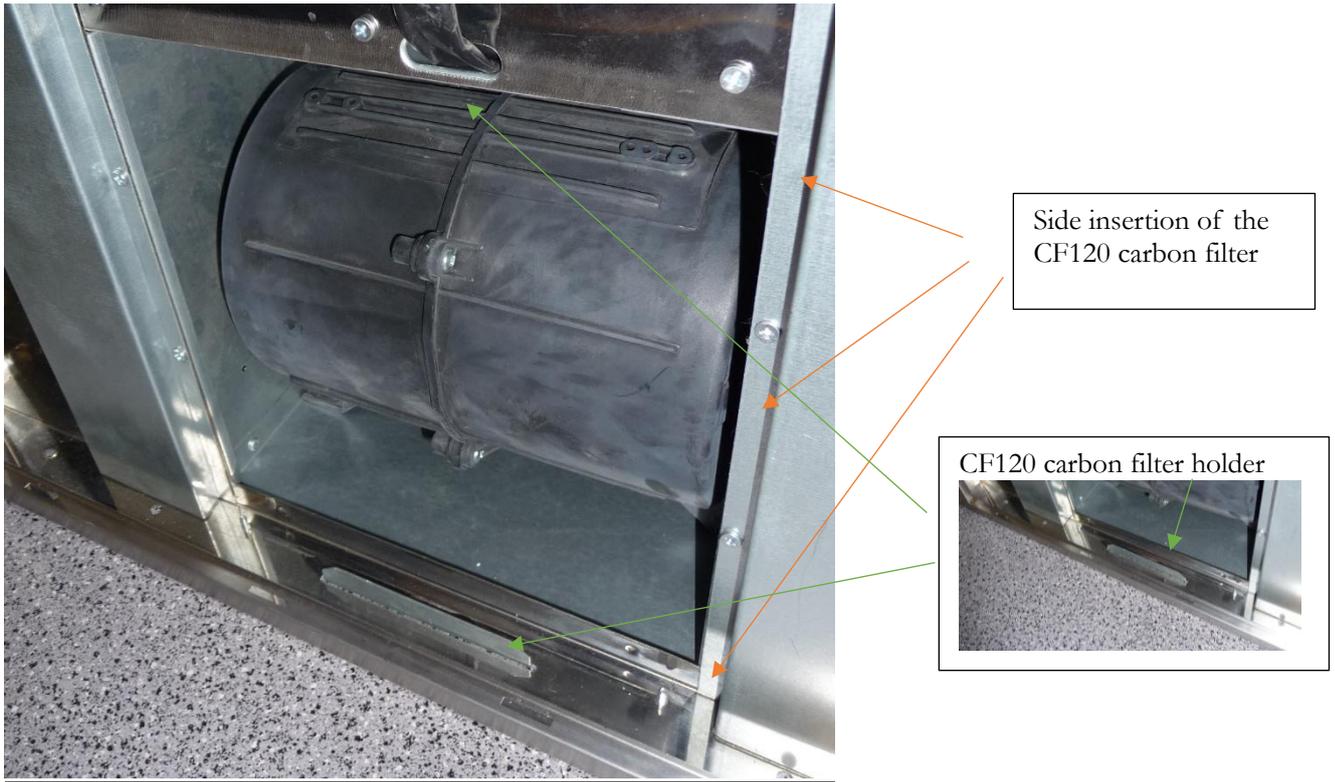


CF120

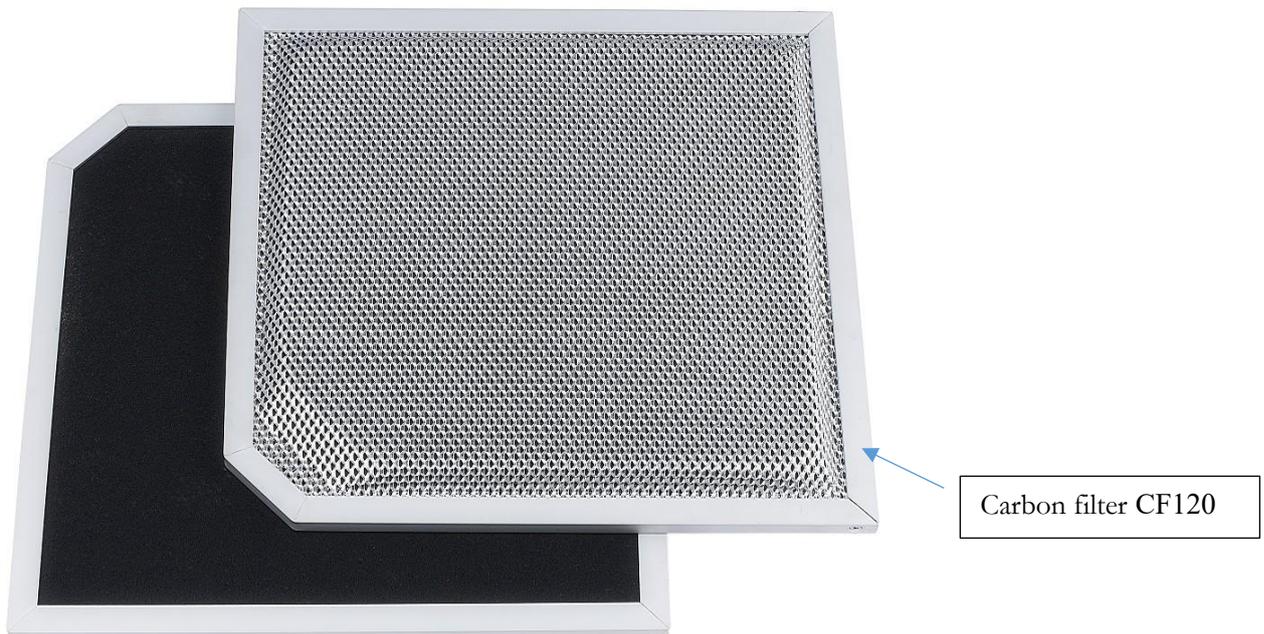


This square carbon filter is inserted laterally in front of the motor. Here you can see two fixtures on the inside of the hood that are used to attach it.

CF152

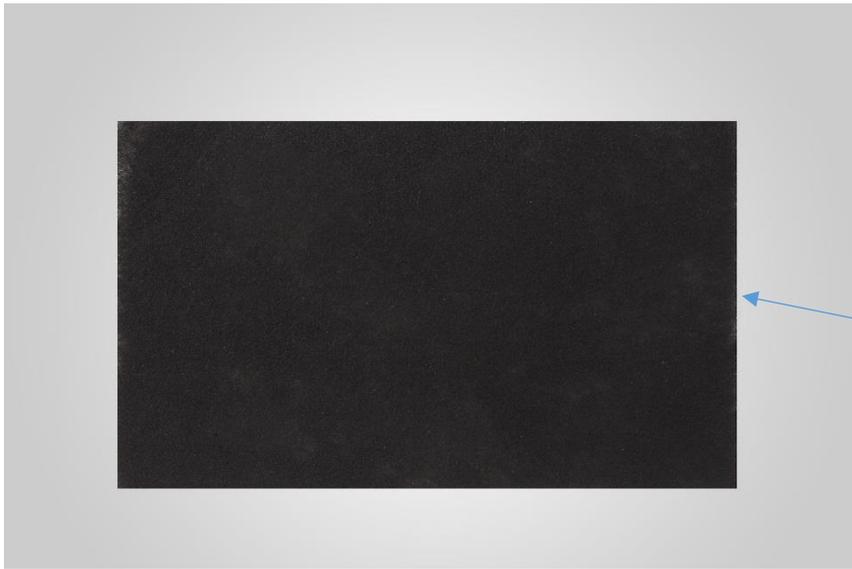


Carbon filter mat
CF152

CF125

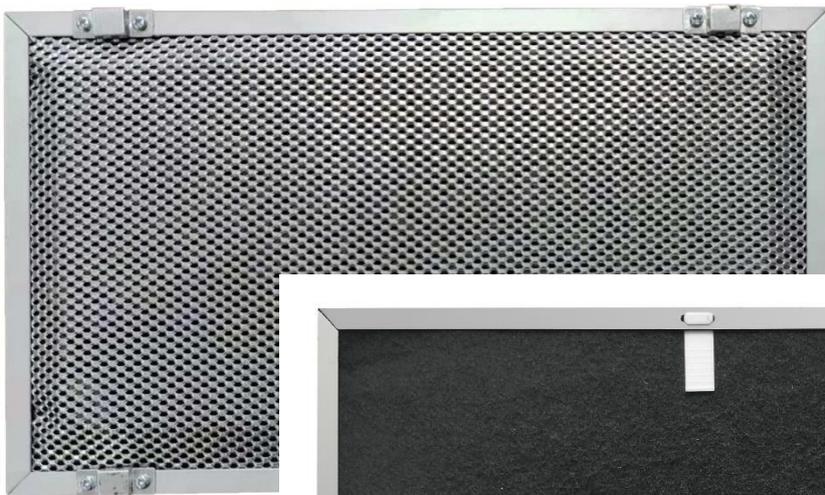

Carbon filter mat
CF125

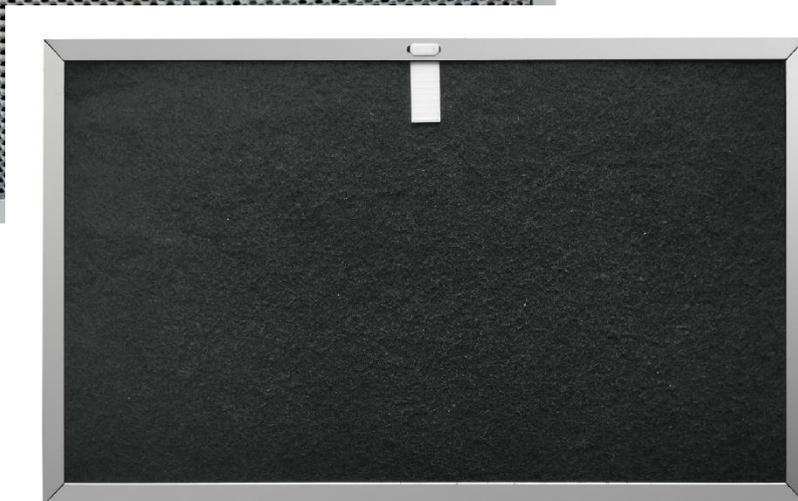

The carbon filter mat is placed on top of the grease filter. Then attach the metal grease filter to the



extractor hood as usual!

Step 4

Reattach the metal/aluminum filters.

Tip: Change the charcoal filters (depending on how the hood is used) every three to six months. Clean the grease filters regularly to ensure proper operation of the motor)



Order the carbon filters at

www.pkm-online.de

⚠ WARNING! Attach the charcoal filter securely and properly. Otherwise, the charcoal filter may become loose and cause danger.

NOTE! The extraction capacity is reduced if carbon filters are installed. Carbon filters are not included in the scope of delivery.

2.device list

P1-60BBTX	50711	1x CF125 (50761)	1x AH12 Aluminum-black powder-coated
UBH5000H2	50608	1 x CF152 (50032)	1 x MF60 acrylic (50565)
KHU-602-H	50585	2 x CF152 (50032)	1 x MF60 acrylic (50565)

Änderungen vorbehalten	Subject to alterations
Stand	Updated
26.09.2024	09/26/2024

© PKM GmbH & Co. KG, Neuer Wall 2, 47441 Moers